


EP中力

F8 Series CPD40/45/50 Electric Four-wheel Forklift **Parts Manual**

8系列四支点4.0/4.5/5.0吨
全交流平衡重电动叉车

零件目录

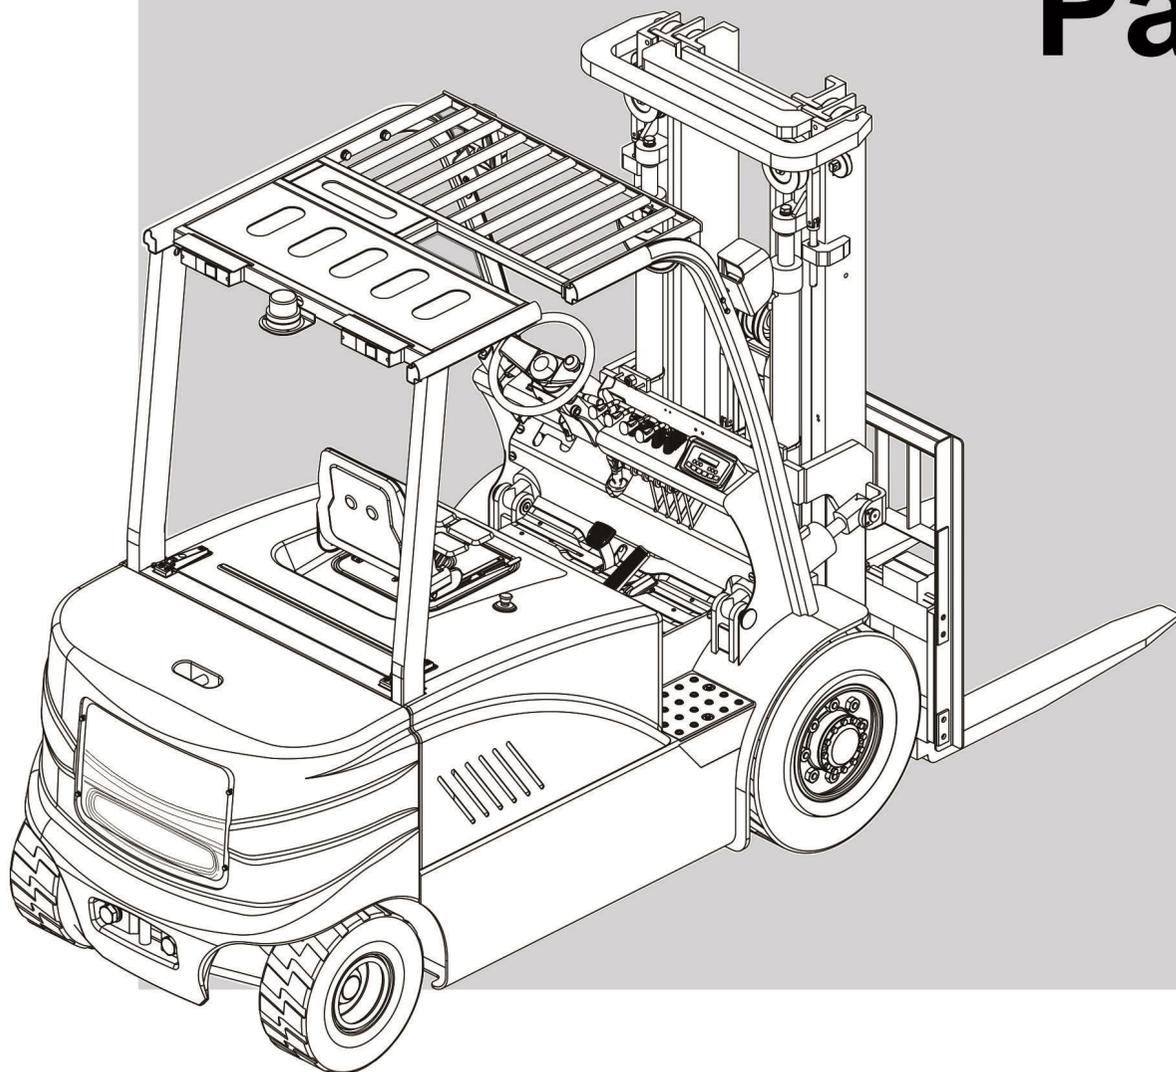

CE
CE CERTIFICATE

Part No.50800002451

V1 12/2018

PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handing of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your electric forklift . If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval . We cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received. Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

PART LIST

The **Index**, describes the item on the figure you are looking at. The **Part No.** is a numerical description of the item and the part ordering number. The **Part Name** is a description of the part number in alphabetical form. The **No.** is the quantity used on the machine.

EP EQUIPMENT CO.,LTD.

Address: XIAQUAN,DIPU,ANJI,ZHEJIANG,CHINA

Tel:86-571-28035626/28035657

Fax:86-571-28035616

Net:www.ep-ep.com

Email:epparts@ep-ep.com

ALL RIGHT RESERVED COPYRIGHT

PM3845 10.22

零件订购说明

怎么样订购

当您订购的时候，您需要提供叉车零件的编号，数量，型号和序列号。提供这些信息能够保证您的订购更加的高效。

因为您的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理您的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎么样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

当您需要订购零件时，请到销售给您电动叉车的经销商那里订购。如果经销商有必要从公司订购零件，他能为您提供快捷的服务。根据您的订购信息，零件和它对应的操作说明会一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司认可的。我们不会对没有经过授权但退还过来的零件负责。

如果您有一些零件一定要退还，请联系您的经销商。若经销商确认零件可以退还，则其会安排授权要退还的零件。

技术修改

当叉车技术上有修改时，这本手册的修正页会重新发行。当您拿到这些修正页时，您一定要立即把它们插入到您的零件手册中。若没有及时的更新您的零件手册，则可能会导致您订购、维护等方面的错误。

零件清单

Index 描述的是在插图上，您想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Part Name** 是用文字的形式描述。**No.**代表的是零件在叉车上使用的数量。

浙江中力机械有限公司

地址：浙江省安吉县递铺镇霞泉村中力园区

电话：86-571-28027600/28035663

传真：86-571-28035616

网址：www.ep-ep.com

邮箱：eparts@ep-ep.com

版权归本公司所有

PM3845 10.22

HOW TO READ PARTS MANUAL

怎么读取零件明目录

Tip 1:

A: The part of Index 10 is chosen by different tongue of the same series type.

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
-------------	------------------	-------------------	-----------	----------------------	--------------

9	0000-000539-00	Flatwasher Φ24 平垫	3		
10	3218-130000-00	Counter Weight 平衡重	1		CPD18TV
10	3220-130000-00	Counter Weight 平衡重	1		CPD20TV
10	3216-130000-00	Counter Weight 平衡重	1		CPD16TV
10	3215-130000-00	Counter Weight 平衡重	1		CPD15TV
10	3213-130000-00	Counter Weight 平衡重	1		CPD13TV
11	1220-150008-00	Screw 螺钉	2		

A ⇒

B: The part of Index 7 is Optional.

KIT	3115-WHK-0A02	Kit for slider 滑块修理包	1		
7	3218-800001-10	Fork 货叉	1		100*40*920
7	3218-800001-20	Fork 货叉	1		100*40*1070
7	3218-800001-30	Fork 货叉	1		100*40*1150
7	3218-800001-40	Fork 货叉	1		100*40*1200
8	3218-800002-00	Pin assembly 提拨销总成	2		

B ⇒

C: The number of Index 40 is chosen by the actual requirements.

39	3218-600006-00	Shock Absorber 减震垫	3		
40	3218-332002-00	Collar 旋转套筒	Req		

C ⇒

D: The part of Index 34 is cancelled because of the design perfect , and there is an new part which is make the use more perfect.

33	3218-330001-A0	Cushion 靠垫	1		
34	01 3218-330005-A0	Switch 指尖触动开关	4		Cancelled
	02 CK11-56003-00	JC100 Switch 拇指开关	4		
35	0000-000277-00	Bolt M8×25 螺栓	2		

D ⇒

E: The part of Index 19 has an Applicability, because it's our policy to constantly improve our products.

E-1: Record by time

- 053011 : Ending on May 30, 2011.

053011- : Beginning on May 30, 2011.

E →

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
18	0000-000277-00	Bolt M8×25 螺栓	3		
19	01 3218-113000-00	Gas Spring 气弹簧后安装板	1	-053011	
	02 3218-113000-0A	Gas Spring 气弹簧后安装板	1	053011-	
20	3218-110007-00	Shock Absorber 地板减震垫	4		

E-2: Record by serial number

-S2016344 : Ending at S2016344

S2016345- : Starting at S2016345


F →

7	01	2125-410004-	Cap 导向套	1	-S2016344	
	02	2125-410004-	Cap 导向套	1	S2016345-	
8		0000-000084-	Ring Wiper 防尘圈	1		
9		0000-000370-	O-ring O型密封圈	1		

There are three types of serial number:


1) 1 (LETTER)+7 (NUMBERS)

Applied Date: Up to February 1, 2015

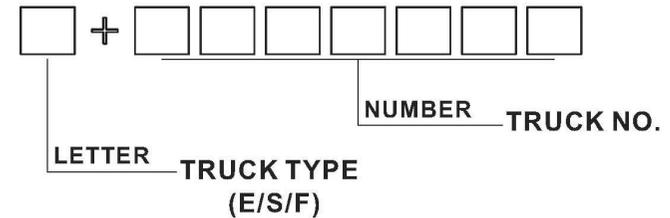


2) 1 (LETTER)+ 8 (NUMBERS)

Applied Date: From February 1, 2015 to June 1, 2015

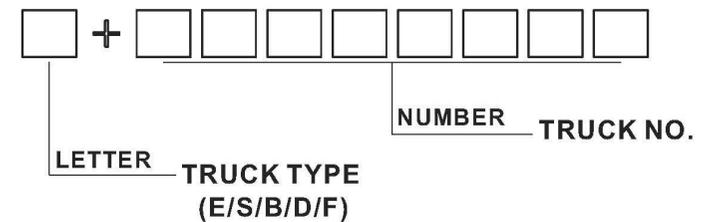

3) 1 (NUMBER)+ 8 (NUMBERS)

Applied Date: From June 1, 2015

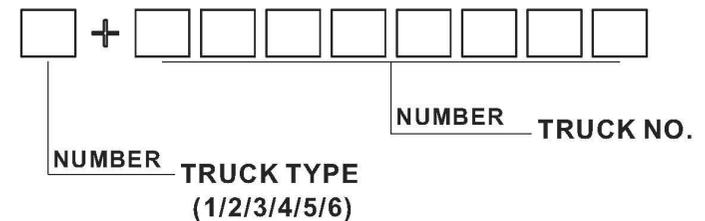

要点 1:

A: 同系车型中，序列 10 根据不同吨位进行选择。

Index	Part No.	Part Name	No.	Applied Date	Remark
序号	零件编号	零件名称	数量	适用日期	备注

9	0000-000539-00	Flatwasher Φ24 平垫	3		
10	3218-130000-00	Counter Weight 平衡重	1		CPD18TV
10	3220-130000-00	Counter Weight 平衡重	1		CPD20TV
10	3216-130000-00	Counter Weight 平衡重	1		CPD16TV
10	3215-130000-00	Counter Weight 平衡重	1		CPD15TV
10	3213-130000-00	Counter Weight 平衡重	1		CPD13TV
11	1220-150008-00	Screw 螺钉	2		

A ⇒

B: 序号 7 表示该零件有几个品种可供您的选择。

KIT	3115-WHK-0A02	Kit for slider 滑块修理包	1		
7	3218-800001-10	Fork 货叉	1		100*40*920
7	3218-800001-20	Fork 货叉	1		100*40*1070
7	3218-800001-30	Fork 货叉	1		100*40*1150
7	3218-800001-40	Fork 货叉	1		100*40*1200
8	3218-800002-00	Pin assembly 提拔销总成	2		

B ⇒

C: 序号 40 表示该零件的数量有实际需求决定。

39	3218-600006-00	Shock Absorber 减震垫	3		
40	3218-332002-00	Collar 旋转套筒	Req		

C ⇒

D: 序号 34 表示由于设计完善要求，取消并由新的零件替换。

33	3218-330001-A0	Cushion 靠垫	1		
34	01 3218-330005-A0	Switch 指尖微动开关	4		Cancelled
	02 CK11-56003-00	JC100 Switch 拇指开关	4		
35	0000-000277-00	Bolt M8×25 螺栓	2		

D ⇒

E: 序号 19 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。

E-1: 用时间记录

- 053011 :截止到 2011 年 5 月 30 日

053011- :起始于 2011 年 5 月 30 日

E-2: 用序列号记录

-S2016344 : 截止序列号 S2016344

S2016345- : 起始序列号 S2016345

有三种序列号形式:

1)1 (字母) + 7 (数字)

适用时间: 截止到 2015 年 2 月 1 日

2)1 (字母) + 8 (数字)

适用时间: 2015 年 2 月 1 日至 2015 年 6 月 1 日

3)1 (数字) + 8 (数字)

适用时间: 2015 年 6 月 1 日至今



Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
-------------	------------------	-------------------	-----------	----------------------	--------------

E →

18	0000-000277-00	Bolt M8×25 螺栓	3		
19	01 3218-113000-00	Gas Spring 气弹簧后安装板	1	-053011	
	02 3218-113000-0A	Gas Spring 气弹簧后安装板	1	053011-	
20	3218-110007-00	Shock Absorber 地板减震垫	4		

F →

7	01 2125-410004-	Cap 导向套	1	-S2016344	
	02 2125-410004-	Cap 导向套	1	S2016345-	
8	0000-000084-	Ring Wiper 防尘圈	1		
9	0000-000370-	O-ring O型密封圈	1		

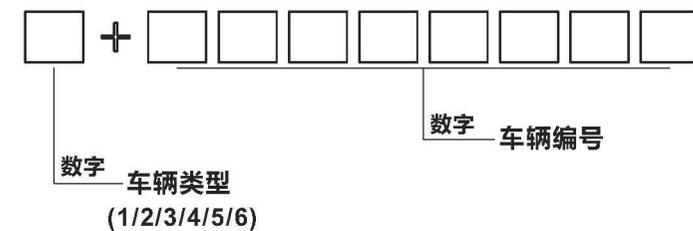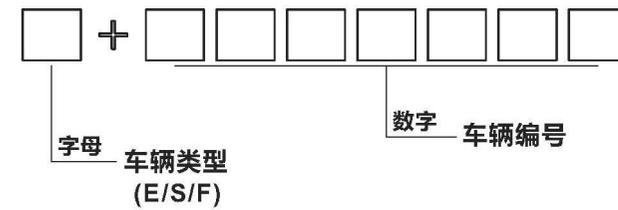

Tip 2

A: Section 0102 is the original version.

B: Section 010201 is the version that some parts in the Section 0102 have been changed.

C: Section 010202 is the version that some parts in the Section 010201 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.


要点 2

A: 章节 0102 表示原始版本;

B: 章节 010201 表示在原始版本 (章节 0102) 上零件有所变更;

C: 章节 010202 表示在变更版本 (章节 010201) 上零件有所变更。

当您订购零件时, 请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

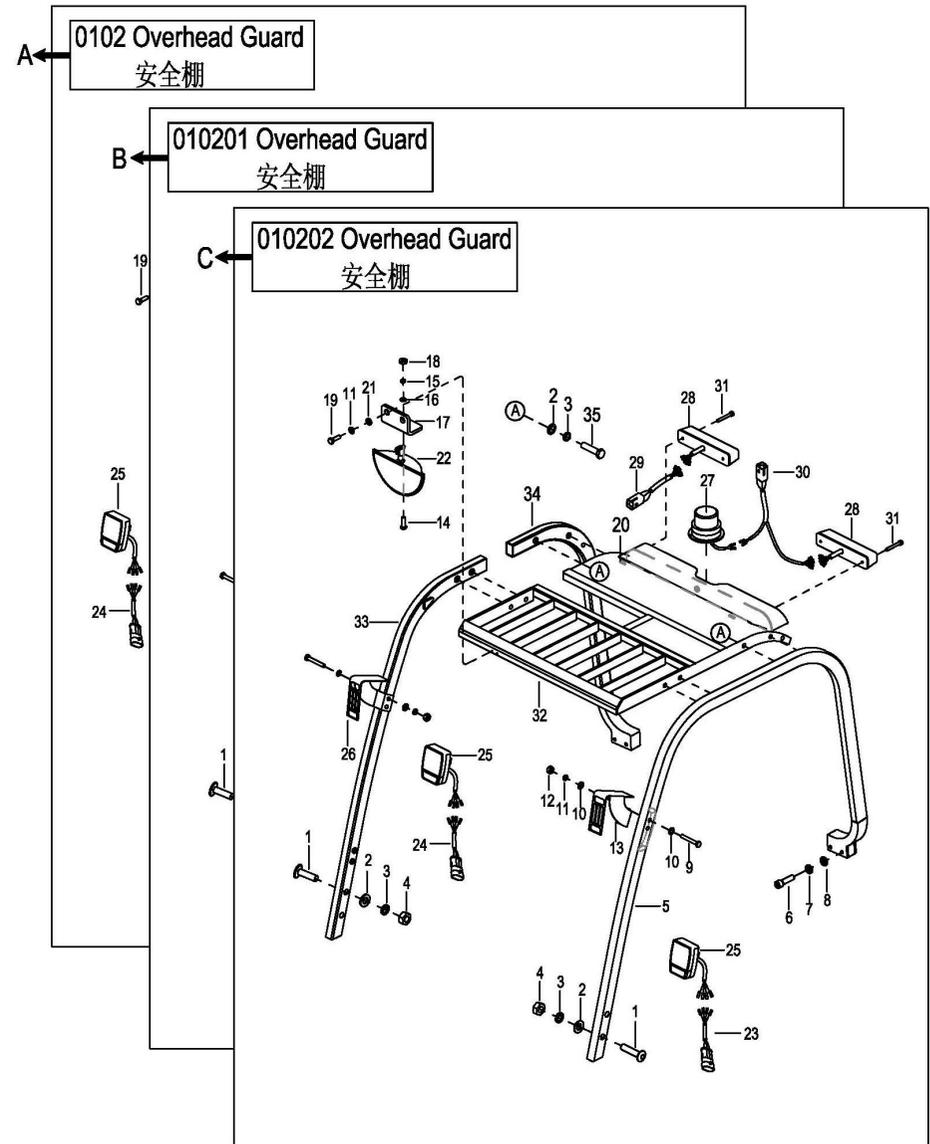

Index 目录


1000 Frame System 车身系统	2
0101 Frame System 车身系统.....	3
0102 Overhead Guard 安全棚.....	6
0103 Front Cover 前外罩.....	8
0104 Back Cover 后外罩.....	11
2000 Steering Control System 操作系统	13
0201 Steering Control System 操作系统.....	15
0202 Hand Brake Assembly 手刹总成.....	17
0203 Parking Brake 脚制动.....	20
0204 Steering Assembly 转向柱总成.....	22
0205 Valve Control Linkage 多路阀操作杆.....	25
3000 Driving System 驱动系统	28
0301 Driving System Assembly 驱动系统总成.....	29
0302 Drive Axle 驱动桥.....	31
0303 Wheel Brake 制动器.....	34
0304 Gearbox Assembly 变速箱总成.....	37
0305 Differential 差速器.....	40
0306 Front Tires Assembly 前轮装配总成.....	42
4000 Steering System 转向系统	44
0401 Rear Axle Steering Assembly 后桥转向总成.....	45
0402 Steering Axle 转向桥.....	47
0403 Steering Cylinder 转向油缸.....	50
0404 Back wheels Assembly 后轮装配总成.....	52
5000 Electrical System 电器系统	54
0501 Electrical Assembly 控制器装配总成.....	56
0502 Wiring Harness Assembly 线束总成.....	58
0503 Cable Assembly 电缆总成.....	60
6000 Hydraulic System 液压系统	62
0601 Hydraulic System 液压管路.....	63
0602 Oil Tank 油箱.....	67
7000 Lifting System 起升系统	69

0701 Full free 3-Stage Mast Assembly 全自由三级门架总成	70
0702 Oil Pipe 油管	75
0703 Front Lifting Cylinder 前起升油缸	78
0704 Lifting Cylinder-L 左起升油缸	80
0705 Lifting Cylinder-R 右起升油缸	82
0706 Tilt Cylinder 倾斜油缸	84
0707 Fork Frame 货叉架	86
0708 Full free 2-Stage Mast Assembly 全自由两级门架总成	88
0709 Oil Pipe 油管	94
0710 Full Free Lifting Cylinder 全自由起升缸	96
0711 Beside Lifting Cylinde-L 左边起升油缸	98
0712 Beside Lifting Cylinde-R 右边起升油缸	100
0713 Fork Frame 货叉架	102
0714 Wide-View 2-Stage Mast Assembly 宽视野二级门架总成	104
0715 Oil Pipe 油管	108
0716 Lifting Cylinder 起升油缸	111
0717 Fork Frame 货叉架	113
0718 Chain Assembly 链条总成	115

1000
Frame System
车身系统

0101 Frame System

车身系统

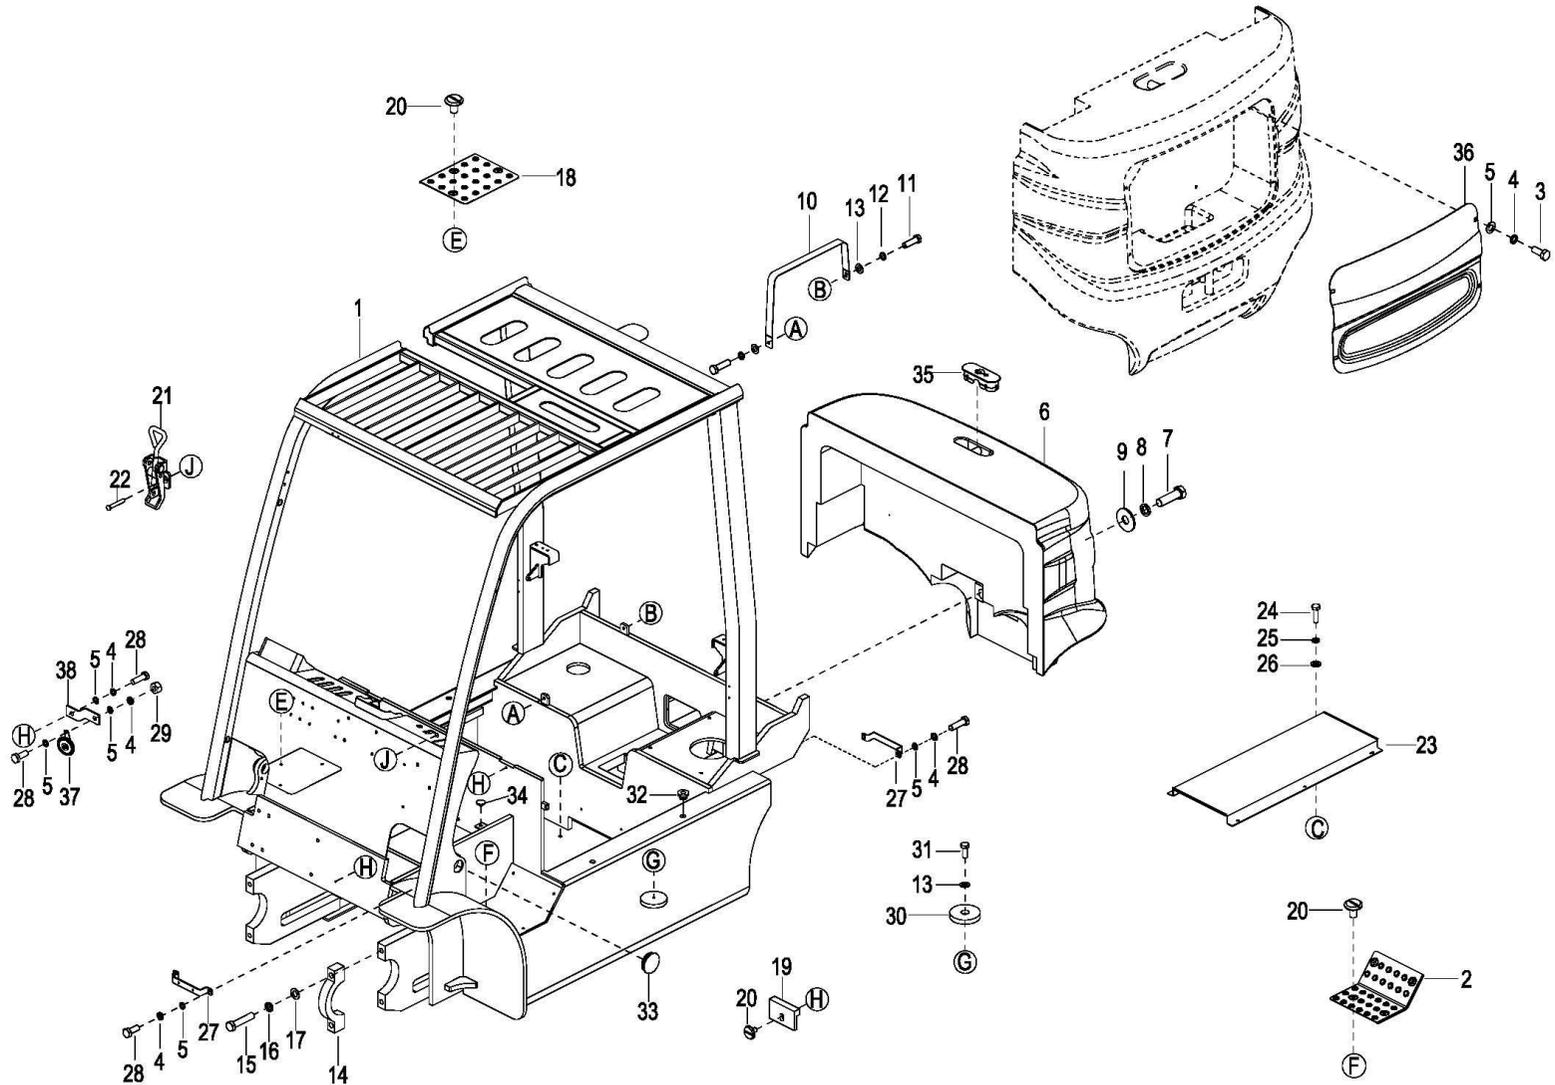

0101 Frame System

车身系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-110000-0A	Chassis 车架总成	1		
2	3845-100001-00	Pedal-Left 左防滑踏板	1		
3	0000-000242-00	Bolt M8×16 螺栓	4		
4	0000-000159-00	Lock Washer Φ8 弹垫	10		
5	0000-000540-00	Flat Washer Φ8 平垫	11		
6	3845-100003-B0	Counterweight 配重块	1		CPD40/45F8
6	3850-100003-B0	Counterweight 配重块	1		CPD50F8
7	301002000098	Bolt M36×100 螺栓	2		
8	304003000015	Lock Washer Φ36 弹垫	2		
9	304001000011	Flat Washer Φ36 大平垫	2		
10	3845-100005-00	Hoop 油箱抱箍	1		
11	0000-000776-00	Bolt M10×16 螺栓	5		
12	0000-000063-00	Lock Washer Φ10 弹垫	5		
13	0000-000547-00	Flat Washer Φ10 平垫	2		
14	3845-100006-00	Bracket 驱动桥支承轴承盖	2		
15	0000-000452-00	Bolt M20×90 螺栓	4		
16	0000-000266-00	Lock Washer Φ20 弹垫	4		
17	0000-000435-00	Flat Washer Φ20 平垫	4		
18	3845-100002-00	Pedal-Right 右防滑踏板	1		
19	3525-100009-00	Shock Absorber Cap 电瓶盖板减震橡胶	2		
20	0000-000368-00	Screw M8×12 大平头螺钉	9		
21	3525-100012-A0	Lock II 锁扣II	1		
22	0000-000459-00	Screw M5×12 螺钉	3		
23	3845-100004-00	Cable Cover 电缆盖板	1		
24	0000-000264-00	Bolt M6×12 螺栓	6		


0101 Frame System

车身系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
25	0000-000056-00	Lock Washer Φ6 弹垫	6		
26	0000-000380-00	Flat Washer Φ6 平垫	6		
27	3525-130001-00	Bracket Cable 电缆固定条	2		
28	0000-000255-00	Bolt M8×20 螺栓	4		
29	0000-000550-00	Nut M8 螺母	1		
30	3525-100003-0A	Rubber 电瓶橡胶垫	4		
31	0000-000270-00	Bolt M10×20 螺栓	4		
32	3845-100007-00	Shock Absorber 侧板减震垫	4		
33	3120-100007-00	Cover 轴销孔盖	2		
34	3218-110007-00	Shock Absorber 地板减震垫	4		
35	3525-100011-00	Lifting Hole Cover 起吊孔盖	1		
36	3825-100002-00	Cover 控制器盖板	1		Without LOGO
36	3845-100008-A0	Cover 控制器盖板	1		With LOGO
37	3218-600500-00	Horn 喇叭	1		
38	3845-100009-00	Bracket 喇叭安装支架	1		

0102 Overhead Guard

安全棚

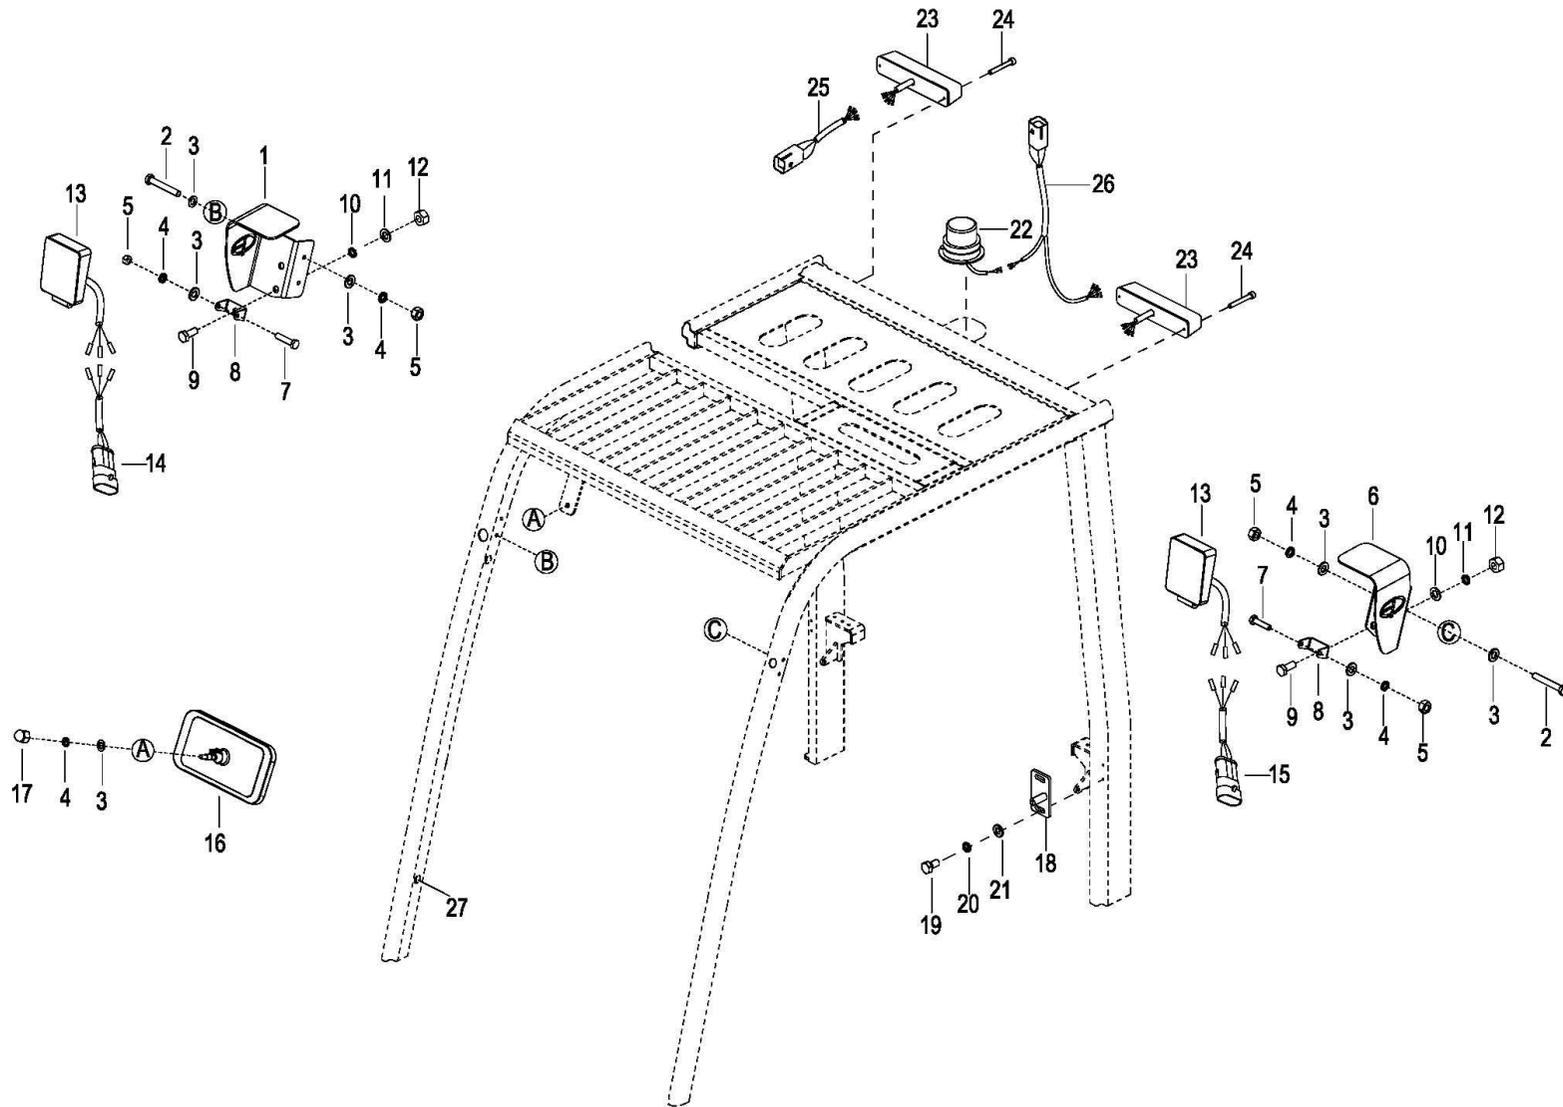

0102 Overhead Guard

安全棚

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3815-100005-00	Right Lamp Holder 右灯罩	1		
2	0000-000629-00	Bolt M8×55 螺栓	4		
3	0000-000176-00	Flat Washer Φ8 平垫	8		
4	0000-000159-00	Lock Washer Φ8 弹垫	4		
5	0000-000550-00	Nut M8 螺母	4		
6	3815-100004-00	Left Lamp Holder 左灯罩	1		
7	0000-000874-00	Bolt M8X45 螺栓	2		
8	3130-680101-00	Lamp Holder 前LED灯座	2		
9	0000-000270-00	Bolt M10X20 螺栓	2		
10	0000-000063-00	Lockwasher Φ10 弹垫	2		
11	0000-000547-00	Flatwasher Φ10 平垫	2		
12	0000-000553-00	Nut M10 螺母	2		
13	3130-680100-00	Head Lamp 前组合灯	2		
14	3525-632002-00	Front Lamp Harness R 前灯右线束	1		
15	3525-632001-00	Front Lamp Harness L 前灯左线束	1		
16	3120-101000-00	Viewfinder 反光镜	1		
17	303013000003	Nut M8 带帽螺母	1		
18	3815-120000-00	Side Panel Regulator 侧板调节座	2		
19	0000-000259-00	Bolt M6×16 螺栓	4		
20	0000-000056-00	Lock Washer Φ6 弹垫	4		
21	0000-000544-00	Flat Washer Φ6 平垫	4		
22	3218-600400-00	Caution Switch 频闪警灯	1		
23	3130-680200-00	Rear Lamp Unit 三色后组合灯	2		
24	0000-000852-00	Screw M5×65 螺钉	4		
25	3525-632003-00	Back Lamp Harness R 后灯右线束	1		


0102 Overhead Guard

安全棚

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
26	3525-632004-00	Back Lamp Harness L 后灯左线束	1		
27	3525-120003-00	Washer 走线圈	6		

0103 Front Cover

前外罩

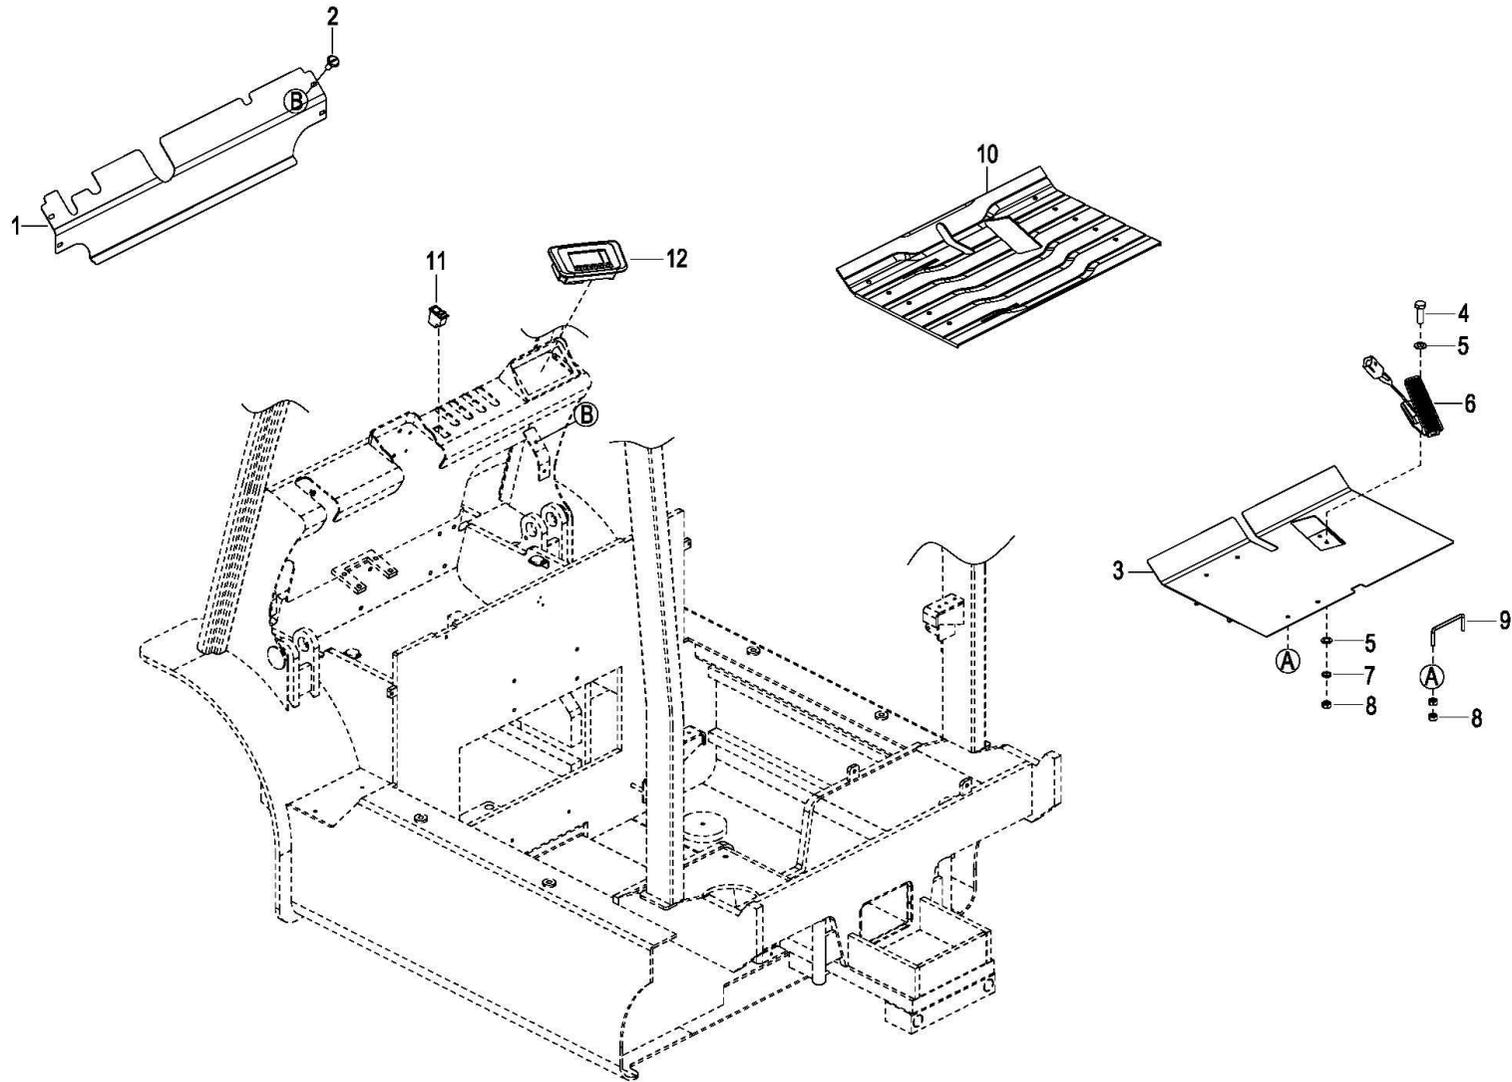


0103 Front Cover

前外罩

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-200001-00	Plate 前护板	1		
2	0000-000368-00	Screw M8×12 大平头螺钉	4		
3	3845-241000-00	Floor Board 前地板焊件	1		
4	0000-000277-00	Bolt M8×25 螺栓	2		
5	0000-000176-00	Flat Washer Φ8 平垫	4		
6	3218-680000-00	Accelerator 加速器	1		
7	0000-000159-00	Lock Washer Φ8 弹垫	2		
8	0000-000550-00	Nut M8 螺母	10		
9	3218-240001-00	Rod 前地板螺纹拉杆	2		
10	3845-200002-00	Cushion 前地板橡胶垫	1		
11	3218-606000-00	Warning Light Switch 警示灯开关	1		
12	01 3130-670000-00	Controller meter 控制器仪表	1		Superseded by 3218-600007-60
	02 3218-600007-60	Controller meter 控制器仪表	1		BGD-22-002763

0104 Back Cover

后外罩

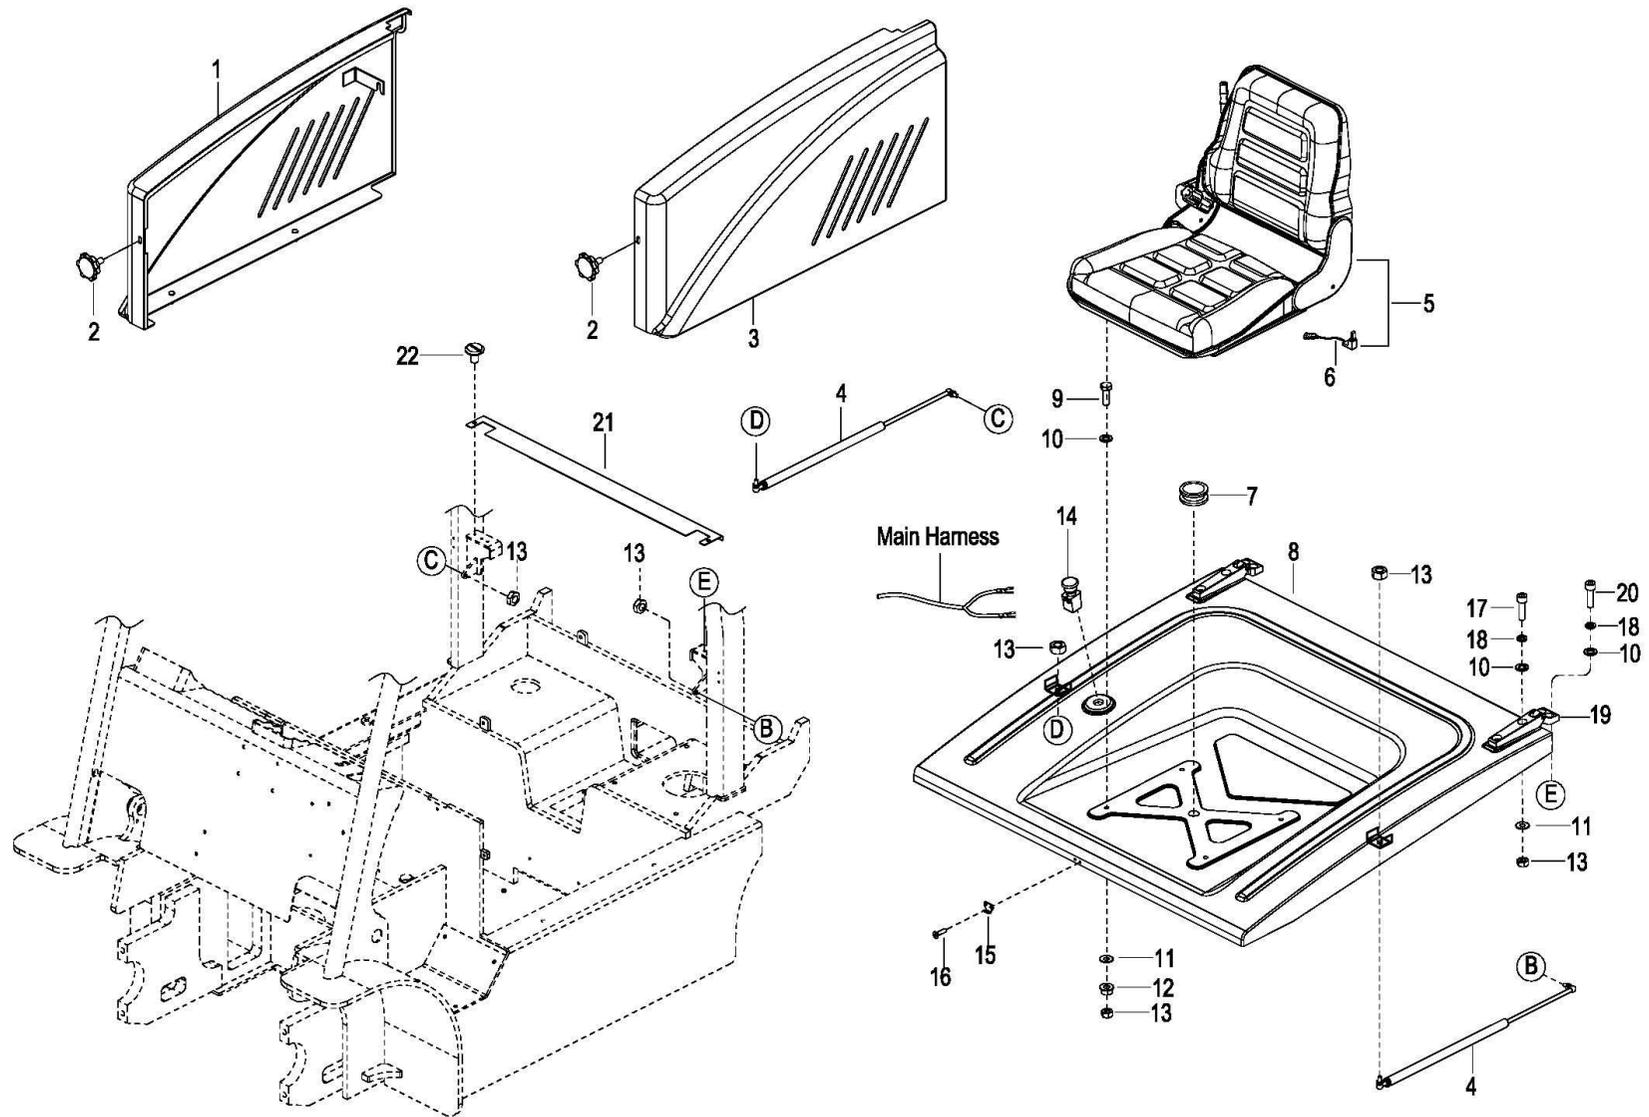

0104 Back Cover

后外罩

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-231000-00	Cover Plate-R 右侧板	1		
2	3525-200003-00	Quincunx Bolt M8×16 梅花形螺栓	2		
3	01 3845-221000-00	Cover Plate-L 左侧板	1		Replaced by #3845-221000-0A
	02 3845-221000-0A	Cover Plate-L 左侧板	1		
4	3845-210001-00	Gas Spring 气弹簧	2		
5	3218-212000-00	Seat SC1 SC1座椅	1		
6	3125-670200-00	Seat switch 座椅微动开关	1		
7	3525-120003-00	Washer 走线圈	1		
8	3845-211000-00	Cap 电瓶盖板	1		
9	0000-000278-00	Bolt M8×30 螺栓	4		
10	0000-000540-00	Flat Washer Φ8 平垫	14		
11	0000-000210-00	Flat Washer Φ8 大平垫	8		
12	0000-000413-00	Nut M8 螺母	4		
13	0000-000550-00	Nut M8 螺母	10		
14	3218-604000-00	Fetch-up Switch 紧停开关	1		
15	3525-210001-A0	Lock I 锁扣 I	1		
16	302008000003	Screw M4×6 螺钉	2		
17	0000-000321-00	Screw M8×20 螺钉	6		
18	0000-000159-00	Lock Washer Φ8 弹垫	8		
19	3525-213000-00	Gemel assembly 铰链总成	2		
20	0000-000322-00	Screw M8×25 螺钉	4		
21	3845-250000-00	Back Cover 后盖焊件	1		
22	0000-000368-00	Screw M8×12 大平头螺钉	2		

2000

Steering Control System

操作系统

0201 Steering Control System

操作系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3218-320000-00	Steering Assembly See 0204 方向柱装配总成	1		
2	3218-320009-00	Cushion 转向管柱橡胶垫	4		
3	0000-000283-00	Bolt M10×35 螺栓	4		
4	0000-000007-00	Flat Washer Φ10 平垫	12		
5	0000-000063-00	Lock Washer Φ10 弹垫	6		
6	0000-000553-00	Nut M10 螺母	6		
7	0000-000242-00	Bolt M8×16 螺栓	2		
8	0000-000159-00	Lock Washer Φ8 弹垫	6		
9	0000-000176-00	Flat Washer Φ8 平垫	10		
10	3120-310001-00	Fixed Plate 油杯安装板	1		
11	3218-315000-00	Cup 制动油杯	1		
12	3845-320000-00	Parking Brake Assembly See 0203 脚刹装配总成	1		
13	3525-637000-00	Brake Switch Harness 制动开关线束	1		
14	0000-000284-00	Bolt M12×30 螺栓	4		
15	0000-000060-00	Lock Washer Φ12 弹垫	4		
16	0000-000373-00	Flat Washer Φ12 平垫	4		
17	3218-313000-00	Hand Brake Assembly See 0202 手制动装配总成	1		
18	3218-605000-00	Switch 微动开关	1		
19	3525-635000-00	Hand Brake Harness 手制动线束	1		
20	0000-000251-00	Bolt M10×25 螺栓	2		
21	3120-300001-00	Rippled cover 阀杆波纹套	Req.		
22	3845-330000-00	Valve Control Linkage See 0205 多路阀操作杆	1		Two
22	3845-330000-10	Valve Control Linkage See 0205 多路阀操作杆	1		Three
22	3845-330000-20	Valve Control Linkage See 0205 多路阀操作杆	1		Four
23	0000-000277-00	Bolt M8×25 螺栓	4		


0201 Steering Control System

操作系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
24	0000-000550-00	Nut M8 螺母	4		
25	3218-600006-00	Rubber Washer 减震垫	4		
26	3218-609000-00	Switch Assembly 钥匙开关总成	1		
27	3125-100004-00	Tubing clamps 油管夹	1		

0202 Hand Brake Assembly

手刹总成

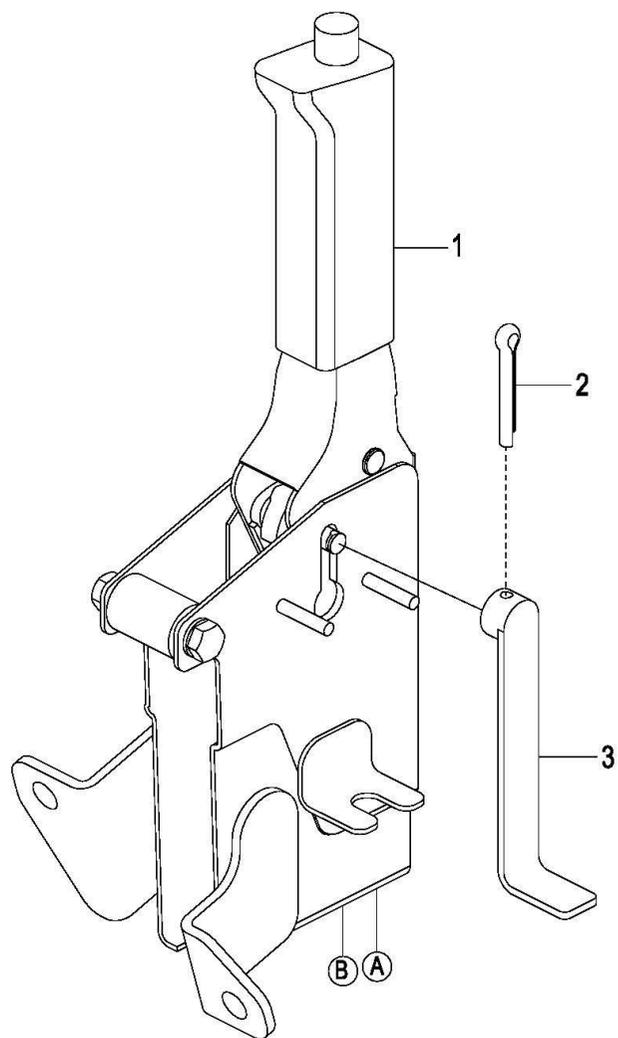


0202 Hand Brake Assembly

手刹总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3218-313100-00	Hand Brake 手刹	1		For Shifter
2	0000-000376-00	Pin Φ 2.5×20 开口销	1		
3	3218-313200-00	Touch Plate 接触片	1		

0203 Parking Brake

脚制动

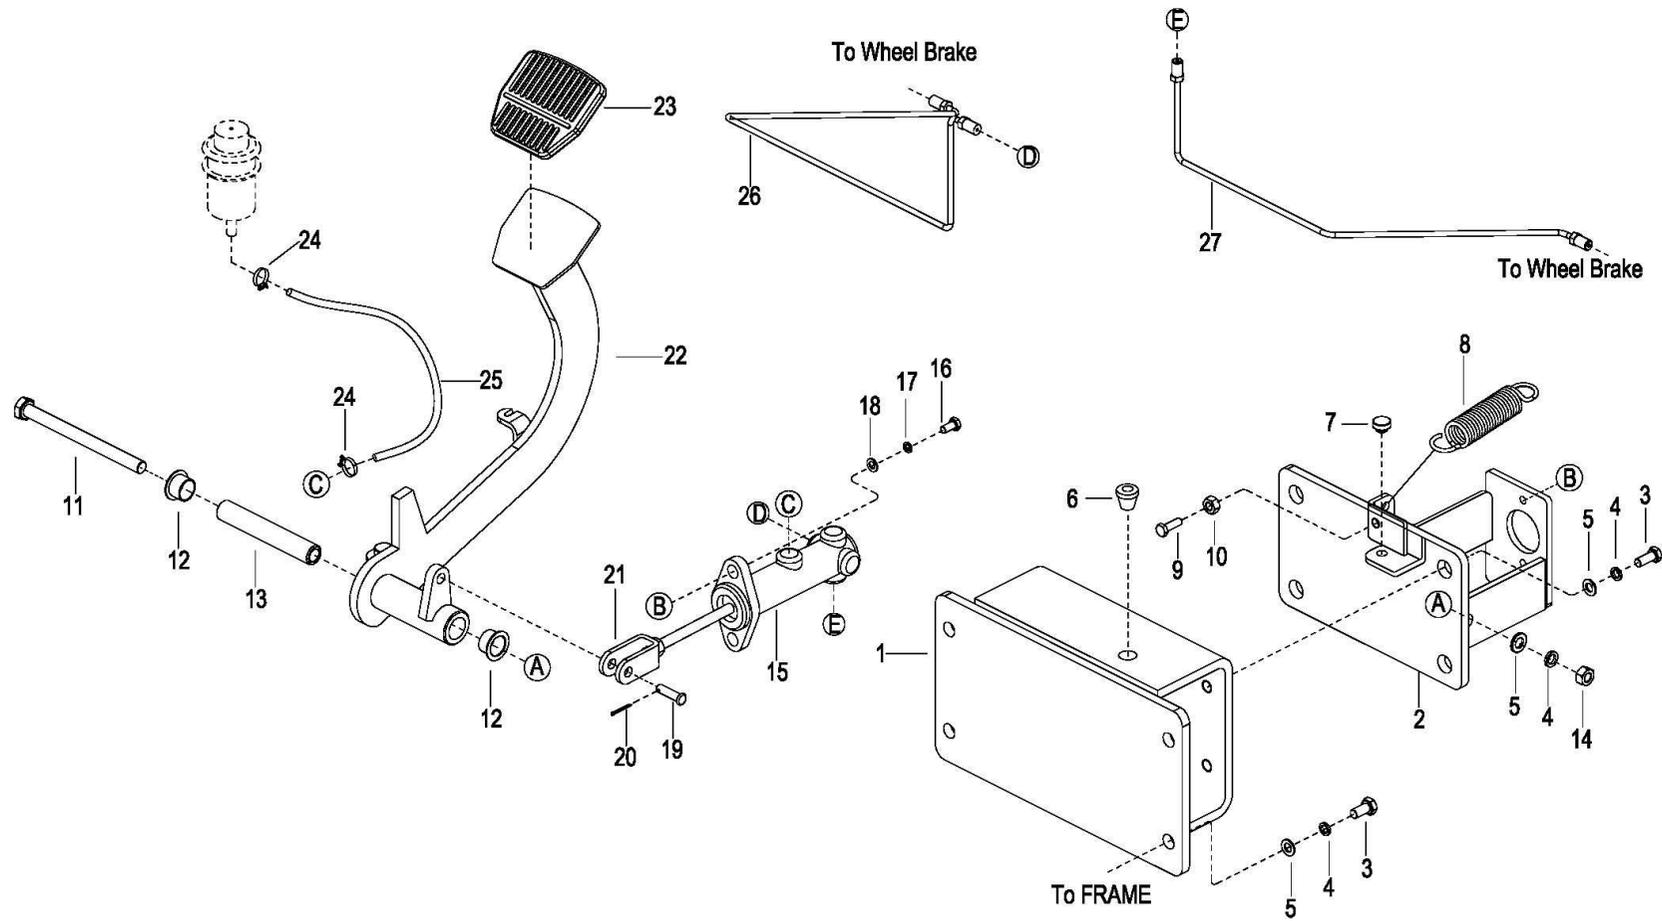


0203 Parking Brake

脚制动

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-321000-00	Brake Plate 脚刹安装板	1		
2	3120-322000-00	Brake Bracket 脚刹座	1		
3	0000-000251-00	Bolt M10×25 螺栓	8		
4	0000-000063-00	Lock Washer Φ10 弹垫	8		
5	0000-000547-00	Flat Washer Φ10 平垫	8		
6	3525-100010-00	Rubber 侧板减震垫	1		
7	3125-310006-00	Rubber 橡胶缓冲垫	1		
8	3316-410001-00	Spring 脚制动弹簧	1		
9	0000-000277-00	Bolt M8×25 螺栓	1		
10	0000-000550-00	Nut M8 螺母	1		
11	3316-410003-00	Bolt M10×125 螺栓	1		
12	0000-001327-00	Bushing 1612F 自润滑轴套	2		
13	3316-410002-00	Shaft Sleeve 制动内轴套	1		
14	0000-000553-00	Nut M10 螺母	1		
15	3125-314000-00	Brake Pump 制动总泵	1		
16	0000-000242-00	Bolt M8×16 螺栓	2		
17	0000-000540-00	Flat Washer Φ8 平垫	2		
18	0000-000159-00	Lock Washer Φ8 弹垫	2		
19	0000-000952-00	Pin 8×30 销	1		
20	0000-000376-00	Pin Φ2.5×20 开口销	1		
21	3125-313000-00	Brake tappet 制动挺杆组件	1		
22	3845-322000-00	Pedal Brake 制动踏杆	1		
23	3125-310005-00	Pedal Cover 踏板板垫	1		
24	0000-000468-00	Clip Φ10-16 卡箍	3		
25	3115-310001-00	Rubber Tube 制动橡胶管	1		
26	3845-311000-00	Metal Pipe L 左制动硬管	1		
27	3845-312000-00	Metal Pipe R 右制动硬管	1		

0204 Steering Assembly

转向柱总成

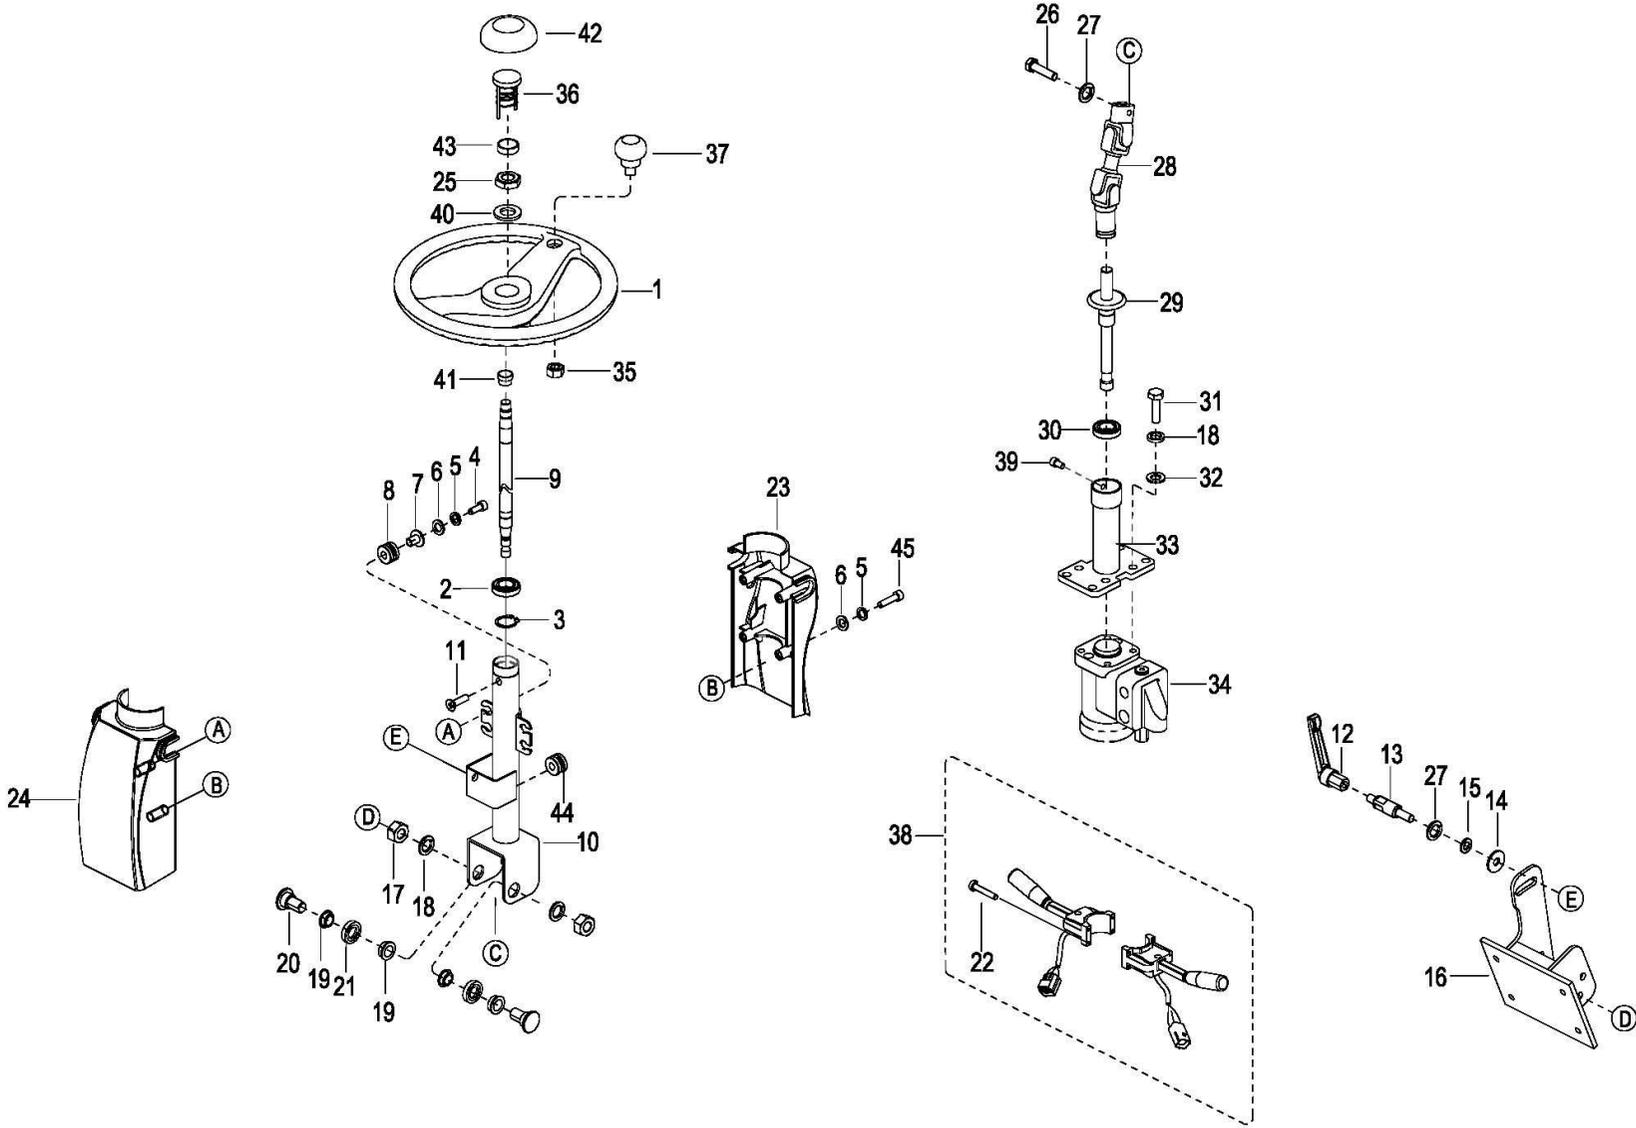

0204 Steering Assembly

转向柱总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3218-323000-10	Steering Wheel 方向盘	1		
2	0000-000643-00	Bearing 61904-2Z 轴承	1		
3	0000-000293-00	Shaft Snap Ring ø20 轴用弹性挡圈 A 型	1		
4	0000-000386-00	Screw M6×20 螺钉	4		
5	0000-000056-00	Lockwasher Φ6 弹垫	8		
6	0000-000123-00	Flatwasher Φ6 平垫	8		
7	3218-320010-00	Rubber Bush 转向柱橡胶垫衬套	4		
8	3218-320009-00	Cushion 转向柱橡胶垫	4		
9	3218-320003-0A	Steering Shaft 上转向轴	1		
10	3218-326100-00	Steering Column 转向管柱总成	1		
11	0000-000326-00	Screw M6×12 螺钉	1		
12	3218-320008-0A	Handle 右手柄	1		
13	3218-320005-0A	Axis 锁紧轴 II	1		
14	0000-000856-00	Flat Washer Φ11 平垫	1		
15	0000-000210-00	Flat Washer Φ8 平垫	1		
16	3845-341000-00	Steering Bracket 转向管柱安装板	1		
17	0000-000054-00	Nut M10 螺母	2		
18	0000-000063-00	Lock Washer Φ10 弹垫	6		
19	3218-320013-00	Steering Bush 转向柱旋转衬套	4		
20	3218-320014-00	Steering bolt 转向柱旋转螺栓	2		
21	3218-320007-00	Steering Washer 转向柱旋转垫圈	2		
22	0000-000487-00	Screw ST4.8×32 螺钉	4		Cancelled
23	3218-320002-00	Cover, back 方向柱盖板后	1		
24	3218-320001-00	Cover, front 方向柱盖板前	1		
25	3218-326001-00	Nut M16X1.5 螺母	1		
26	0000-000278-00	Bolt M8×30 螺栓	1		


0204 Steering Assembly

转向柱总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
27	0000-000159-00	Lock Washer Φ8 弹垫	2		
28	3218-326200-00	Gimbal 转向万向联轴器	1		
29	3218-325000-00	Steering Shaft 下转向轴组件	1		
30	0000-000462-00	Bearing 61905-Z 轴承	1		
31	0000-000251-00	Bolt M10×25 螺栓	4		
32	0000-000007-00	Flat Washer Φ10 平垫	4		
33	3218-312100-00	Redirector Bracket 转向器安装板组件	1		
34	3845-740000-00	Redirector 转向器	1		
35	0000-000630-00	Nut M12 螺母	1		
36	3218-323010-10	Horn Button 喇叭按钮	1		
37	3218-323020-00	Handle 手柄	1		
38	3218-600900-00	Swith 组合开关	1		
39	0000-000077-00	Screw M6×12 螺钉	1		
40	0000-000863-00	Big washer Φ16 大垫圈	1		
41	3218-326002-00	Chassis Assembly 底盘总成	1		
42	3218-323030-10	Hornhood 喇叭盖	1		
43	3218-323040-00	Insulating Sleeve 绝缘套	1		
44	3218-326003-00	Washer 橡胶垫圈	1		
45	0000-000320-00	Screw M6×35 螺钉	4		

0205 Valve Control Linkage

多路阀操作杆

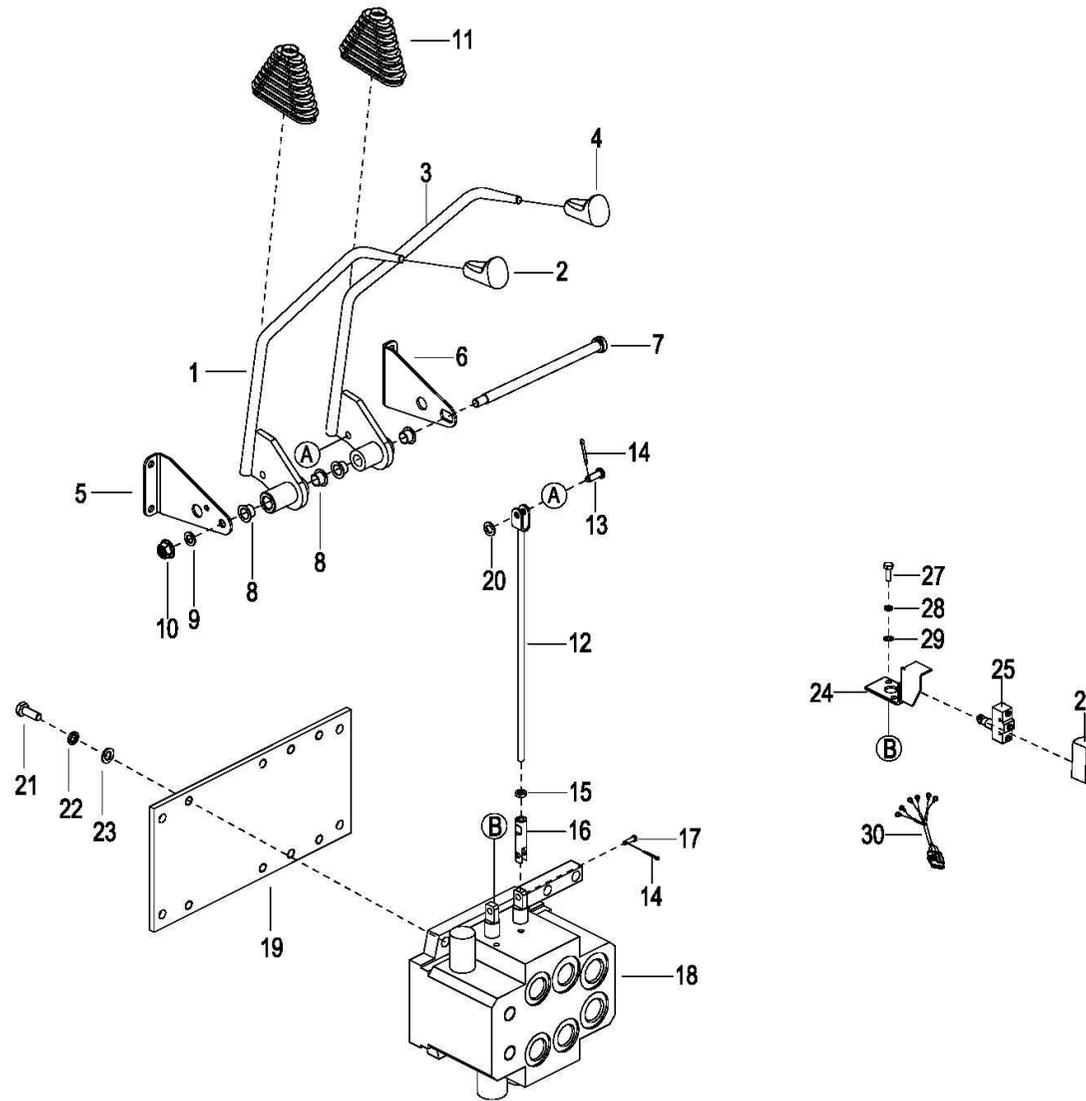

0205 Valve Control Linkage

多路阀操作杆

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3120-332000-00	Lever-Lift 提升操纵杆	1		
2	3218-330006-00	Knob-Lift 起升手柄	1		
3	3845-332000-00	Lever-Tilt 倾斜操纵杆	1		
4	3218-330007-00	Knob-Tilt 倾斜手柄	1		
5	3120-330001-00	Support-L 左固定支架	1		
6	3120-330002-00	Support-R 右固定支架	1		
7	3845-330001-00	Connecting rod 操作手柄连接杆	1		
8	3120-330005-00	Nylon graphite sleeve Φ12 尼龙石墨套	4		
9	0000-000007-00	Flat washer Φ10 垫圈	2		
10	0000-001204-00	Nut M10 螺母	1		
11	3120-300001-00	Valve Stem Sleeve 阀杆波纹套	1		
12	3845-331000-00	Connecting rod 连接杆	2		
13	0000-001205-00	Pin Roll Φ8×24 销轴	2.		
14	0000-000296-00	Pin 2×20 开口销	4.		
15	0000-000550-00	Nut M8 螺母	2.		
16	3845-330002-00	Control Valve Two 连接杆接头	2		
17	307006000007	Pin Roll Φ8×20 销轴	2		
18	3845-730000-00	Control Valve Two 两联多路阀	1		
18	3845-730000-10	Control Valve Three 三联多路阀	1		
18	3845-730000-20	Control Valve Four 四联多路阀	1		
19	3845-310001-00	Board 多路阀安装板	1		
20	0000-000176-00	Flat Washer Φ8 垫圈	2.		
21	0000-000284-00	Bolt M12×30 螺栓	4		
22	0000-000060-00	Lock Washer Φ12 弹垫	4		
23	0000-000373-00	Flat Washer Φ12 平垫	4		

0205 Valve Control Linkage

多路阀操作杆

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
24	3845-337000-00	Bracket 开关安装板	2		
25	3218-605000-00	Switch 开关	2		
26	3218-605001-00	Rubber Cover 橡胶套	2		
27	0000-000264-00	Bolt M6×12 螺栓	4		
28	0000-000056-00	Lockwasher Φ6 弹垫	4		
29	0000-000123-00	Flatwasher Φ6 平垫	4		
30	3525-636000-00	Lunching Harness 泵微动开关线束	1		


3000

Driving System

驱动系统

0301 Driving System Assembly

驱动系统总成

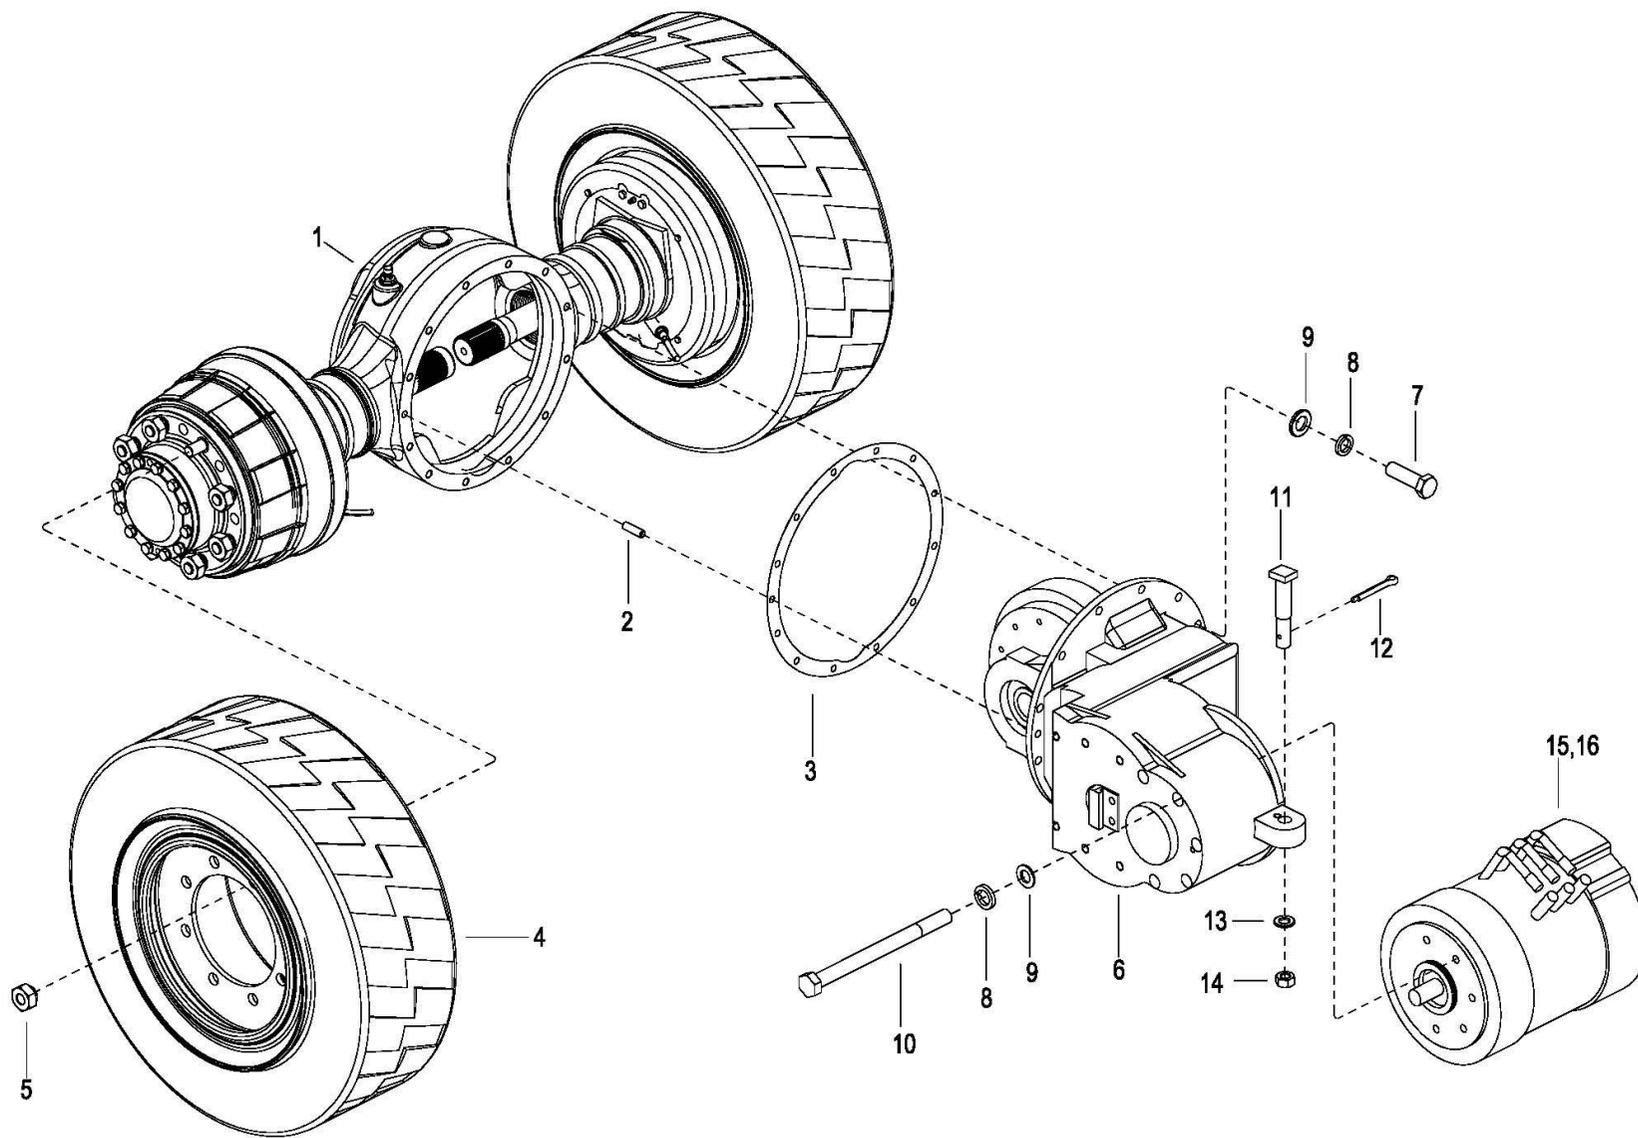


0301 Driving System Assembly

驱动系统总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3850-420000-00	Drive Axle See 0302 驱动桥	1		
2	0000-000706-00	Shaft Φ12×30 销	1		
3	3845-400001-00	Packing Seal 变速箱密封垫	1		
4	3845-430000-0A	Front Tire Assembly See 0305 前轮装配总成	2		CPD40/45F8
4	3850-430000-00	Front Tire Assembly See 0305 前轮装配总成	2		CPD50F8
5	0000-000579-00	Nut M20×1.5 螺母	16		
6	3845-420000-00	Gear Box Assembly See 0303 变速箱总成	1		
7	301003000031	Bolt M14×1.5×40 螺栓	16		
8	0000-000233-00	Lock Washer Φ14 弹垫	21		
9	0000-001004-00	Flat Washer Φ14 平垫	21		
10	01 301000000066	Bolt M14×1.5×225 螺栓	5		Superseded by#301000000469#
	02 301000000469	Bolt M14×1.5×125 螺栓	5		
11	3525-440000-00	Pin shaft assembly 销轴总成	1		
12	0000-001151-00	Split Pin 3.2x36 开口销	1		
13	3525-400002-00	Flat Washer Φ20 平垫	1		
14	0000-000764-00	Slotted Nut M20 开槽螺母	1		
15	01 3845-650000-00	Traction Electric Machine 行走电机	1	-1311500659	Superseded by 3845-650000-03
	02 3845-650000-03	Traction Electric Machine 行走电机	1	1311500660-	BGD-22-002763
16	7830-289001-08	Encode 编码器	1		

0302 Drive Axle

驱动桥

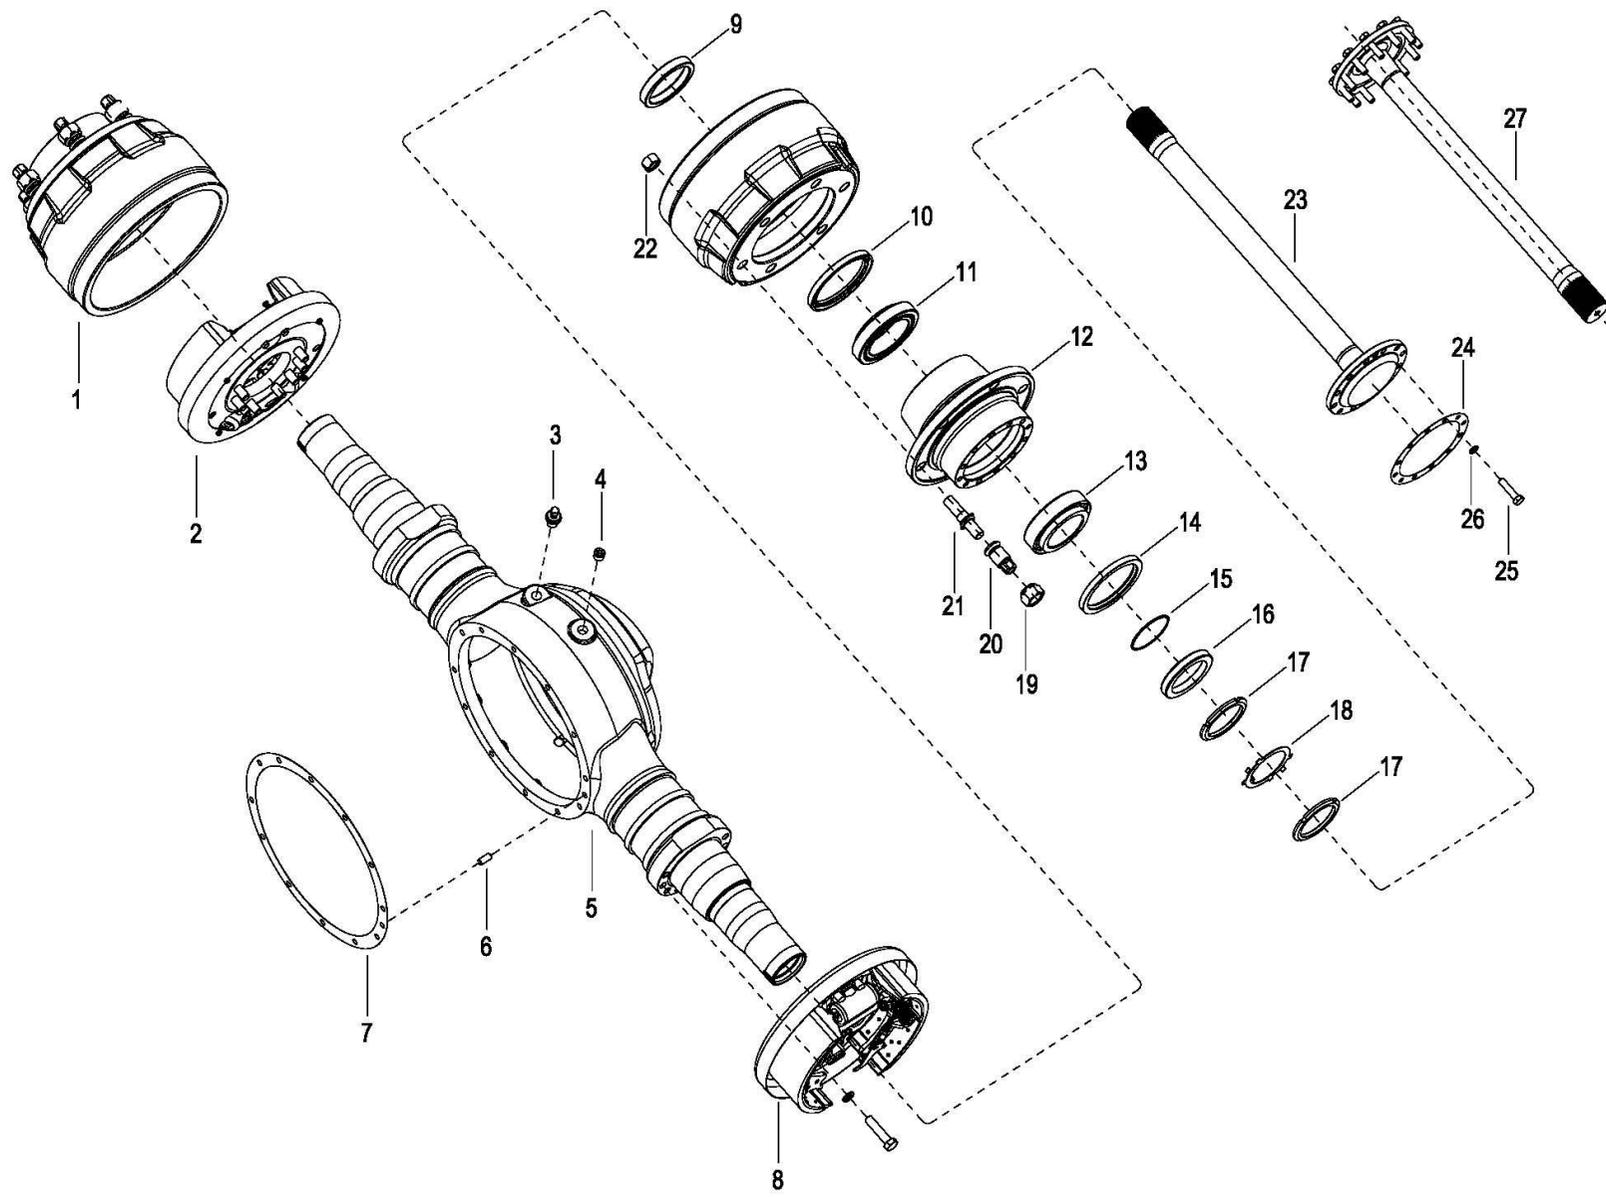

0302 Drive Axle


驱动桥

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3850-420001-00	Brake Drum 轮毂制动毂组件	2		
2	01 3850-421000-00	Wheel Brake-L See0303 左制动器总成	1		Superseded by 7846-21000X-00
	02 7846-21000X-00	Wheel Brake-L See0303 左制动器总成	1		EP2020010301
3	01 3850-420002-00	Vent plug 通气塞总成	1		Superseded by 7845-20724X-S0
	02 7845-20724X-S0	Vent plug 通气塞总成	1		EP2020010301
4	01 3850-420003-00	Plug R1/2 螺塞	2		Superseded by 7845-20723X-S0
	02 7845-20723X-S0	Plug R1/2 螺塞	2		EP2020010301
5	3850-420004-00	Housing 桥体组件	1		
6	3850-420005-00	Shaft $\Phi 12 \times 26$ 圆柱销	1		
7	3850-420006-00	Packing Seal 370.5 \times 426 \times 0.5 主减安装垫	1		
8	01 3850-422000-00	Wheel Brake-R See0303 右制动器总成	1		Superseded by 7846-22000X-00
	02 7846-22000X-00	Wheel Brake-R See0303 右制动器总成	1		EP2020010301
9	3850-420007-00	Snap Ring 97 \times 120 \times 18 油封挡圈 2	2		
10	01 3850-420008-00	Seal FB120 \times 150 \times 12 旋转轴唇形密封圈	2		Superseded by 7846-20921X-00
	02 7846-20921X-00	Seal FB120 \times 150 \times 12 旋转轴唇形密封圈	2		EP2020010301
11	01 3850-420009-00	Bearing 32019 圆锥滚子轴承	2		Superseded by 7845-20720X-S0
	02 7845-20720X-S0	Bearing 32019 圆锥滚子轴承	2		EP2020010301
12	01 3850-420010-00	Hub 轮毂	2		Superseded by 7845-20705X-S0
	02 7845-20705X-S0	Hub 轮毂	2		EP2020010301
13	01 3850-420011-00	Bearing 33117 圆锥滚子轴承	2		Superseded by 7845-20718X-S0
	02 7845-20718X-S0	Bearing 33117 圆锥滚子轴承	2		EP2020010301
14	01 3850-420012-00	Seal FB115 \times 145 \times 12 旋转轴唇形密封圈	2		Superseded by 7845-20717X-S0
	02 7845-20717X-S0	Seal FB115 \times 145 \times 12 旋转轴唇形密封圈	2		EP2020010301
15	01 3850-420013-00	Ring D90 \times 3.5 O 型圈	2		Superseded by 7845-20716X-S0
	02 7845-20716X-S0	Ring D90 \times 3.5 O 型圈	2		EP2020010301
16	01 3850-420014-00	Snap Ring 85 \times 115 \times 16 油封挡圈 1	2		Superseded by 7845-20701X-S0
	02 7845-20701X-S0	Snap Ring 85 \times 115 \times 16 油封挡圈 1	2		EP2020010301

17	01	3850-420015-00	Nut M85×2×8	小圆螺母	4		Superseded by 7845-20714X-S0
	02	7845-20714X-S0	Nut M85×2×8	小圆螺母	4		EP2020010301
18	01	3850-420016-00	Washer Φ85	圆螺母用止动垫圈	2		Superseded by 7845-20715X-S0
	02	7845-20715X-S0	Washer Φ85	圆螺母用止动垫圈	2		EP2020010301
19	01	3850-420017-00	Nut M30×1.5	球螺母	12		Superseded by 7845-20702X-S0
	02	7845-20702X-S0	Nut M30×1.5	球螺母	12		EP2020010301
20	01	3850-420018-00	Nut M20×1.5/M30×1.5	栓螺母	12		Superseded by 7845-20703X-S0
	02	7845-20703X-S0	Nut M20×1.5/M30×1.5	栓螺母	12		EP2020010301
21		3850-420019-00	Bolt M20×1.5/M22×1.5	轮毂螺栓	12		
22		3850-420020-00	Nut M22×1.8	I型六角螺母	12		
23		3850-420021-00	Shaft Right	半轴右	1		
24	01	3850-420022-00	Packing 146×187×0.5	半轴垫	2		Superseded by 7845-20712X-S0
	02	7845-20712X-S0	Packing 146×187×0.5	半轴垫	2		EP2020010301
25	01	3850-420023-00	Bolt M12×1.25×50	半轴螺栓	24		Superseded by 7845-20711X-S0
	02	7845-20711X-S0	Bolt M12×1.25×50	半轴螺栓	24		EP2020010301
26	01	3850-420024-00	Lock Washer Φ12	弹垫	24		Superseded by 3131-41007X-B0
	02	3131-41007X-B0	Lock Washer Φ12	弹垫	24		EP2020010301
27		3850-420025-00	Shaft	半轴	1		

0303 Wheel Brake

制动器

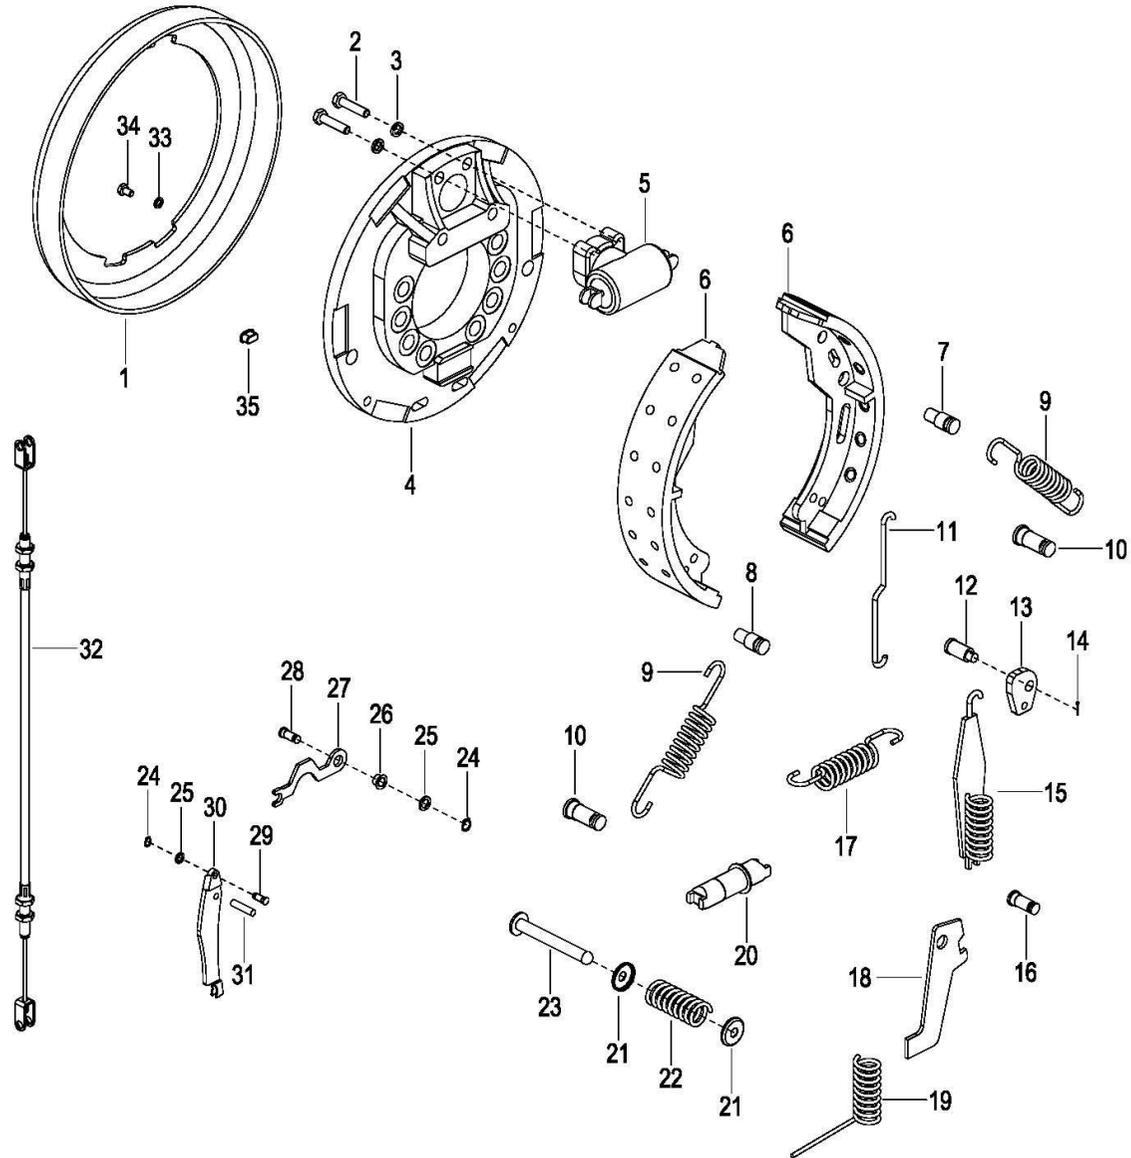

0303 Wheel Brake

制动器

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3850-421001-00	Housing 罩壳	1		
2	3850-421002-00	Bolt M8*40 螺栓	2		
3	3850-421003-00	Lockwasher Φ8 弹簧垫圈	2		
4	3850-421004-00	Back Plate L 制动底板(左)	1		
4	3850-422004-00	Back Plate R 制动底板(右)	1		
5	3850-421005-00	Brake cylinder 制动分泵总成	1		Brake fluid
5	3850-421006-00	Brake cylinder 制动分泵总成	1		Hydraulic oil
6	3850-421007-00	Brake Shoe With Friction plate B 制动蹄带摩擦片总成(后)	1		
6	3850-421008-00	Brake Shoe With Friction plate F 制动蹄带摩擦片总成(前)	1		
7	3850-421009-00	Pin 2 销 2	1		
8	3850-421010-00	Pin 1 销 1	1		
9	3850-421011-00	Spring Shoe Return 回位簧	2		
10	3850-421012-00	Spring Pin Shoe Return 回位簧销	2		
11	3850-421013-00	Pull Rod L 上拉杆(左)	1		
11	3850-422013-00	Pull Rod R 上拉杆(右)	1		
12	3850-421014-00	Rocker pin 摇臂销	1		
13	3850-421015-00	Rocker 摇臂	1		
14	3850-421016-00	Pin Φ1.6*16 开口销	1		
15	3850-421017-00	Sping Riveting Device 弹簧铆接装置	1		
16	3850-421018-00	Sping Pin 扭簧销	1		
17	3850-421019-00	Spring 下拉簧	1		
18	3850-421020-00	Paul 棘爪	1		
19	3850-421021-00	Spring-L 扭簧(左)	1		
19	3850-422021-00	Spring-R 扭簧(右)	1		


0303 Wheel Brake

制动器

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
20	3850-421022-00	Adjuster L 调整器总成(左)	1		
20	3850-422022-00	Adjuster R 调整器总成(右)	1		
21	3850-421023-00	Seat, Spring 压簧座	4		
22	3850-421024-00	Spring 压簧	2		
23	3850-421025-00	Lever, Spring 压簧拉杆	2		
24	3850-421026-00	Retaining Ring 杆销挡圈	2		
25	3850-421027-00	Spring Washer 弹性垫片	2		
26	3850-421028-00	Bushing 衬套	1		
27	3850-421029-00	Lever, Push 手制动推杆	1		
28	3850-421030-00	Push rod pin 推杆销	1		
29	3850-421031-00	Pull rod pin 拉杆销	1		
30	3850-421032-00	Lever, Pull L 手制动拉杆(左)	1		
30	3850-422032-00	Lever, Pull R 手制动拉杆(右)	1		
31	3850-421033-00	Pin 销	1		
32	3850-421034-00	Cable L 制动钢索总成(左)	1		1280
32	3850-422034-00	Cable R 制动钢索总成(右)	1		1890
33	3850-421035-00	Lockwasher $\Phi 6$ 弹簧垫圈	4		
34	3850-421036-00	Bolt M6 \times 10 螺栓	4		
35	3850-421037-00	Plug, Rubber 胶堵	2		

0304 Gearbox Assembly

变速箱总成

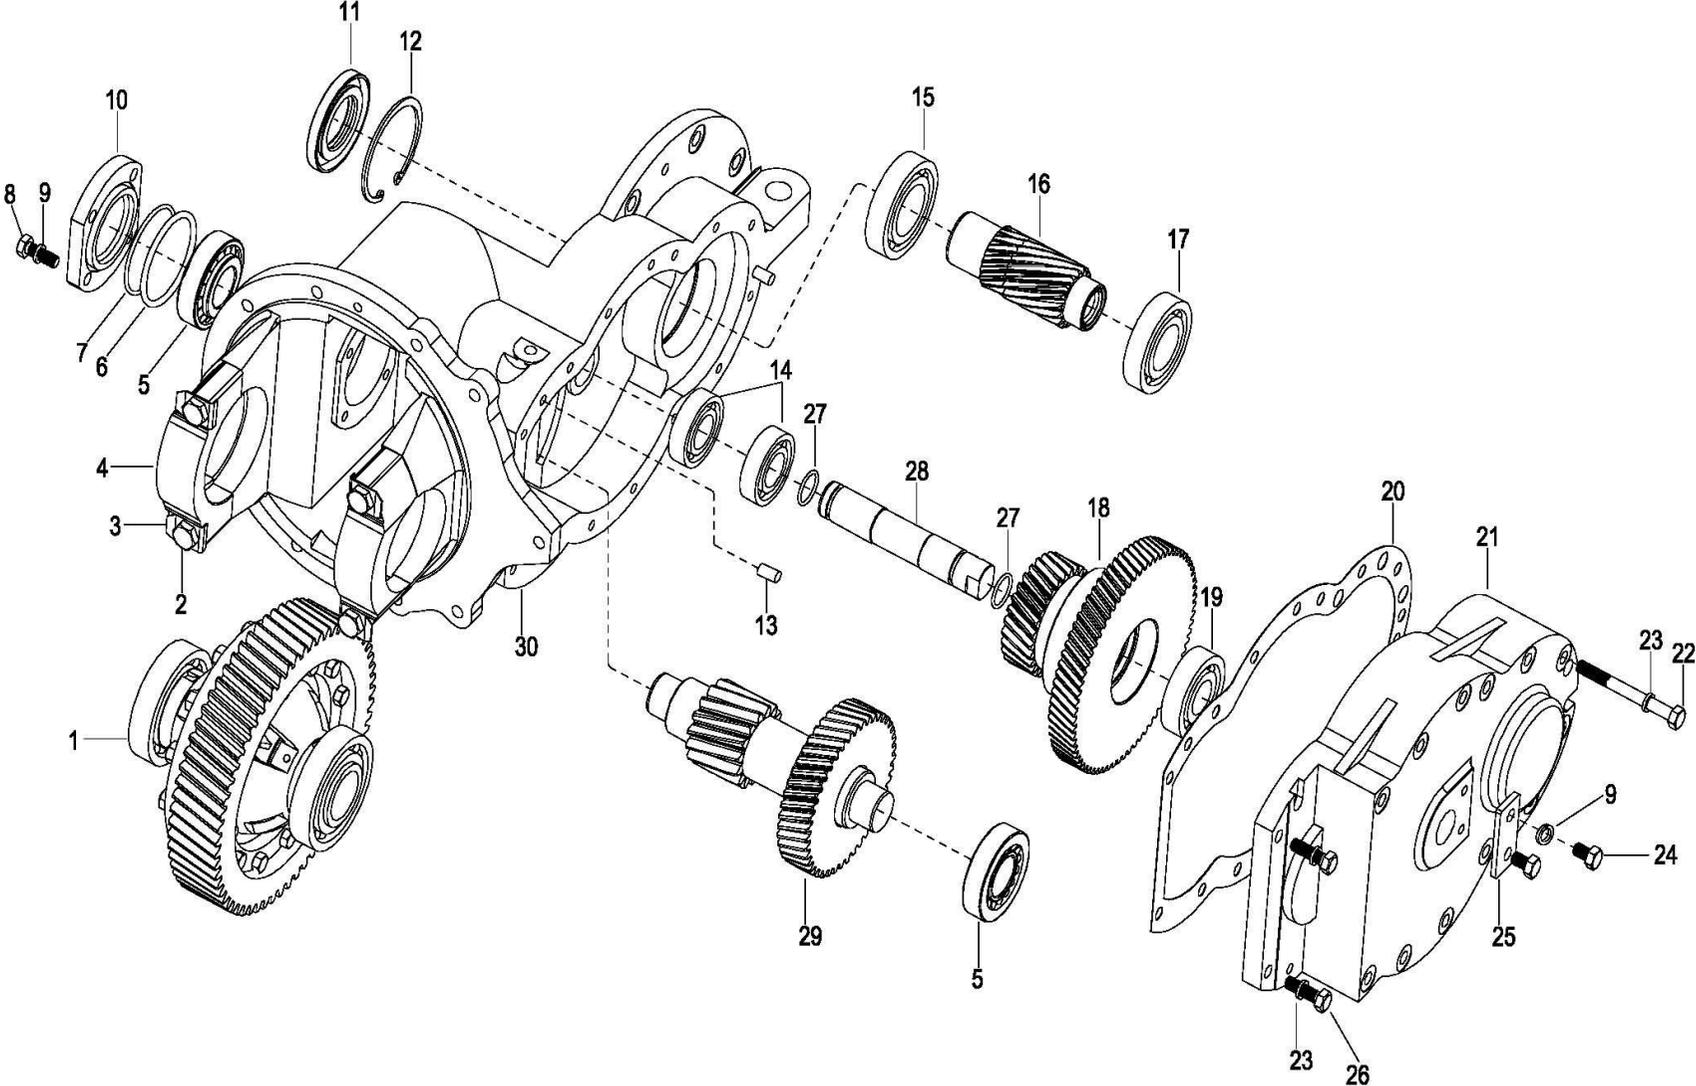

0304 Gearbox Assembly


变速箱总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-421000-00	Differential See 0305 差速器总成	1		
2	01 3845-420001-00	Bolt 螺栓	4		Superseded by 7845-20603X-S0
	02 7845-20603X-S0	Bolt 螺栓	4		EP20191114
3	01 3845-420002-00	Plate 锁片	4		Superseded by 7845-20604X-S0
	02 7845-20604X-S0	Plate 锁片	4		EP20191114
4	3845-420003-00	Bearing Seat 轴承座	2		
5	3845-420004-00	Bearing 32208 圆锥滚子轴承	2		
6	3845-420005-00	Washer 调整垫	4/3		
7	3845-420006-00	O-Ring 80×2.65 O形圈	1		
8	01 3845-420007-00	Bolt M10×25 螺栓	4		Superseded by 3530-420013-A0
	02 3530-420013-A0	Bolt M10×25 螺栓	4		EP20191114
9	01 3845-420008-00	Lockwasher ø10 弹簧垫圈	6		Superseded by 3530-420014-A0
	02 3530-420014-A0	Lockwasher ø10 弹簧垫圈	6		EP20191114
10	3845-420009-00	Cap 轴承盖	1		
11	3845-420010-00	Seal,oil 50×90×10 油封	1		
12	3845-420011-00	Snap Ring ø90 挡圈	1		
13	3845-420012-00	Pin ø10×30 圆锥销	2		
14	3845-420013-00	Bearing 6207 深沟球轴承	2		
15	3845-420014-00	Bearing 6210 深沟球轴承	1		
16	3845-420015-00	Shaft 输入轴	1		
17	3845-420016-00	Bearing 6210 深沟球轴承	1		
18	3845-420017-00	Gear 双联齿轮	1		
19	3845-420018-00	Bearing 6307 深沟球轴承	1		
20	3845-420019-00	Packing 纸垫	1		
21	3845-420020-00	Box Cover 箱盖	1		
22	3845-420021-00	Bolt M12×35 螺栓	12		
23	01 3845-420022-00	Lock Washer φ12 弹簧垫圈	15		Superseded by 7845-20639X-S0
	02 7845-20639X-S0	Lock Washer φ12 弹簧垫圈	15		EP20191114

24	01	3845-420023-00	Bolt M10×16	螺栓	2		Superseded by 3530-420017-A0
	02	3530-420017-A0	Bolt M10×16	螺栓	2		EP20191114
25		3845-420024-00	Block	挡块	1		
26		3845-420025-00	Bolt M12×25	螺栓	3		
27		3845-420026-00	O-Ring 35×3.1	O形圈	2		
28		3845-420027-00	Shaft	轴	1		
29		3845-420028-00	Gear Shaft	齿轴	1		
30		3845-420029-00	Box	箱体	1		

0305 Differential

差速器

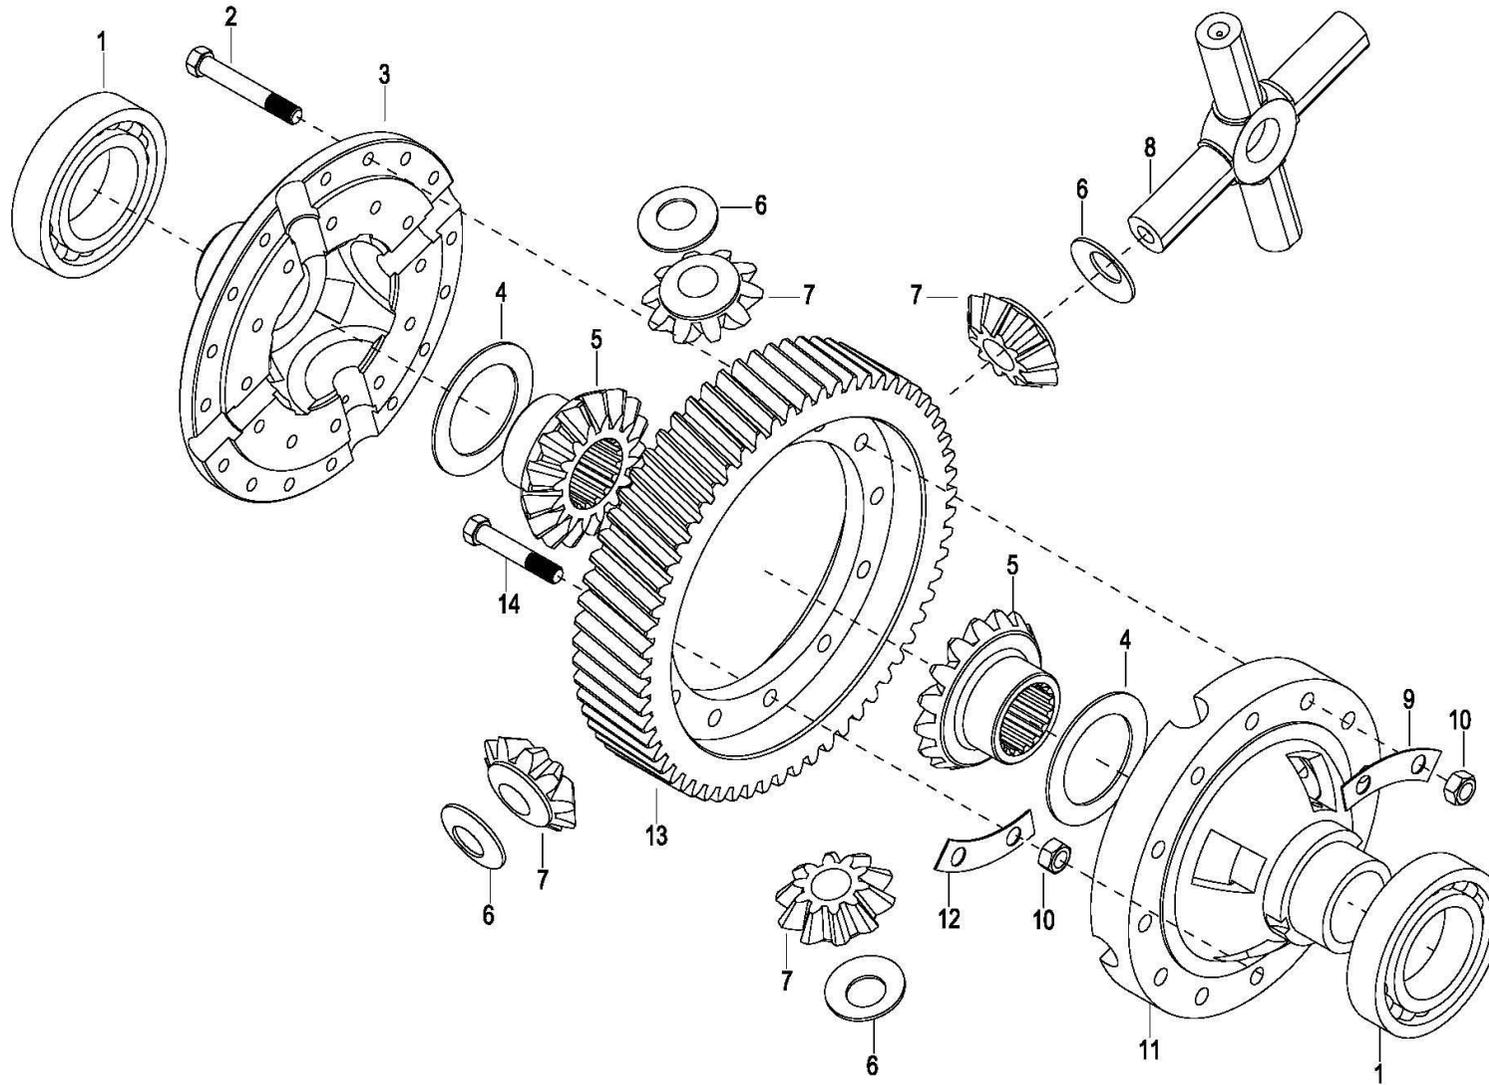


0305 Differential

差速器

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-421001-00	Bearing 6216 深沟球轴承	2		
2	3845-421002-00	Bolt 螺栓	8		
3	3845-421003-00	Case,Croze R.H. 右差速器壳	1		
4	3845-421004-00	Washer 垫圈	1/3×2		
5	3845-421005-00	Gear,Side 半轴齿轮	2		
6	3845-421006-00	Washer 止推垫圈	4		
7	3845-421007-00	Planet Gear 行星齿轮	4		
8	3845-421008-00	Axis 十字轴	1		
9	3845-421009-00	Washer φ 14 垫片或垫圈	8		
10	3845-421010-00	Nut M14×1.5 螺母	20		
11	3845-421011-00	Case,Croze L.H. 左差速器壳	1		
12	3845-421012-00	Plate,Lock 锁紧垫片	6		
13	3845-421013-00	Gear Ring 齿圈	1		
14	3845-421014-00	Bolt 螺栓	12		

0306 Front Tires Assembly

前轮装配总成

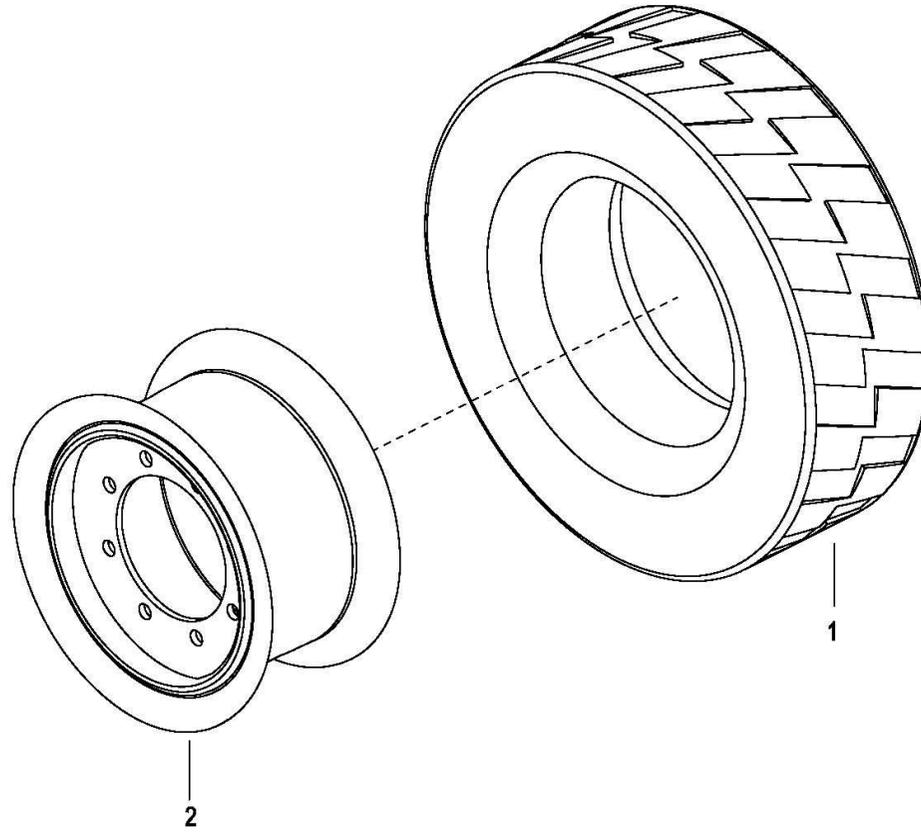

0306 Front Tires Assembly


前轮装配总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-432000-00	Solid Tyre 实心胎	1		CPD40/45F8
1	3850-432000-00	Solid Tyre 实心胎	1		CPD50F8
2	3845-431000-0A	Front Rim 前轮轮辋组件	1		CPD40/45F8
2	3850-431000-00	Front Rim 前轮轮辋组件	1		CPD50F8

4000
Steering System
转向系统

0401 Rear Axle Steering Assembly

后桥转向总成

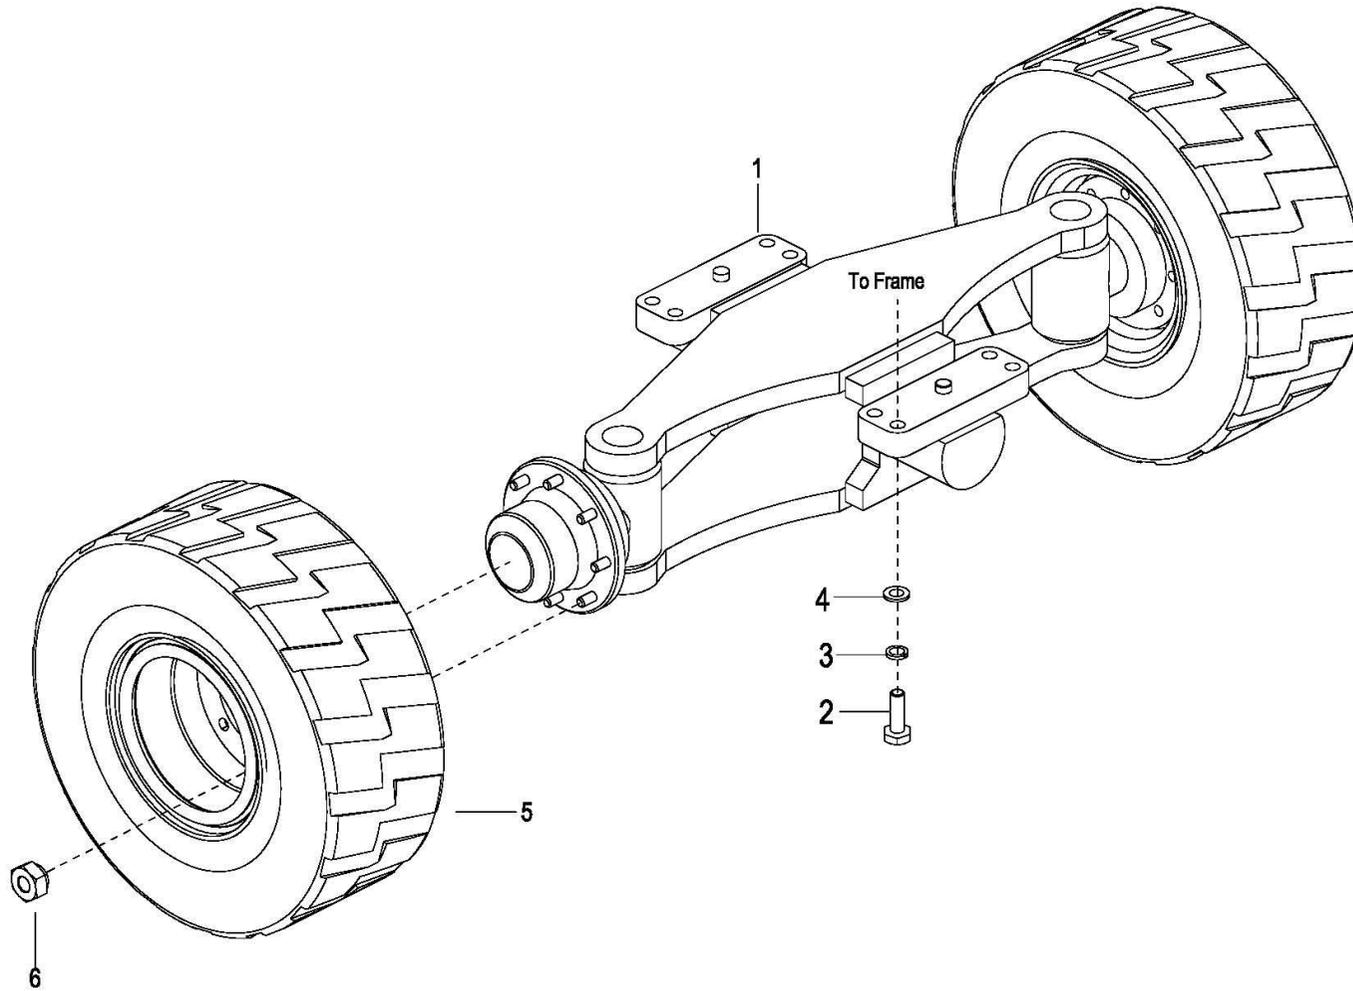


0401 Rear Axle Steering Assembly

后桥转向总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-520000-00	Steering Axle See 0402 转向桥总成	1		
2	0000-001142-00	Bolt M16×80 螺栓	8		
3	0000-000191-00	Lock Washer Φ16 弹垫	8		
4	0000-000220-00	Flat Washer Φ16 平垫	8		
5	3845-510000-00	Back Tires Assembly See 0404 后轮总成	2		21×8-9
5	3845-510000-A0	Back Tires Assembly See 0404 后轮总成	2		23×10-12
6	0000-000319-00	Nut M14 锁紧螺母	16		

0402 Steering Axle

转向桥

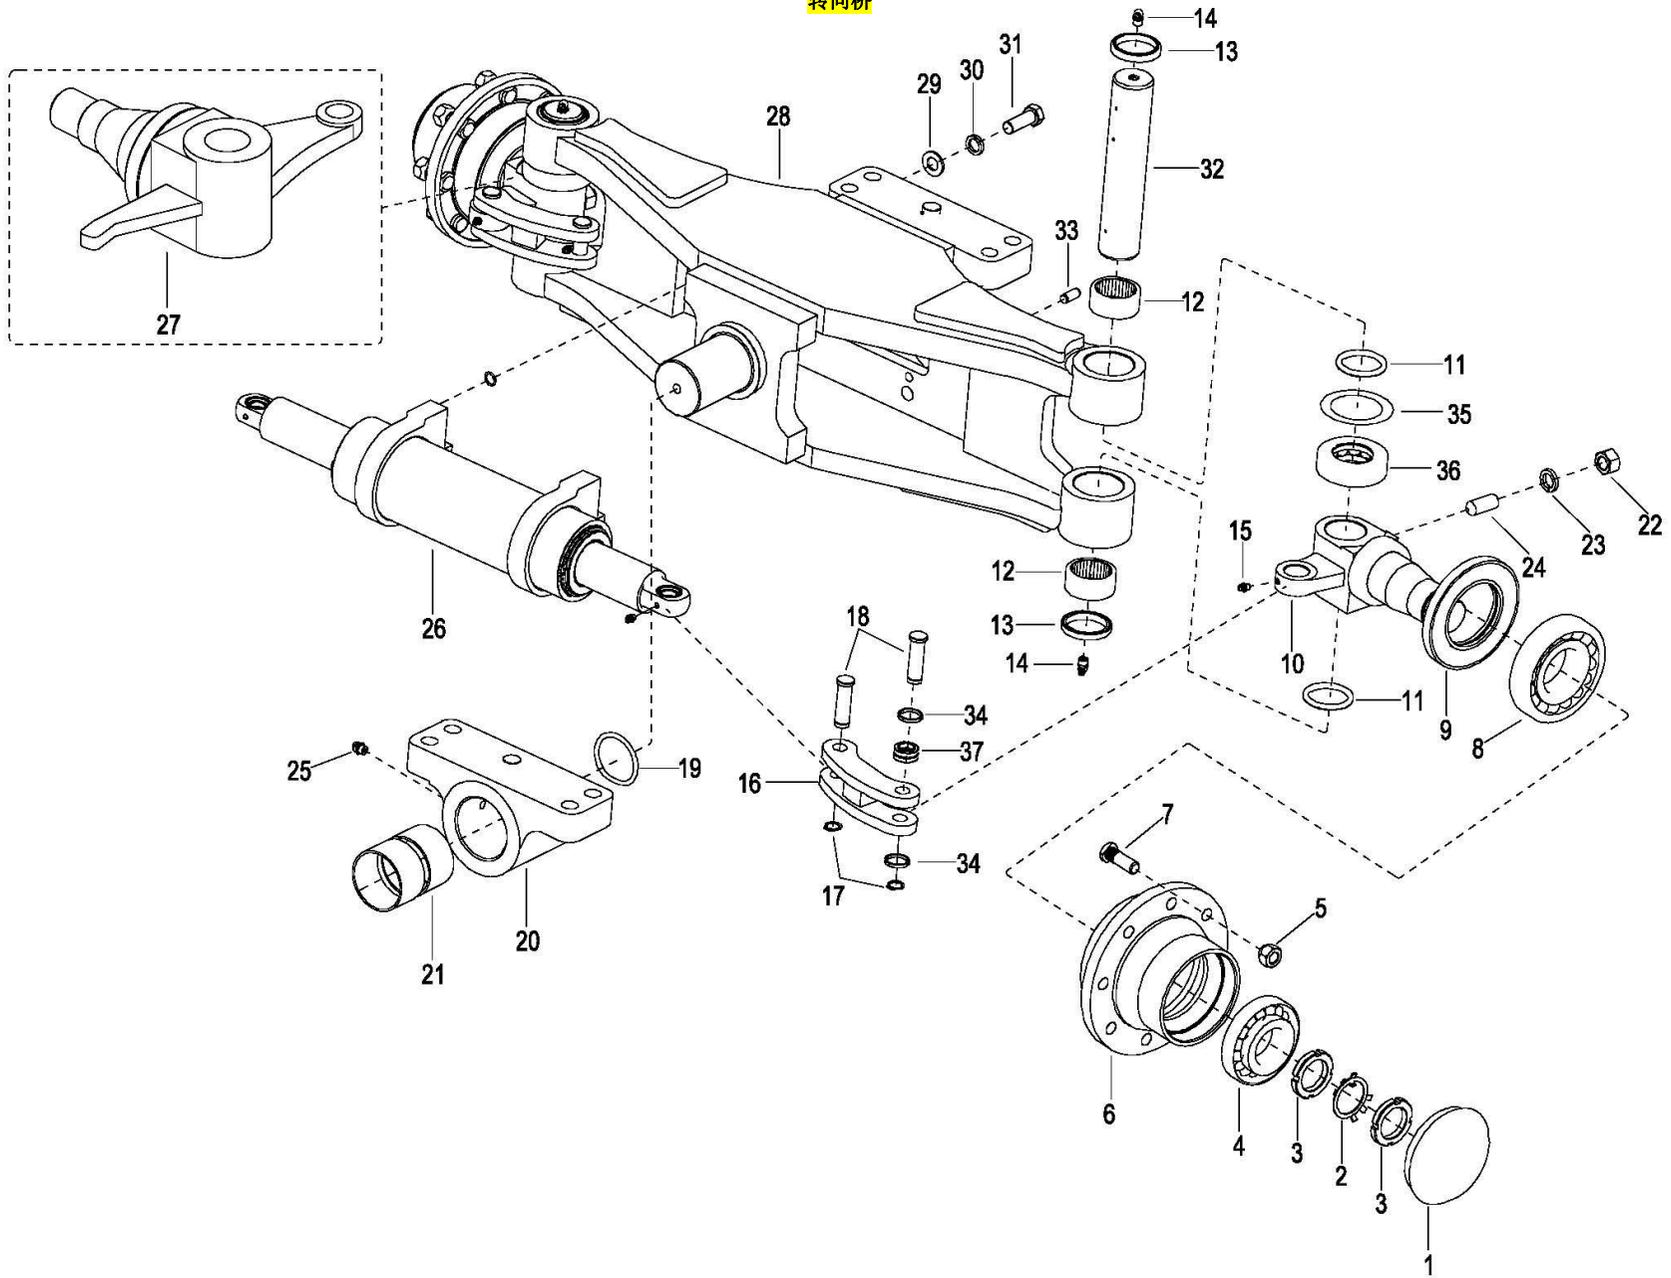

0402 Steering Axle

转向桥

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-520001-00	Hub Cap 轮毂盖	1		
2	3845-520002-00	Lock Washer d39 圆螺母止动垫圈	1		
3	3845-520003-00	Nut M39×1.5 小圆螺母	2		
4	3845-520004-00	Bearing 31309 圆锥滚子轴承	1		
5	3845-520005-00	Nut 轮毂螺母	8		
6	3845-520006-00	Hub 轮毂	1		
7	3845-520007-00	Bolt 轮毂螺栓	8		
8	3845-520008-00	Bearing 30311 圆锥滚子轴承	1		
9	3845-520009-00	Seal FB 75×130×12 旋转轴唇密封圈	1		
10	3845-520010-00	Steering Knuckle-R 右转向节	1		
11	01 3845-520011-00	O-Ring ϕ 45×5.3 O 形圈	4		Superseded by 7810-41022X-W0
	02 7810-41022X-W0	O-Ring ϕ 45×5.3 O 形圈	4		EP2019102502
12	01 3845-520012-00	Needle Bearing 55×45×38 滚针轴承	4		Superseded by 7845-41014X-S0
	02 7845-41014X-S0	Needle Bearing 55×45×38 滚针轴承	4		EP2019102502
13	01 3845-520013-00	Dust Seal ϕ 55×45×7 防尘圈	4		Superseded by 7845-41016X-S0
	02 7845-41016X-S0	Dust Seal ϕ 55×45×7 防尘圈	4		EP2019102502
14	3845-520014-00	Oil Cap 90°NPT 1/8 接头式压注油杯	4		
15	01 3845-520015-00	Oil Cap M6 直通式压注油杯	4		Superseded by 3115-52023X-10
	02 3115-52023X-10	Oil Cap M6 直通式压注油杯	4		EP2019102502
16	3845-520016-00	Connecting Link 连杆	2		
17	3845-520017-00	Shaft Snap Ring ϕ 16 轴用挡圈	4		
18	3845-520018-00	Link Pin 连杆销	4		
19	3845-520019-00	Washer 后桥支座调整垫	1		
20	3845-520020-00	Axle Support 后桥支座	2		
21	3845-520021-00	Bearing ϕ 65×70×40 钢背轴承	4		
22	3845-520037-00	Nut M16 1型六角螺母	2		
23	01 3845-520038-00	Lock Washer Φ 16 弹簧垫圈	2		Superseded by 7845-41021X-S0

	02	7845-41021X-S0	Lock Washer Φ16	弹簧垫圈	2		EP2019102502
--	----	----------------	-----------------	------	---	--	--------------


0402 Steering Axle

转向桥

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
24	3845-520039-00	Screw M16×45 内六角锥端紧定螺钉	2		
25	3845-520025-00	Oil Cap M10×1 直通式压注油杯	2		
26	3845-521000-00	Steering Cylinder See 0403 转向油缸	1		
27	3845-520026-00	Steering Knuckle-L 左转向节	1		
28	3845-520027-00	Axle Body 转向桥体	1		
29	3845-520028-00	Flat Washer φ 14 平垫圈	4		
30	01 3845-520029-00	Lock Washer φ 14 弹簧垫圈	4		Superseded by 3530-510035-10
	02 3530-510035-10	Lock Washer φ 14 弹簧垫圈	4		EP2019102502
31	3845-520030-00	Hex Bolts M14×1.5×45 六角螺栓	4		
32	3845-520031-00	Axle Shaft 转向节主销	2		
33	3845-520032-00	Cylindrical Pin Φ10 ×24 圆柱销	2		
34	3845-520033-00	Snap Ring 挡圈	4		
35	3845-520034-00	Washer 转向节调整垫	1		
36	3845-520035-00	Ball Trust Bearing 78×45×22 推力球轴承	2		
37	01 3845-520036-00	Joint Bearing GE16ES 关节轴承	2		Superseded by 3530-510030-10
	02 3530-510030-10	Joint Bearing GE16ES 关节轴承	2		EP2019102502

0403 Steering Cylinder

转向油缸

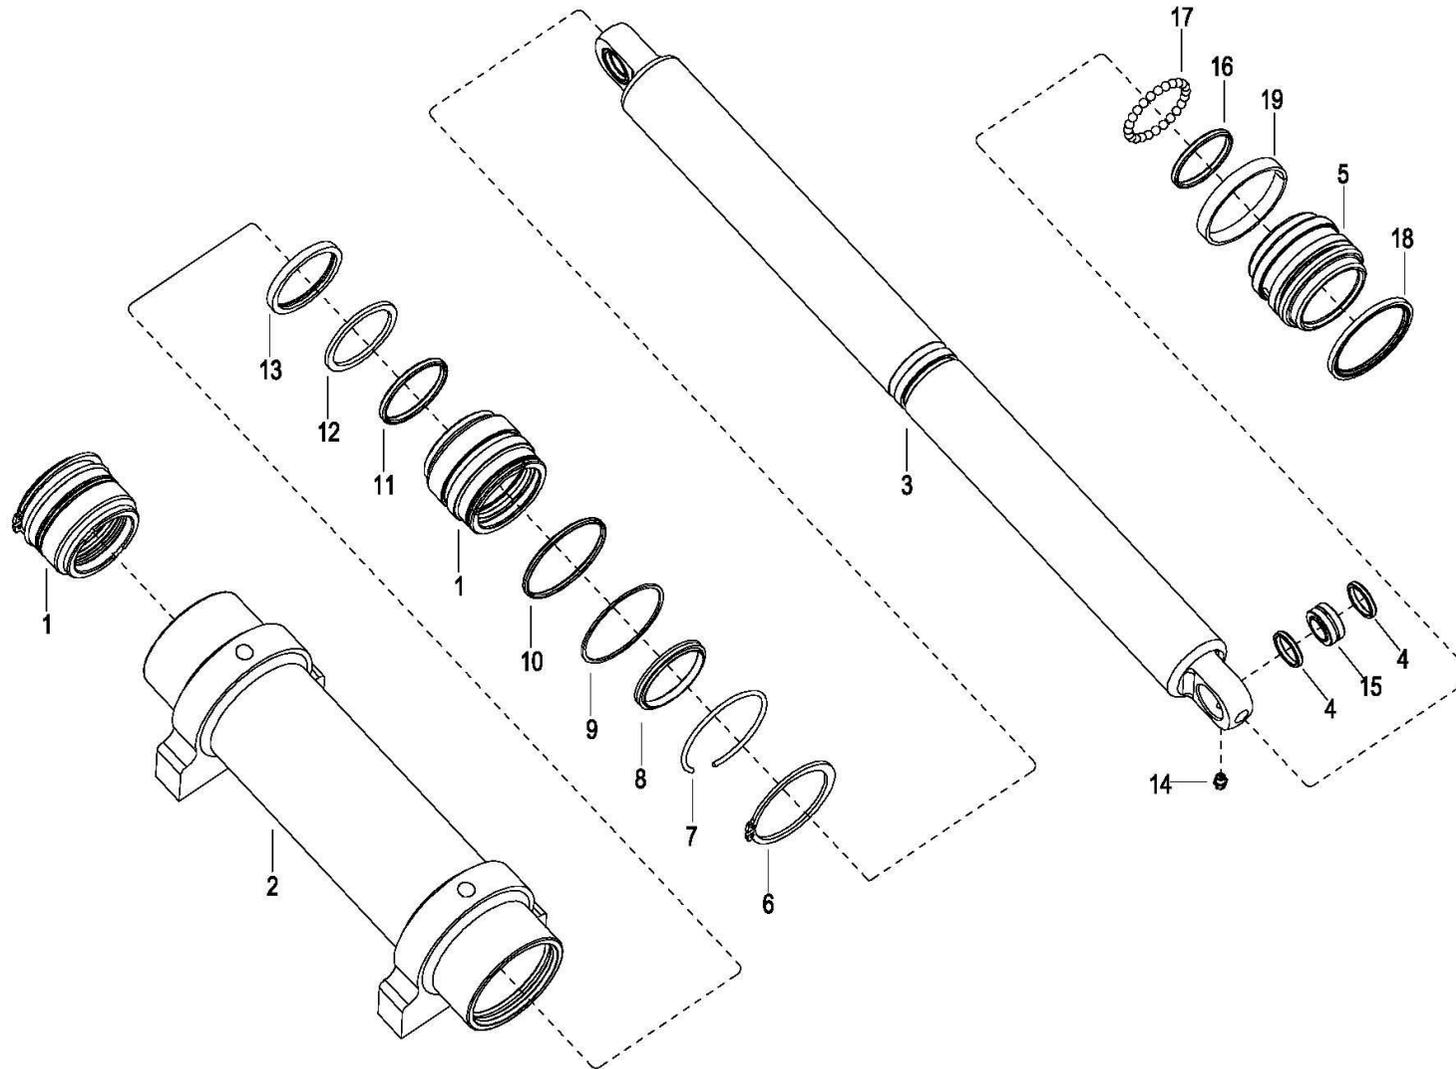


0403 Steering Cylinder

转向油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-521001-00	Cylinder Sleeve 缸套	2		Parts being phased out
2	3845-521002-00	Cylinder Body 缸筒结构件	1		Parts being phased out
3	3845-521003-00	Piston Rod 活塞杆	1		Parts being phased out
4	3845-521004-00	Snap Ring 挡圈	4		Parts being phased out
5	3845-521005-00	Piston 活塞	1		Parts being phased out
6	3845-521006-00	Colla D75 轴用弹性挡圈	2		Parts being phased out
7	3845-521007-00	Seal D85 孔用钢丝挡圈	2		Parts being phased out
8	3845-521008-00	Dust Seal 50×58×5/6.5 LBH 防尘圈	2		
9	3845-521009-00	Snap Ring 80×75×1.5 挡圈	2		
10	3845-521010-00	O-Ring D80×3.1 O型圈	2		
11	3845-521011-00	O-Ring D50×3.65 O型圈	2		
12	3845-521012-00	Snap Ring 50×60×3 挡圈	2		
13	3845-521013-00	Snap Ring 50×60×6 T605活塞杆用密封圈	2		
14	3845-521014-00	Oil Cap M6 直通式压注油杯	2		Parts being phased out
15	3845-521015-00	Bearing GE16ES 关节轴承	2		Parts being phased out
16	3845-521016-00	O-Ring D43.7×3.65 O型圈	1		
17	3845-521017-00	Ball SΦ6 钢球	24		Parts being phased out
18	3845-521018-00	Ring 80×64.5×6.3 T54活塞密封圈	1		
19	3845-521019-00	Wearing 80×75×15 GBS 支撑环	1		
KIT	3845-3ZXG	Seal kit for Steering cylinder 转向油缸修理包 (Include (包含 item8,9,10,11,12,13,16,18,19 8,9,10,11,12,13,16,18,19))	1		

0404 Back wheels Assembly

后轮装配总成

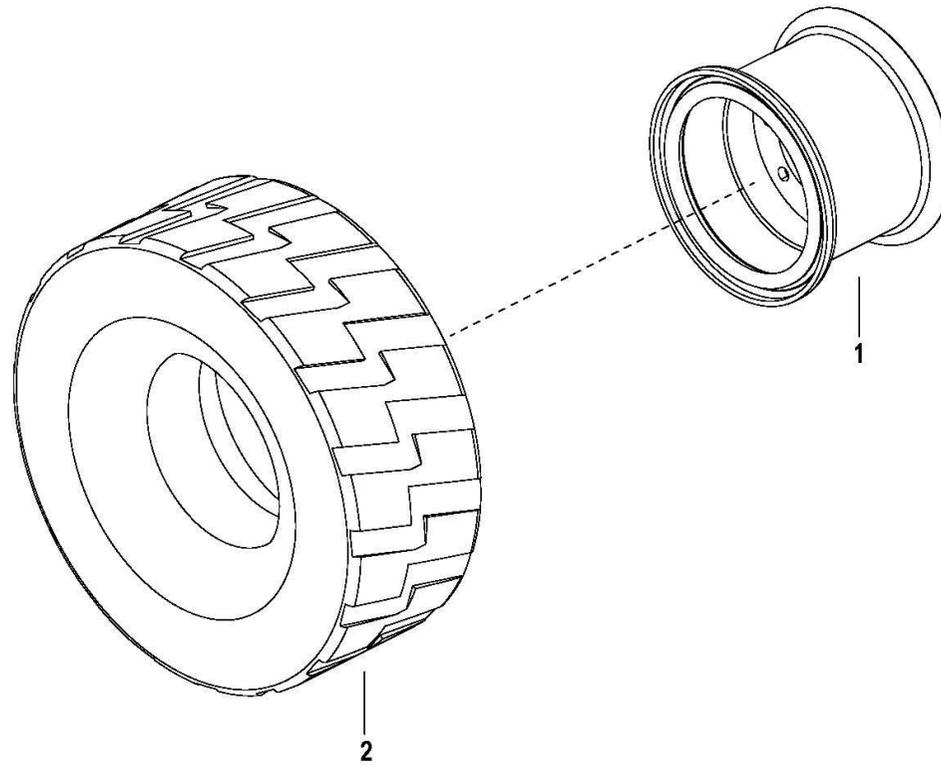

0404 Back wheels Assembly

后轮装配总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-511000-00	Back Rim 后轮辋总成	1		6.00E-9
1	3845-511000-A0	Back Rim 后轮辋总成	1		8.00G-12
2	3845-510001-00	Back Tires 后轮胎	1		21*8-9
2	3845-510001-A0	Back Tires 后轮胎	1		23*10-12


5000

Electrical System

电器系统

0501 Electrical Assembly

控制器装配总成

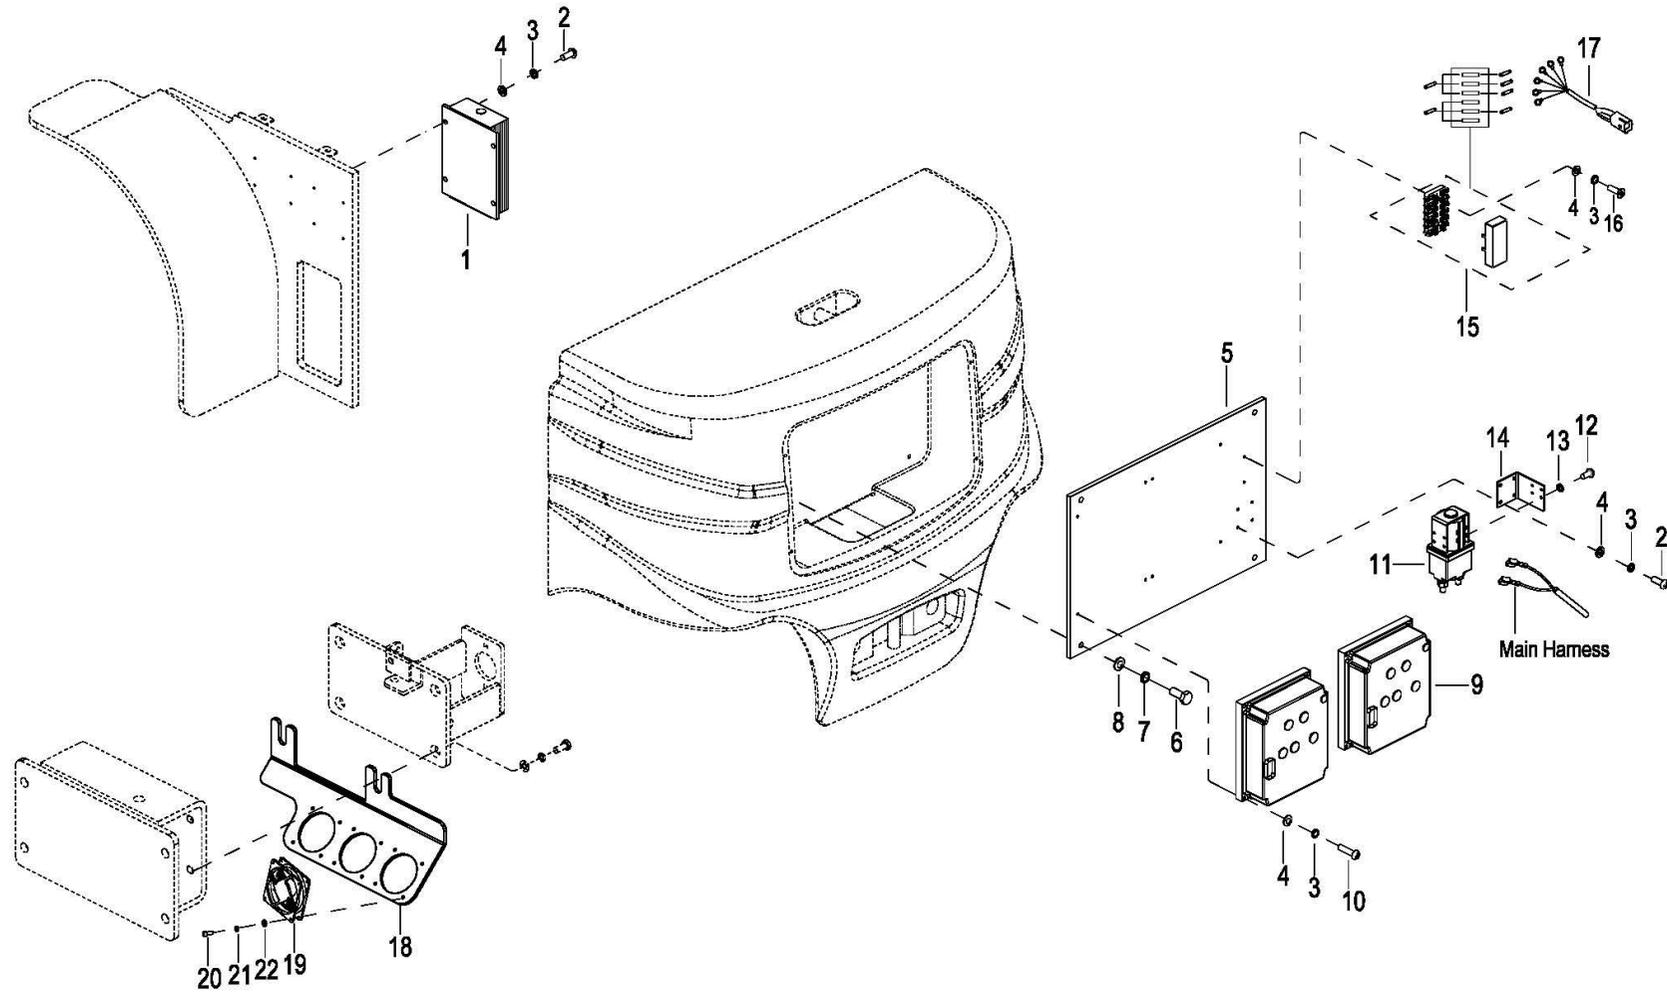


0501 Electrical Assembly

控制器装配总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3530-642000-00	DCDC Converter DC-DC 转换器	1		
2	0000-000594-00	Screw M6×16 螺钉	8		
3	0000-000056-00	Lock Washer ø6 弹垫	14		
4	0000-000544-00	Flat Washer ø6 平垫	14		
5	3845-640001-00	Controller Plate 控制器安装铝板	1		
6	0000-000242-00	Bolt M8×16 螺栓	4		
7	0000-000159-00	Lock Washer ø8 弹垫	4		
8	0000-000540-00	Flat Washer ø8 平垫	4		
9	3845-641000-00-20	Traction Controller 行走控制器	1		
9	3845-641000-00-30	Pump Controller 泵控制器	1		
10	0000-000595-00	Screw M6×30 螺钉	4		
11	3525-642000-00	Contactator 接触器	1		
12	0000-000598-00	Screw M5×10 螺钉	4		
13	0000-000206-00	Lock Washer ø5 弹垫	4		
14	3525-640002-00	Contacter Bracket 接触器安装板	1		
15	3525-644000-00	Fuse Box 保险丝盒	1		
16	0000-000327-00	Screw M6×16 螺钉	2		
17	3525-633000-00	Fuse Harness 保险丝线束	1		
18	3845-640002-00	Fan Bracket 风扇支架	1	1311500660-	BGD-22-002763
19	3132-430001-0A	Fan 风扇	3	1311500660-	BGD-22-002763
20	302000000329	Screw M4x30 螺钉	12	1311500660-	
21	304000000048	Lock Washer ø4 弹垫	12	1311500660-	
22	304000000038	Flat Washer ø4 平垫	12	1311500660-	

0502 Wiring Harness Assembly

线束总成

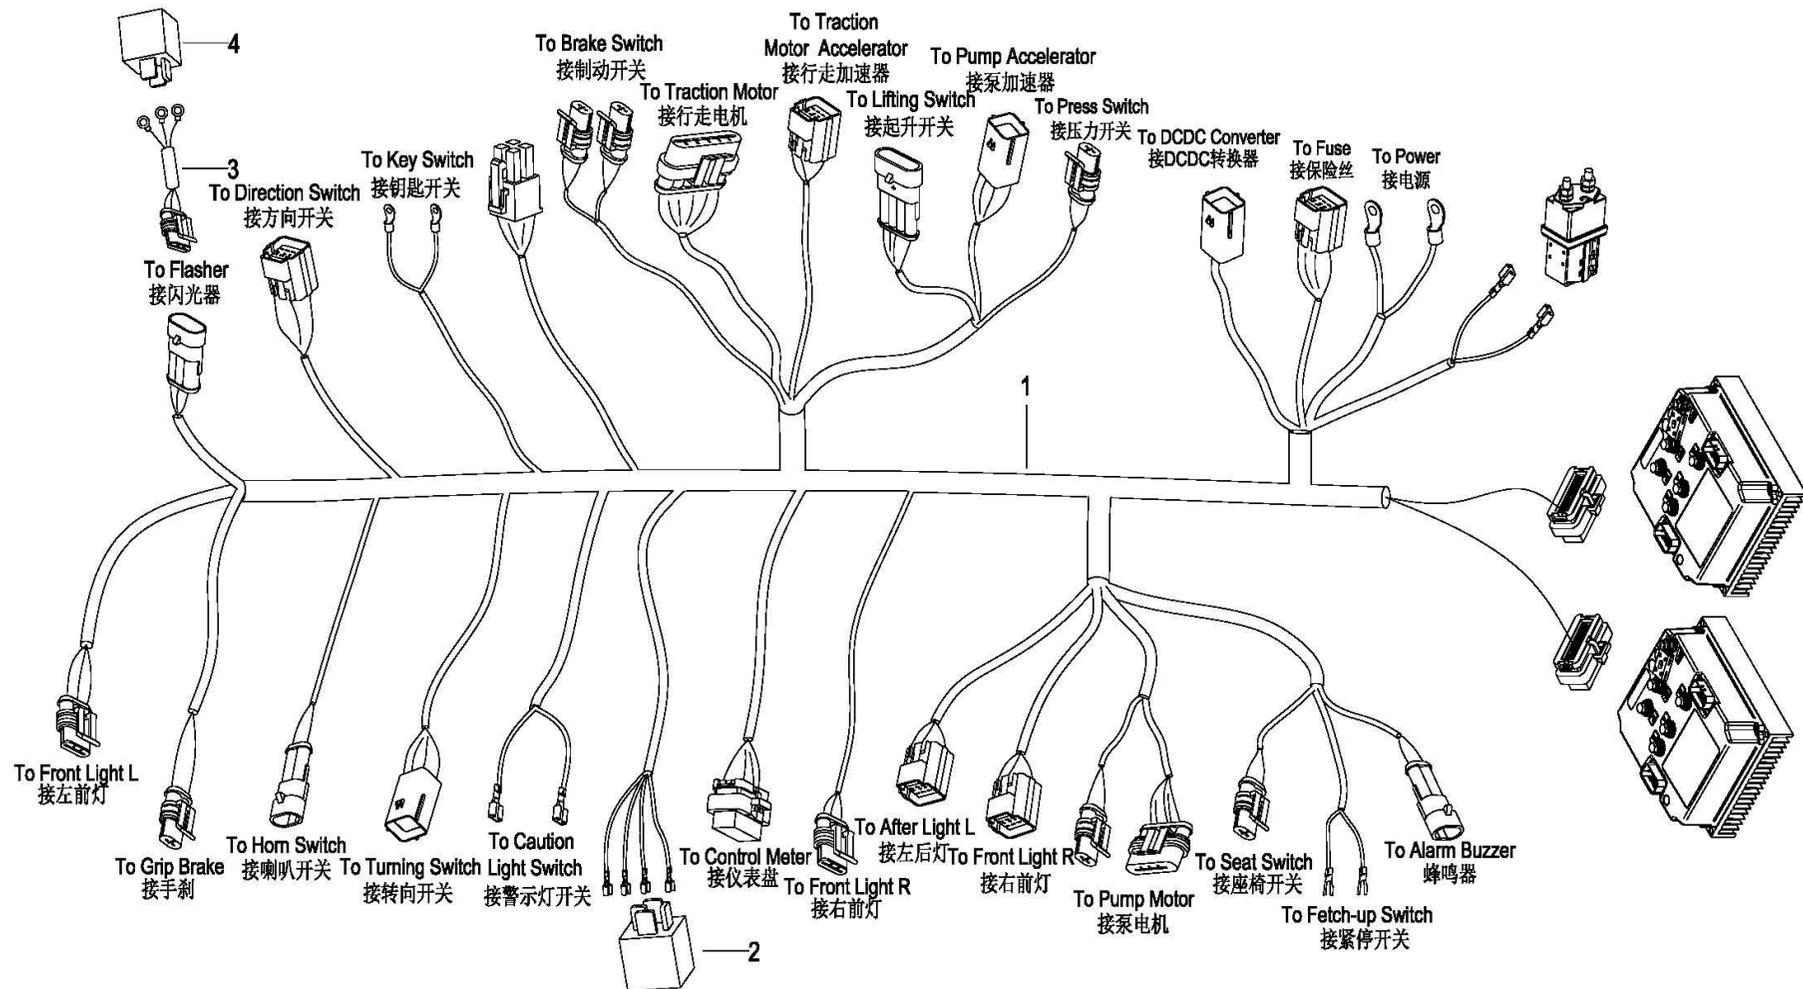


0502 Wiring Harness Assembly

线束总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-631000-00	Main Harness 主线束	1		
2	3525-683000-00	Light Relay 大灯继电器	1		
3	3525-634000-00	Flasher Harness 闪光器线束	1		
4	3218-600600-00	Flasher 闪光器	1		

0503 Cable Assembly

电缆总成

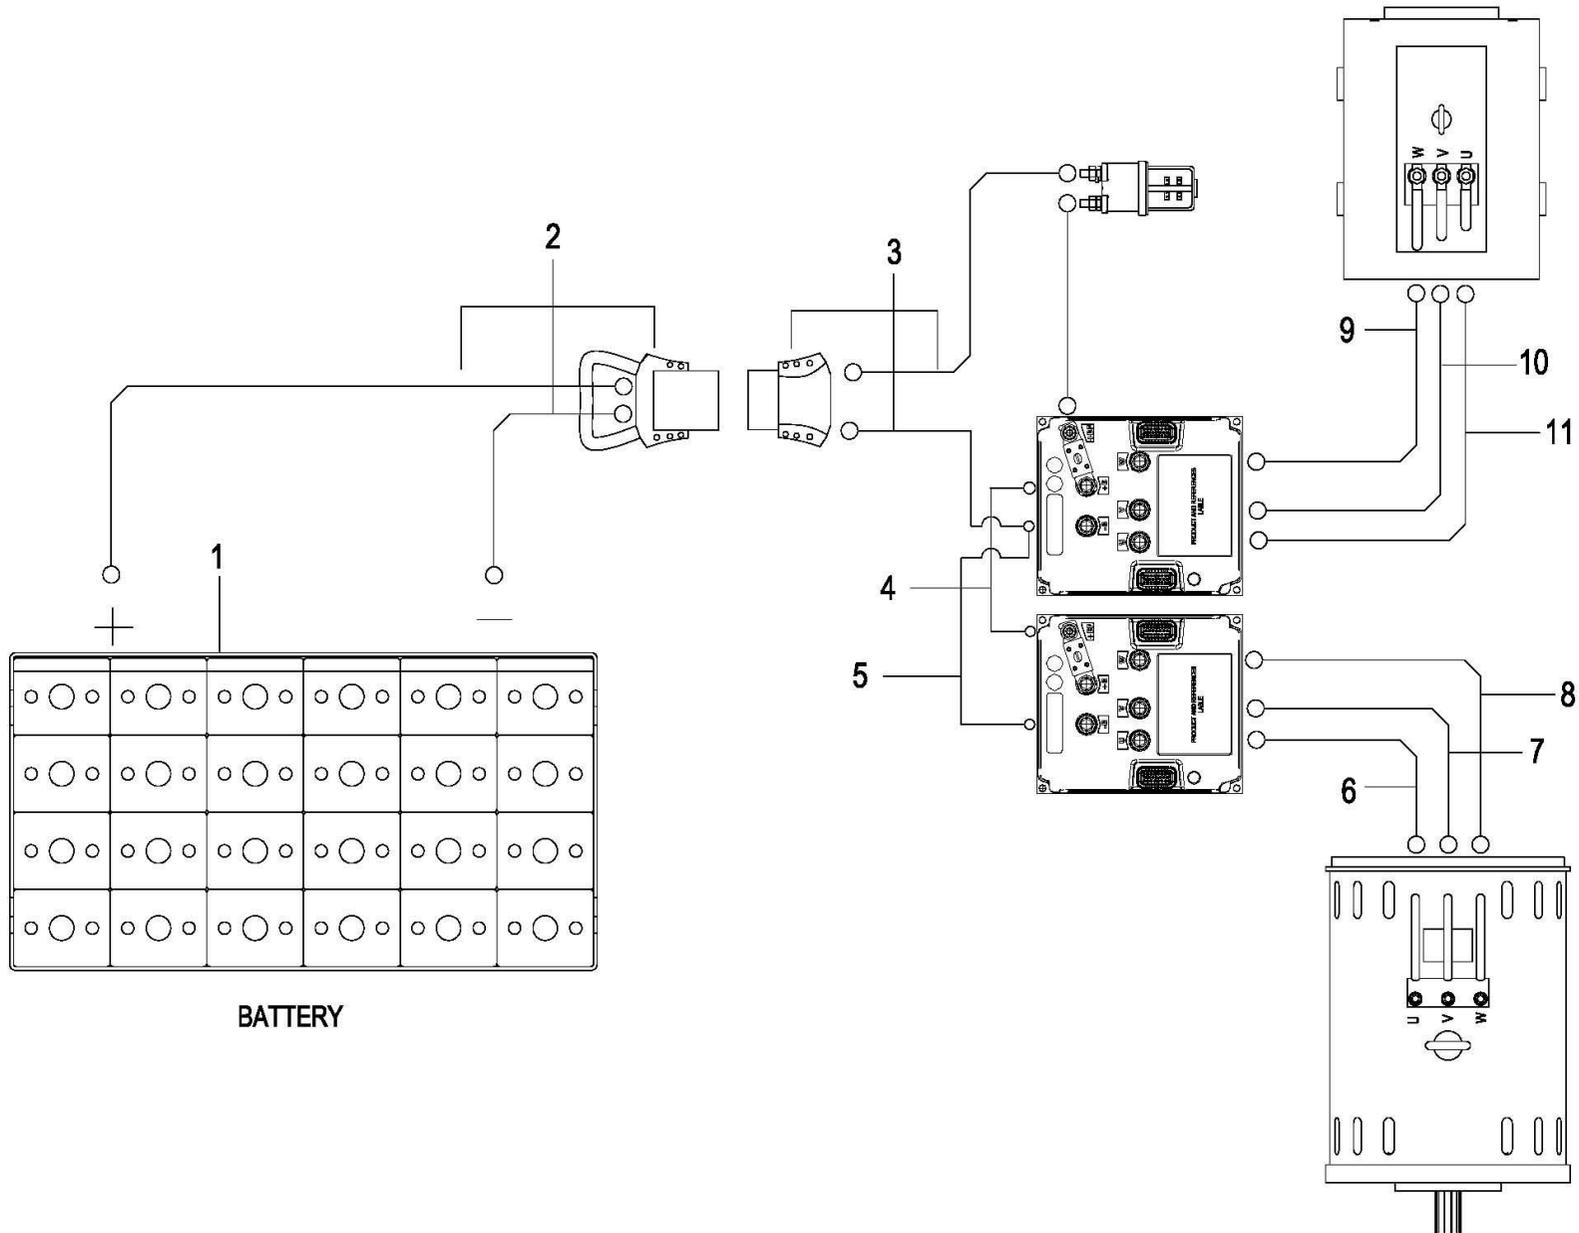

0503 Cable Assembly

电缆总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-610000-00	Battery Assembly 电瓶总成	1		
2	3525-621000-00	Battery Cable 电瓶电缆	1		
3	3530-621000-00	Power Cable 电源电缆	1		
4	3845-620001-00	Controller Cable + 控制器正极电缆	1		
5	3845-620002-00	Controller Cable - 控制器负极电缆	1		
6	3530-620004-00	Pump Power Cable U 泵电机 U 电缆	1		
7	3530-620005-00	Pump Power Cable V 泵电机 V 电缆	1		
8	3530-620006-00	Pump Power Cable W 泵电机 W 电缆	1		
9	3530-620003-00	Motor Cable W 牵引电机 W 电缆	1		
10	3530-620002-00	Motor Cable V 牵引电机 V 电缆	1		
11	3530-620001-00	Motor Cable U 牵引电机 U 电缆	1		


6000

Hydraulic System

液压系统

0601 Hydraulic System

液压管路

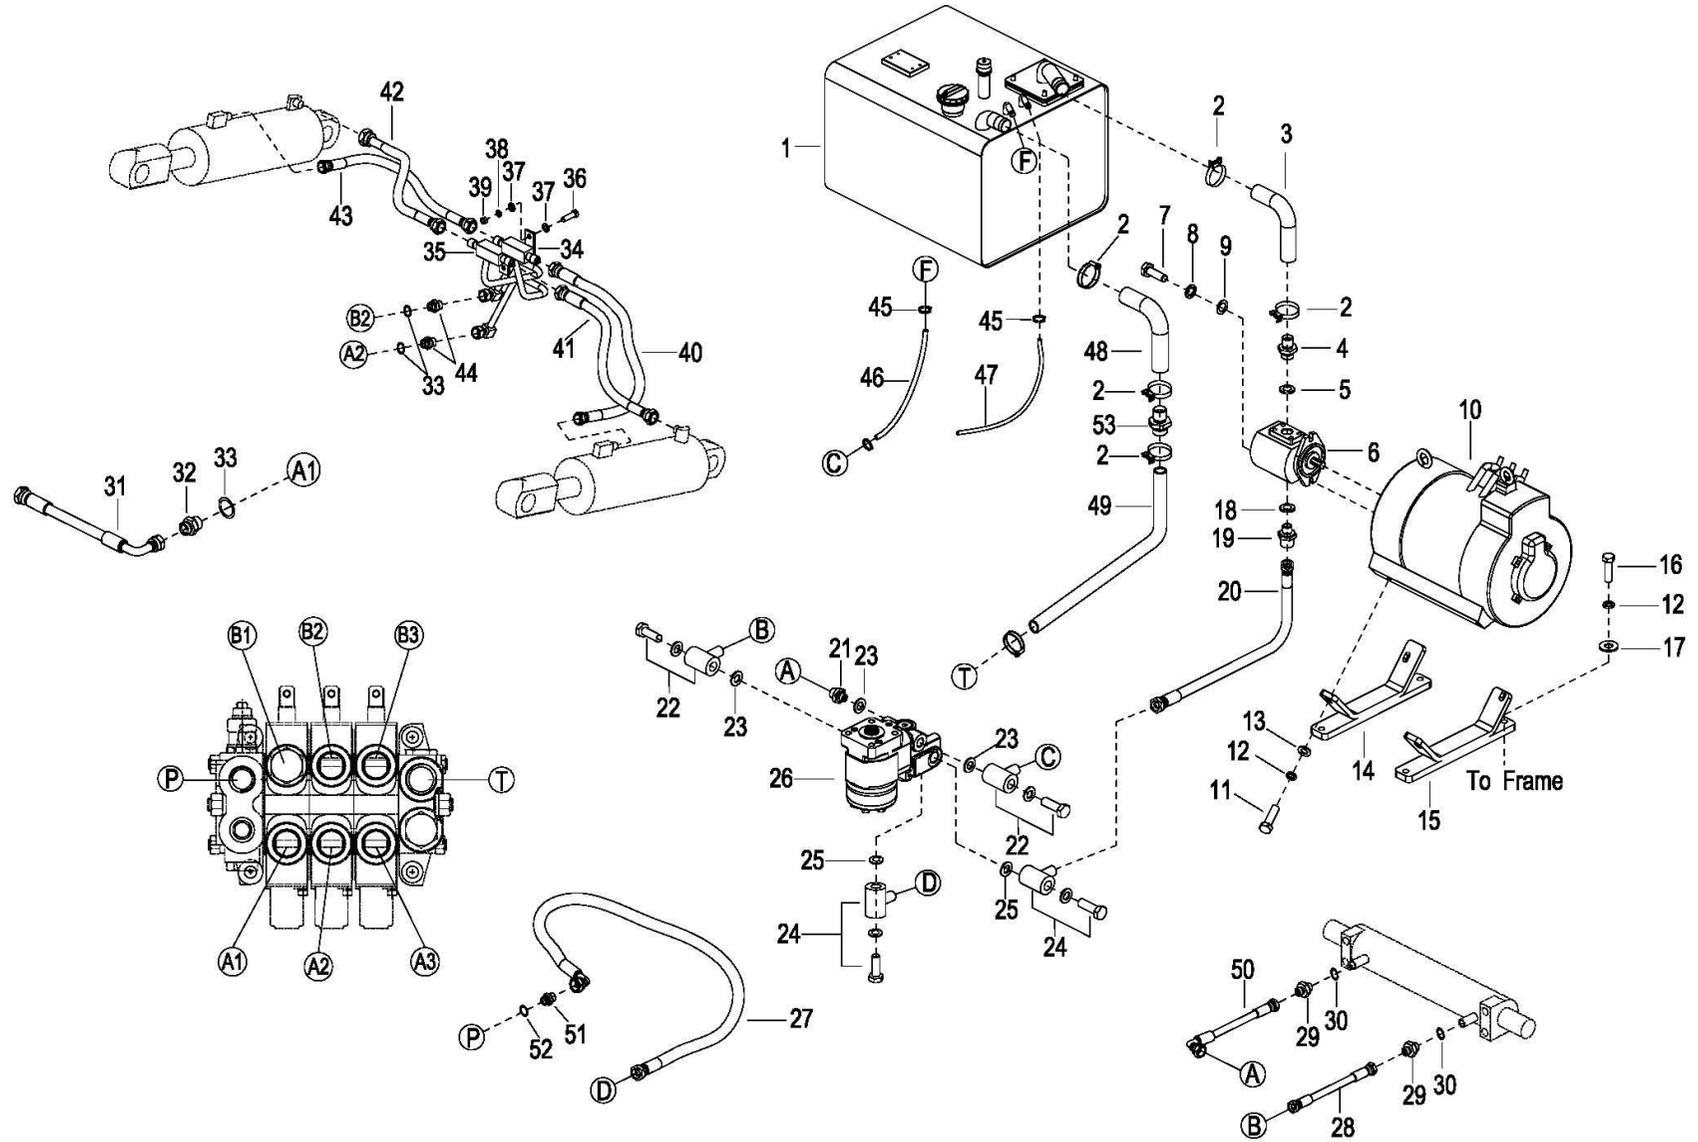

0601 Hydraulic System

液压管路

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-720000-00	Oil Box See 0602 油箱总成	1		
2	0000-000471-00	Clip Φ32-40 双钢丝卡箍	6		
3	3815-700001-00	Oil suction pipe 吸油管	1		
4	2713-333200-00	Connector M33×2-ø32 直通接头	1		
5	0000-000916-00	O-Ring ø30×2.65 O 型圈	1		
6	3845-750000-00	Gear Pump 齿轮泵	1		
7	0000-000307-00	Bolt M10×1.25×30 螺栓	2		
8	0000-000063-00	Lock Washer Φ10 弹垫	2		
9	0000-000007-00	Flat Washer Φ10 平垫	2		
10	3845-660000-A0	Pump Motor 泵电机	1		
11	0000-000308-00	Bolt M12×1.25×25 螺栓	4		
12	0000-000060-00	Lock Washer Φ12 弹垫	8		
13	0000-000373-00	Flat Washer Φ12 平垫	4		
14	3845-130000-00	Bracket B 泵电机固定支架 B	1		
15	3845-120000-00	Bracket A 泵电机固定支架 A	1		
16	0000-000286-00	Bolt M12×60 螺栓	4		
17	0000-000438-00	Flat Washer Φ12 大平垫	4		
18	0000-000345-00	O-Ring 26×2.4 O 型圈	1		
19	2701-272700-00	Connector M27×2-M27×1.5 直通接头	1		
20	3845-713000-30	Hose,Pump to Redirector 泵到转向器油管	1		
21	2701-181600-00	Connector M18×1.5-M16×1.5 直通接头	1		
22	2706-181600-00	Connector M18×1.5-M16×1.5 铰接接头	2		
23	306001000003	Washer Φ 18 组合密封垫圈	5		
24	2706-202700-00	Connector M20×1.5-M27×1.5 铰接接头	2		
25	306001000004	Washer Φ 20 组合密封垫圈	4		

0601 Hydraulic System

液压管路

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
26	3845-740000-00	Redirector 转向器	1		
27	3845-719000-30	Hose,Redirector to Valve 转向器到多路阀	1		
28	3845-714000-00	Redirector to Steering 转向器到转向桥	1		
29	2701-161600-00	Connector M16×1.5-M16×1.5 直通接头	2		
30	0000-000637-00	O-Ring 13.2×2.65 O型圈	2		
31	3845-715000-30	Lifting Hose 起升油管	1		
32	2701-302700-00	Connector M30×2-M27×1.5 直通接头	1		
33	0000-000345-00	O-Ring 26×2.4 O型圈	3		
34	3845-712000-30	Backward Pipe 后倾硬管组件	1		
35	3845-711000-30	Forward Pipe 前倾硬管组件	1		
36	0000-000255-00	Bolt M8×20 螺栓	2		
37	0000-000540-00	Flat Washer Φ8 平垫	4		
38	0000-000159-00	Lock Washer Φ8 弹垫	2		
39	0000-000550-00	Nut M8 螺母	2		
40	3845-717000-30	Backward Hose - L 左后倾油管	1		
41	3845-716000-30	Forward Hose - L 左前倾油管	1		
42	3845-718000-30	Forward Hose - R 右前倾油管	1		
43	3845-718000-30	Backward Hose - R 右后倾油管	1		
44	2701-301600-00	Connector M30×2-M16×1.5 直通接头	2		
45	0000-000468-00	Clip ø10-16 卡箍	3		
46	3525-700004-00	Hose,Return 转向器回油管	1		
47	3525-700005-00	Mast, Return hose 门架回油管	1		
48	3525-700002-00	Hose,Backward Return 后回油管	1		
49	3525-700001-00	Hose,Forward Return 多路阀前回油管	1		
50	3845-715000-00	Redirector to Steering 转向器到转向桥	1		


0601 Hydraulic System

液压管路

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
51	2702-342700-00	Connector G3/4-M27×1.5 直通接头	1		
52	0000-001384-10	O-Ring 25×2.65 O型圈	1		
53	3845-721001-00	Joint 过渡接头	1		

0602 Oil Tank

油箱

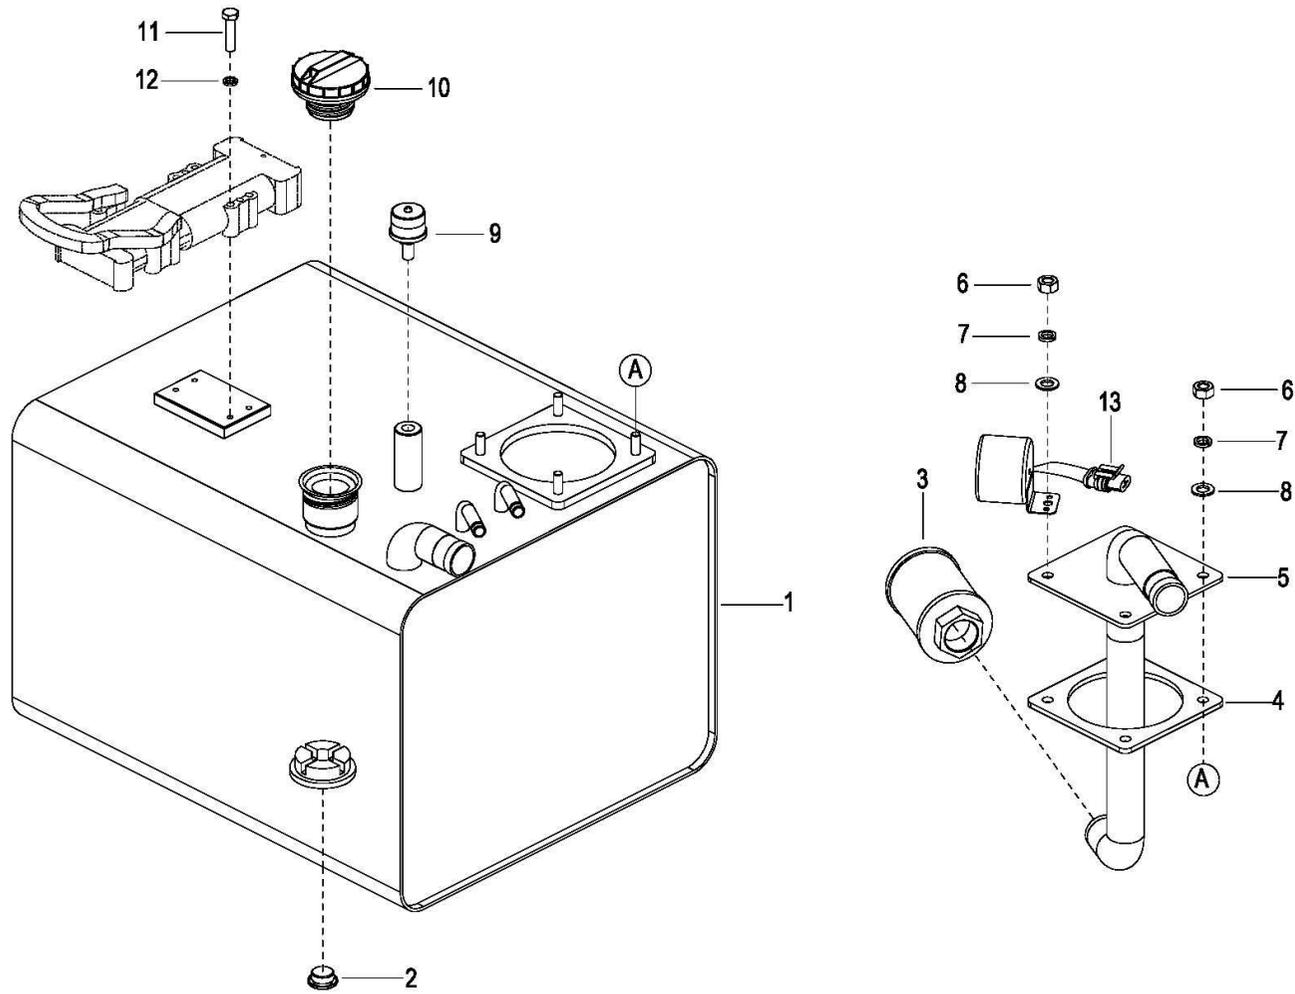

0602 Oil Tank


油箱

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-721000-00	Oil Tank 油箱焊件	1		
2	3525-710002-00	Plug Drain 放油螺栓塞	1		
3	3218-110008-00	Filter 滤油器	1		
4	3120-520001-00	Gasket 密封垫	1		
5	3845-722000-00	Filler Flap 油箱盖焊件	1		
6	0000-000550-00	Nut M8 螺母	4		
7	0000-000159-00	Lock Washer Φ 8 弹垫	4		
8	0000-000540-00	Flat Washer Φ 8 平垫	4		
9	3125-713000-00	Breather 呼吸器	1		
10	3218-112002-00	Cap 加油盖	1		
11	0000-000276-00	Bolt M6 \times 45 螺栓	4		
12	0000-000056-00	Lock Washer Φ 6 弹垫	4		
13	3525-638000-00	Buzzer Harness 蜂鸣器线束	1		

7000
Lifting System
起升系统

0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

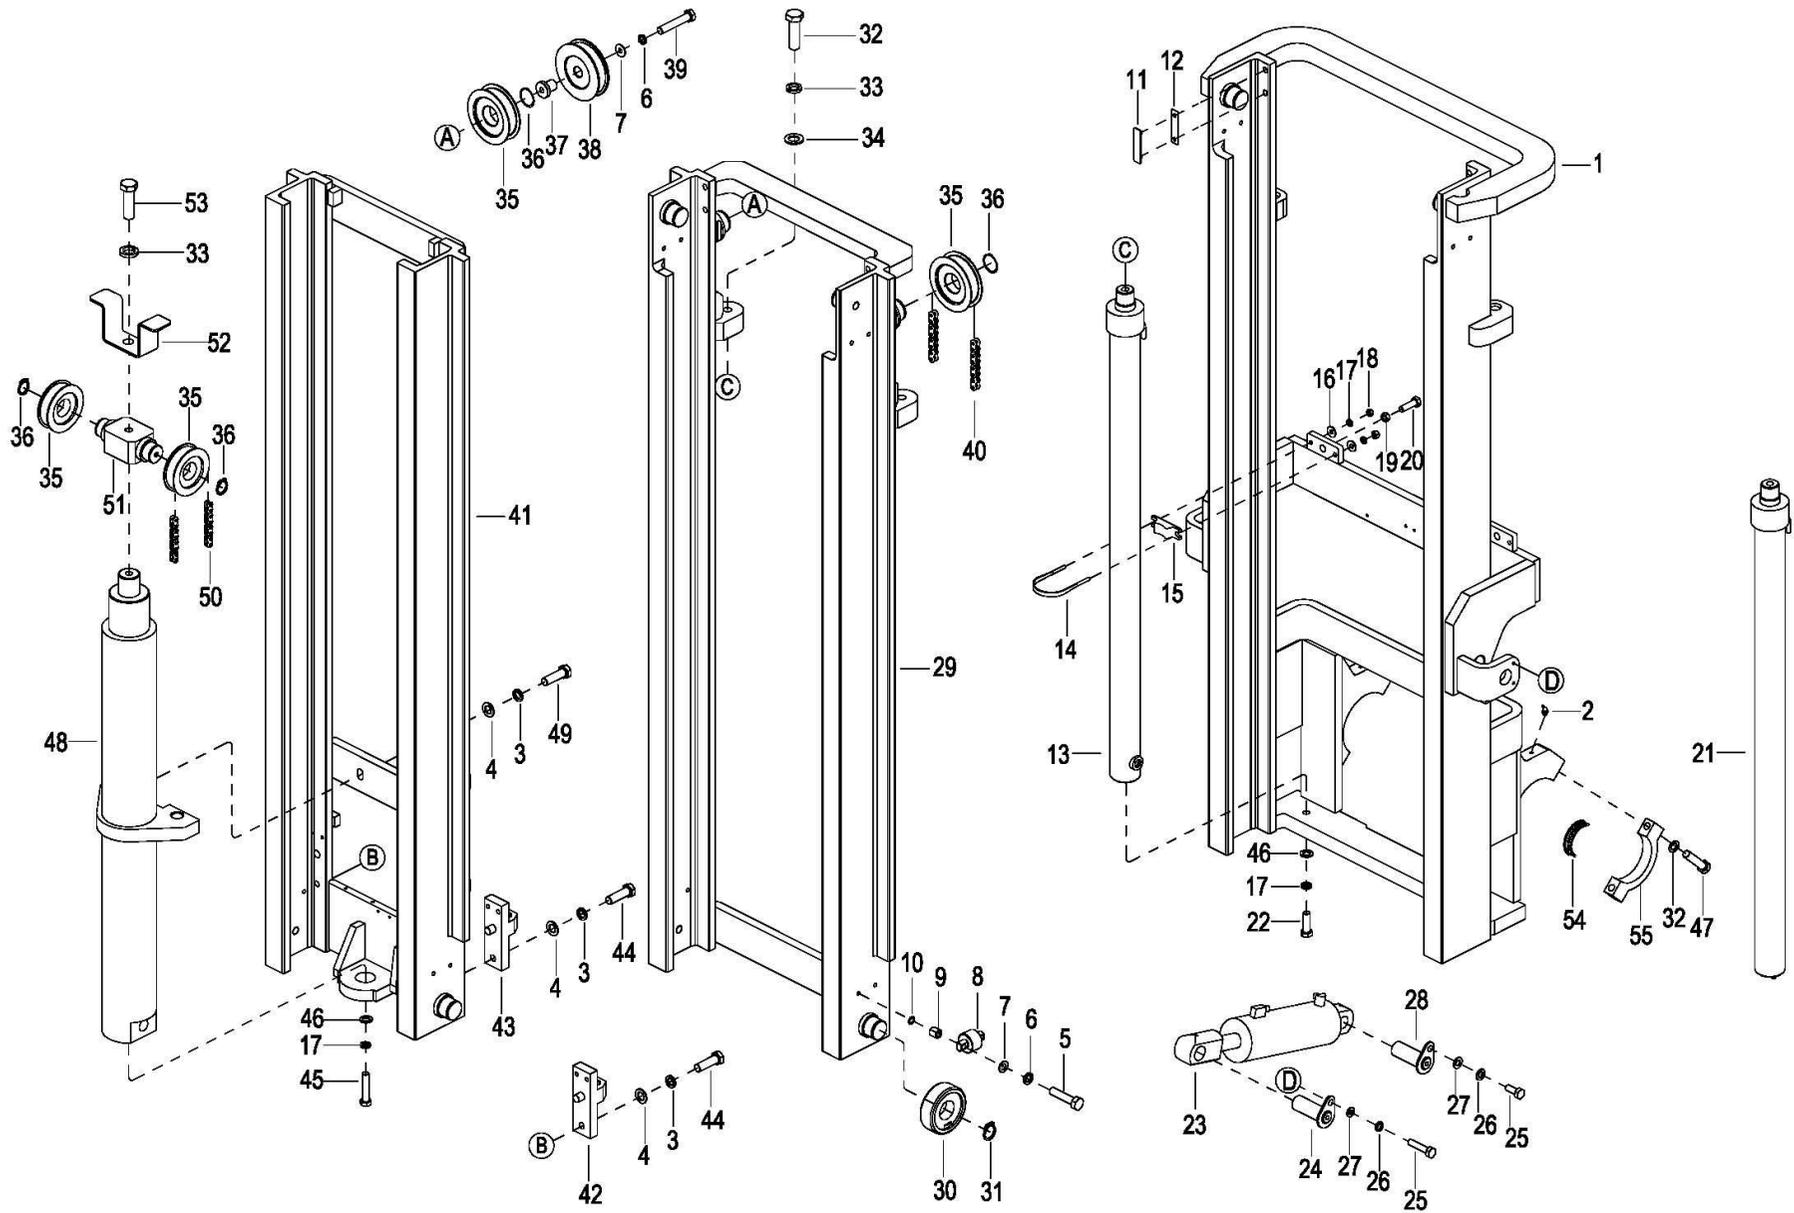

0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-810000-30-01	Outside Mast 外门架	1		H=3920mm
1	3845-810000-30-02	Outside Mast 外门架	1		H=4350mm
1	3845-810000-30-03	Outside Mast 外门架	1		H=4500mm
1	3845-810000-30-04	Outside Mast 外门架	1		H=4700mm
1	3845-810000-30-05	Outside Mast 外门架	1		H=4800mm
1	3845-810000-30-06	Outside Mast 外门架	1		H=5000mm
1	3845-810000-30-07	Outside Mast 外门架	1		H=5400mm
1	3845-810000-30-08	Outside Mast 外门架	1		H=6000mm
2	0000-000588-00	Grease Cup 油杯	1		
3	0000-000191-00	Lock Washer ϕ 16 弹垫	4		
4	0000-000541-00	Flat Washer ϕ 16 平垫	4		
5	0000-001150-00	Bolt M12x1.5x60 螺栓	16		
6	0000-000060-00	Lock Washer ϕ 12 垫圈	4		
7	0000-000554-00	Flat Washer ϕ 12 平垫	4		
8	SR60N50-1-00	Side Roller II 侧滚轮 II	6		
9	3845-800012-30	Adjusting Sleeve 调整套	12		
10	3845-800013-30	Sleeve Washer 调整套垫	Req.		
11	3845-800010-30	Nylon Guide Plate 尼龙导板	4		
12	3845-800011-30	Guide Plate Washer 导板调整垫	Req.		
13	3845-870000-30-01	Lift Cylinder R 右起升油缸	1		H=3920mm
13	3845-870000-30-02	Lift Cylinder R 右起升油缸	1		H=4350mm
13	3845-870000-30-03	Lift Cylinder R 右起升油缸	1		H=4500mm
13	3845-870000-30-04	Lift Cylinder R 右起升油缸	1		H=4700mm
13	3845-870000-30-05	Lift Cylinder R 右起升油缸	1		H=4800mm
13	3845-870000-30-06	Lift Cylinder R 右起升油缸	1		H=5000mm

0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
13	3845-870000-30-07	Lift Cylinder R 右起升油缸	1		H=5400mm
13	3845-870000-30-08	Lift Cylinder R 右起升油缸	1		H=6000mm
14	3845-800007-30	U Bolt - Side 边缸 U 型螺栓	2		
15	3845-800020-30	Support Block 提升缸上支撑块	2		40CD100001
16	0000-000175-00	Flat Washer ϕ 10 大平垫	4		
17	0000-000063-00	Lock Washer ϕ 10 弹垫	6		
18	0000-000315-00	Nut M10x1.25 螺母	4		
19	0000-000237-00	Nut M16x1.5 螺母	2		
20	0000-000449-00	Bolt M16x1.5x40 螺栓	2		
21	3845-860000-30-01	Lift Cylinder L 左起升油缸	1		H=3920mm
21	3845-860000-30-02	Lift Cylinder L 左起升油缸	1		H=4350mm
21	3845-860000-30-03	Lift Cylinder L 左起升油缸	1		H=4500mm
21	3845-860000-30-04	Lift Cylinder L 左起升油缸	1		H=4700mm
21	3845-860000-30-05	Lift Cylinder L 左起升油缸	1		H=4800mm
21	3845-860000-30-06	Lift Cylinder L 左起升油缸	1		H=5000mm
21	3845-860000-30-07	Lift Cylinder L 左起升油缸	1		H=5400mm
21	3845-860000-30-08	Lift Cylinder L 左起升油缸	1		H=6000mm
22	301000000072	Bolt M10x1x60 螺栓	2		
23	3845-760000-00	Tilt Cylinder 倾斜油缸	2		
24	3845-800014-30	Tilt Cylinder Front Shaft 倾斜油缸前安装销轴	2		
25	0000-000255-00	Bolt M8x20 螺栓	6		
26	0000-000159-00	Lock Washer ϕ 8 弹垫	4		
27	0000-000540-00	Flat Washer ϕ 8 平垫	6		
28	3845-860000-00	Tilt Cylinder Back Shaft 倾斜油缸后安装销轴	2		
29	3845-820000-30-01	Middle Mast 中门架	1		H=3920mm

0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
29	3845-820000-30-02	Middle Mast 中门架	1		H=4350mm
29	3845-820000-30-03	Middle Mast 中门架	1		H=4500mm
29	3845-820000-30-04	Middle Mast 中门架	1		H=4700mm
29	3845-820000-30-05	Middle Mast 中门架	1		H=4800mm
29	3845-820000-30-06	Middle Mast 中门架	1		H=5000mm
29	3845-820000-30-07	Middle Mast 中门架	1		H=5400mm
29	3845-820000-30-08	Middle Mast 中门架	1		H=6000mm
30	MG50A2-1T-00	Main Roller 主滚轮	8		
31	305001000021	Axle Circlip D50 轴用卡簧	8		
32	301000000067	Bolt M20x1.5x65 螺栓	2		
33	0000-000266-00	Lock Washer ø20 弹垫	3		
34	0000-000581-00	Flat Washer ø20 平垫	2		
35	CG55R1-12-00	Chain Pulley 链轮	4		
36	0000-000903-00	Axle Circlip D55 轴用卡簧	4		
37	3845-800002-30	Tube Axle 上管轮轴	1		
38	3845-800016-30	Pulley 滑轮	1		
39	301000000065	Bolt M12x65 螺栓	1		
40	3845-801000-30-01	Chain-L 长链条总成	2		3920mm,77p
40	3845-801000-30-02	Chain-L 长链条总成	2		4350mm,83p
40	3845-801000-30-03	Chain-L 长链条总成	2		4500mm,85p
40	3845-801000-30-04	Chain-L 长链条总成	2		4700mm,89p
40	3845-801000-30-05	Chain-L 长链条总成	2		4800mm,89p
40	3845-801000-30-06	Chain-L 长链条总成	2		5000mm,93p
40	3845-801000-30-07	Chain-L 长链条总成	2		5400mm,97p
40	3845-801000-30-08	Chain-L 长链条总成	2		6000mm,107p

0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
41	3845-830000-30-01	Inside Mast 内门架	1		H=3920mm
41	3845-830000-30-02	Inside Mast 内门架	1		H=4350mm
41	3845-830000-30-03	Inside Mast 内门架	1		H=4500mm
41	3845-830000-30-04	Inside Mast 内门架	1		H=4700mm
41	3845-830000-30-05	Inside Mast 内门架	1		H=4800mm
41	3845-830000-30-06	Inside Mast 内门架	1		H=5000mm
41	3845-830000-30-07	Inside Mast 内门架	1		H=5400mm
41	3845-830000-30-08	Inside Mast 内门架	1		H=6000mm
42	3845-800009-30	Inside Chain Bracket-R 内门架右链条座	1		
43	3845-800008-30	Inside Chain Bracket-L 内门架左链条座	1		
44	301000000068	Bolt M16x1.5x65 螺栓	4		
45	301000000069	Bolt M10x1x45 螺栓	1		
46	0000-000547-00	Flat Washer ϕ 10 平垫	1		
47	0000-000452-00	Bolt M20x90 螺栓	4		
48	3845-850000-30 -01	Lift Cylinder F 前起升油缸	1		H=3920mm
48	3845-850000-30 -02	Lift Cylinder F 前起升油缸	1		H=4350mm
48	3845-850000-30 -03	Lift Cylinder F 前起升油缸	1		H=4500mm
48	3845-850000-30 -04	Lift Cylinder F 前起升油缸	1		H=4700mm
48	3845-850000-30 -05	Lift Cylinder F 前起升油缸	1		H=4800mm
48	3845-850000-30 -06	Lift Cylinder F 前起升油缸	1		H=5000mm
48	3845-850000-30 -07	Lift Cylinder F 前起升油缸	1		H=5400mm
48	3845-850000-30 -08	Lift Cylinder F 前起升油缸	1		H=6000mm
49	301003000035	Bolt M16x1.5x45 螺栓	2		
50	3845-802000-30-01	Chain-S 短链条总成	2		3920mm,55p
50	3845-802000-30-02	Chain-S 短链条总成	2		4350mm,59p


0701 Full free 3-Stage Mast Assembly

全自由三级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
50	3845-802000-30-03	Chain-S 短链条总成	2		4500mm,61p
50	3845-802000-30-04	Chain-S 短链条总成	2		4700mm,61p
50	3845-802000-30-05	Chain-S 短链条总成	2		4800mm,63p
50	3845-802000-30-06	Chain-S 短链条总成	2		5000mm,65p
50	3845-802000-30-07	Chain-S 短链条总成	2		5400mm,67p
50	3845-802000-30-08	Chain-S 短链条总成	2		6000mm,71p
51	3845-800001-30	Chain Shaft 链轮座	1		
52	3845-800021-30	Chain Baffle 链条挡板	1		
53	301000000070	Bolt M20x1.5x80 螺栓	1		
54	3845-800019-30	Mast BushingΦ165x150 门架轴瓦	2		
55	3845-100006-00	Cap 轴承盖	2		

0702 Oil Pipe

油管

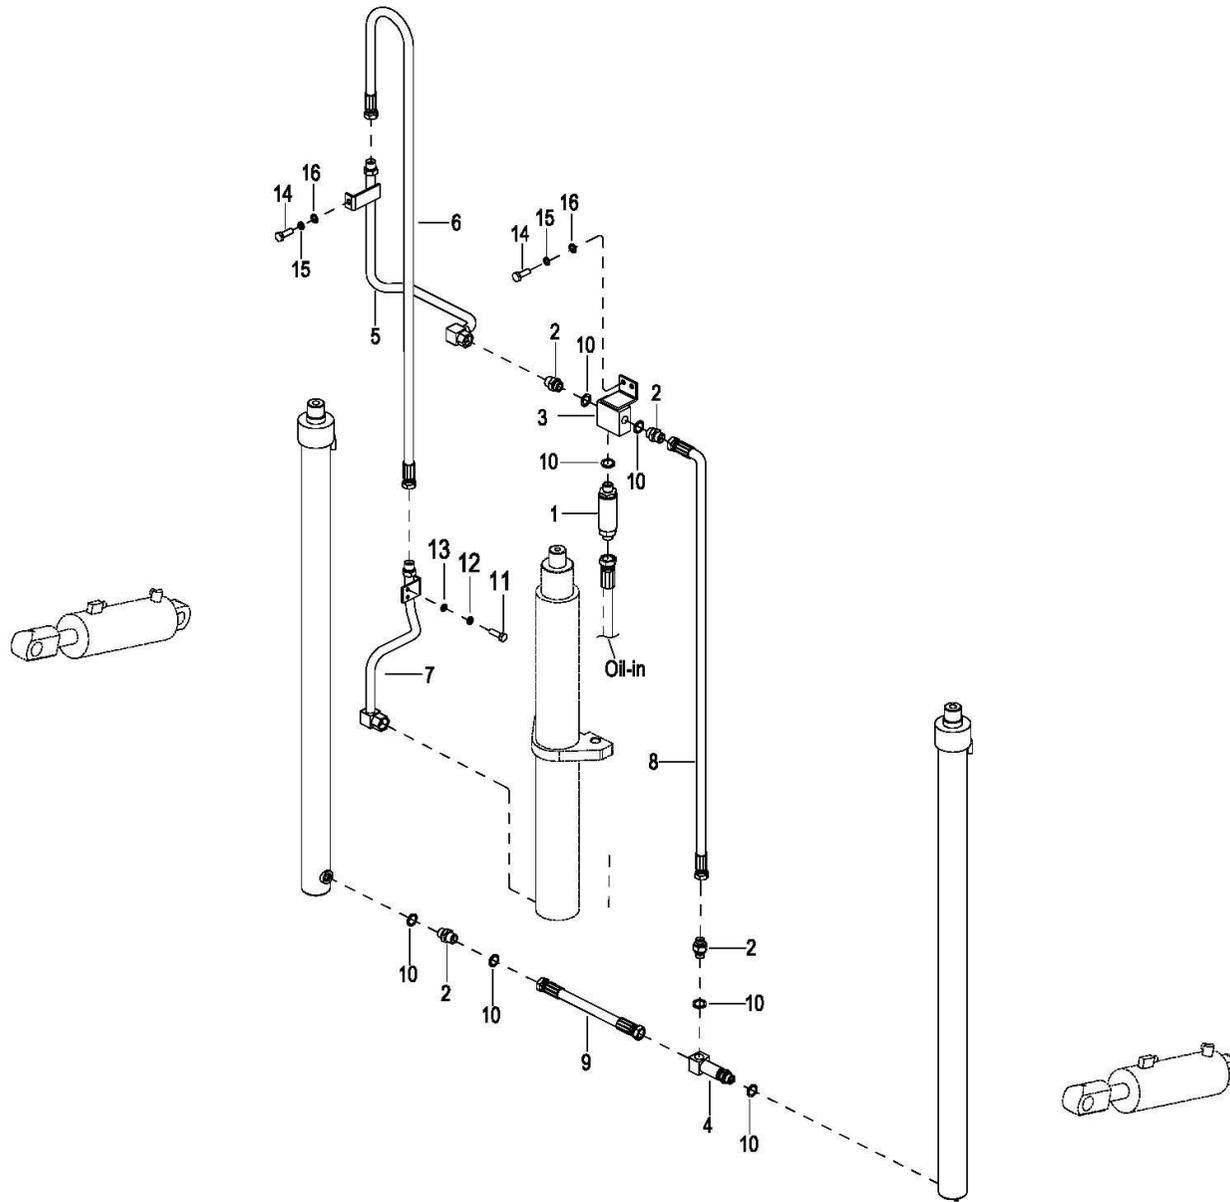


0702 Oil Pipe

油管

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870000-00	Flow Regulator 限速阀	1		XSF-F16L-4T-1
2	2701-272700-00	Connector M27×2-M27×1.5 直通接头	5		
3	3845-856000-30	Three Way 三通组件	1		
4	3845-855000-30	Three Way 边缸三通组件	1		
5	3845-853000-30	Lifting Steel Pipe I 起升硬管组件 I	1		
6	3845-850100-30-01	Lifting Oil Pipe 绕边缸起升管	1		H=3920mm
6	3845-850100-30-02	Lifting Oil Pipe 绕边缸起升管	1		H=4350mm
6	3845-850100-30-03	Lifting Oil Pipe 绕边缸起升管	1		H=4500mm
6	3845-850100-30-04	Lifting Oil Pipe 绕边缸起升管	1		H=4700mm
6	3845-850100-30-05	Lifting Oil Pipe 绕边缸起升管	1		H=4800mm
6	3845-850100-30-06	Lifting Oil Pipe 绕边缸起升管	1		H=5000mm
6	3845-850100-30-07	Lifting Oil Pipe 绕边缸起升管	1		H=5400mm
6	3845-850100-30-08	Lifting Oil Pipe 绕边缸起升管	1		H=6000mm
7	3845-854000-30	Lifting Steel Pipe II 起升硬管组件 II	1		
8	3845-850300-30	Lifting Oil Pipe II 提升缸三通油管 II	1		
9	3845-850200-30	Lifting Oil Pipe I 提升缸三通油管 I	1		
10	0000-000335-00	Washer Φ27 组合垫圈	7		
11	0000-000055-00	Screw M6×16 螺钉	2		
12	0000-000056-00	Lock Washer φ6 弹垫	2		
13	0000-000380-00	Flat Washer φ6 平垫	2		
14	0000-000030-00	Screw M10×16 螺钉	3		
15	0000-000063-00	Lock Washer φ10 弹垫	3		
16	0000-000007-00	Flat Washer φ10 平垫	3		

0703 Front Lifting Cylinder

前起升油缸

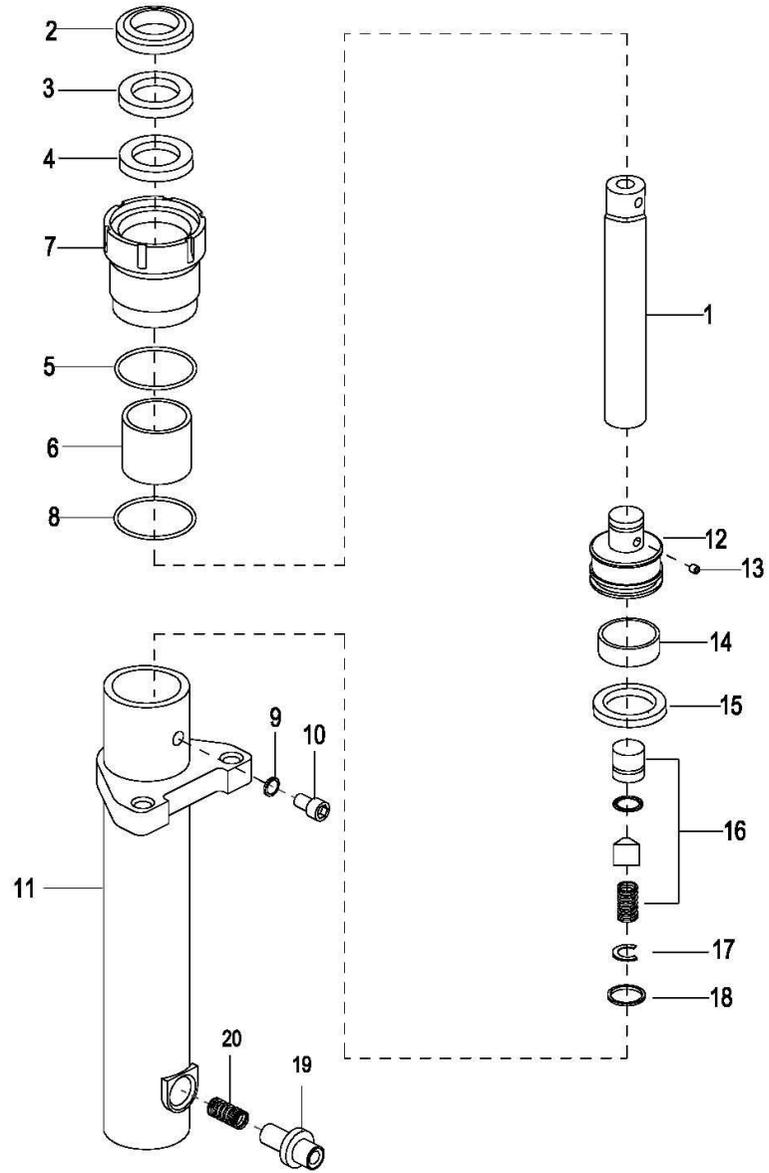


0703 Front Lifting Cylinder

前起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-850001-30	Piston Rod 活塞杆	1		
2	3845-850002-30	Wiper 85×99×8/11 防尘圈	1		
3	3845-850003-30	Snap Ring 85×100×3 挡片	2		
4	3845-850004-30	Seal 85×100×9 轴用密封圈	1		
5	3845-850005-30	O-Ring 99.4×3.1 O型密封圈	1		
6	3845-850006-30	Bearing 8540 钢背轴承	1		
7	3845-850007-30	Guide Ring 导向套	1		
8	3845-850008-30	O-Ring 100×3.1 O型密封圈	2		
9	3845-850009-30	Washer 垫片	1		
10	3845-850010-30	Screw M5×6 螺钉	1		
11	3845-850011-30	Cylinder Body 缸体	1		
12	3845-850012-30	Piston assembly 活塞总成	1		
13	3845-850013-30	Screw M8×18 内六角凹端紧定螺钉	1		
14	3845-850014-30	Wearing 100×94×25 支撑环	1		
15	3845-850015-30	Seal 100×85×9.5 孔用密封圈	1		
16	3845-850016-30	Valve assembly 阀总成	1		
17	3845-850017-30	Washer 挡片	1		
18	3845-850018-30	Snap Ring ø22 孔用弹性挡圈	1		
19	3845-850019-30	Valve 滑阀	1		
20	3845-850020-30	Spring 弹簧	1		
KIT	3845-3ZG	Seal Kit for Lifting Cylinder (include item4,5,8,15) 油缸修理包 (包含序号 4,5,8,15)	1		

0704 Lifting Cylinder-L

左起升油缸

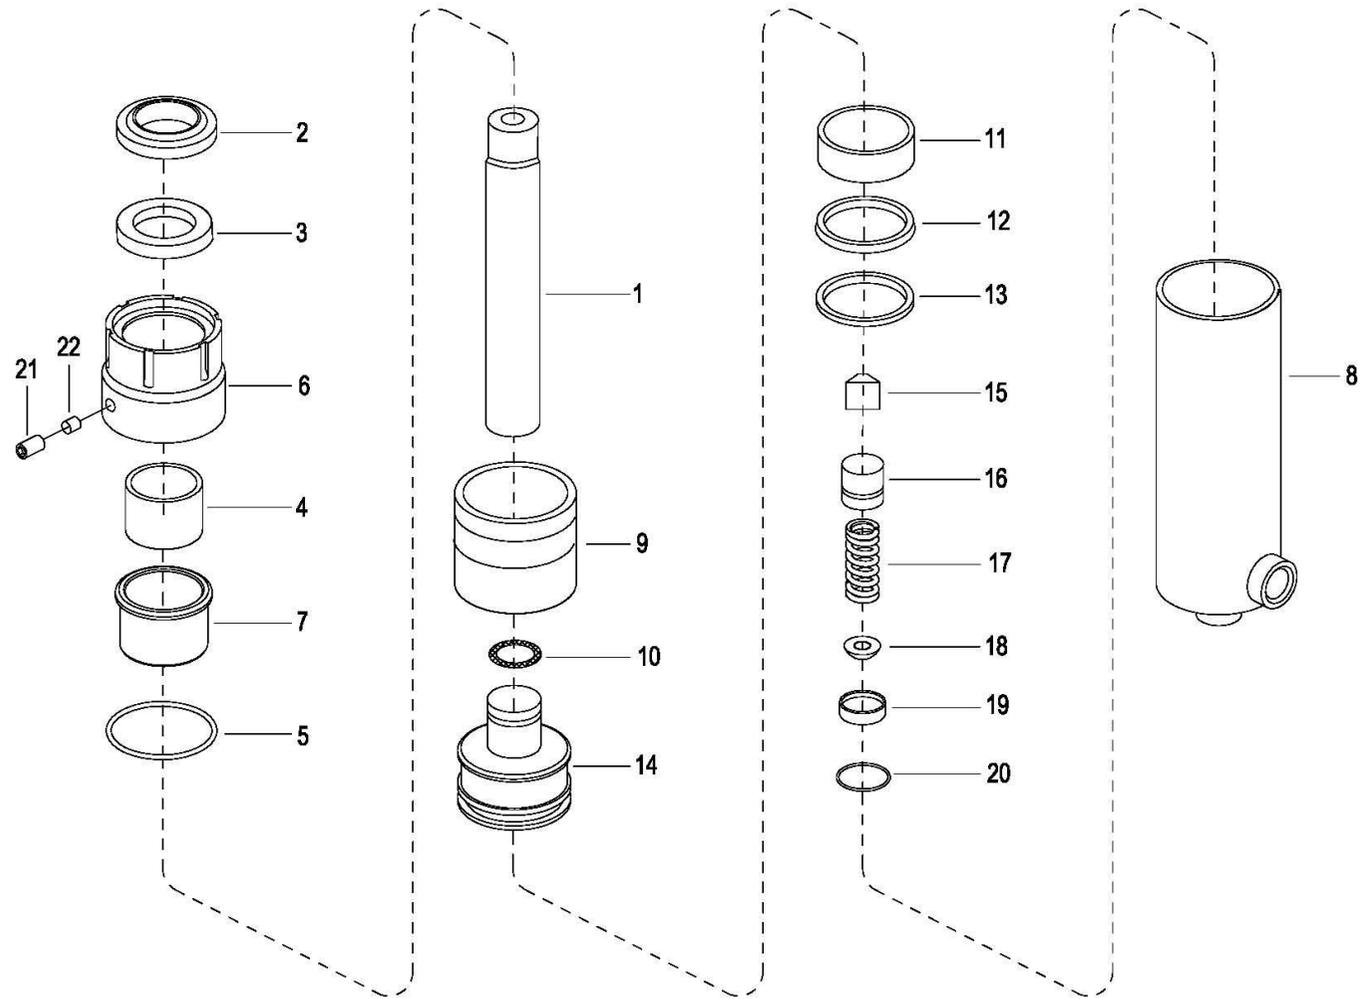


0704 Lifting Cylinder-L

左起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-860001-30	Piston Rod 活塞杆	1		
2	3845-870102-00	Dust Seal 50×62×7/10 防尘圈	1		
3	3845-860002-30	Seal 50×60×8 轴用密封圈	1		
4	3845-860003-30	Bearing 5050 钢背轴承	1		
5	0000-000342-00	O-Ring 77.5×3.55 O 形圈	1		
6	3845-860004-30	Cylinder Cap 缸盖	1		
7	3845-860005-30	Bushing 衬套	1		
8	3845-860006-30	Cylinder Body-L 左缸体	1		
9	3845-860007-30	Adjusting Sleeve 调整套	1		
10	3845-860008-30	Seal 钢丝挡圈	1		
11	3845-860009-30	Support Central 70×64×20 支承环	1		
12	3845-860010-30	Snap Ring 70×60×3 挡片	1		
13	3845-860011-30	Hole Seals 70×60×6 孔用密封圈	1		
14	3845-860012-30	Piston 活塞	1		
15	3845-860013-30	Spool 阀芯	1		
16	3845-860014-30	Valve Cover 阀套	1		
17	3845-860015-30	Spring 弹簧	1		
18	3845-860016-30	Valve Seat 阀座	1		
19	3845-860017-30	Plug 定位塞	1		
20	0000-001677-00	O-Ring 38.7×2.55 O 形圈	1		
21	302019000001	Screw M6×8 内六角凹端紧定螺钉	1		
22	3845-860018-30	Plug 塞子	1		
KIT	3845-3BG1	Seal Kit for Lifting Cylinder (include item3,5,13,20) 油缸修理包 (包含序号 3,5,13,20)	1		

0705 Lifting Cylinder-R

右起升油缸

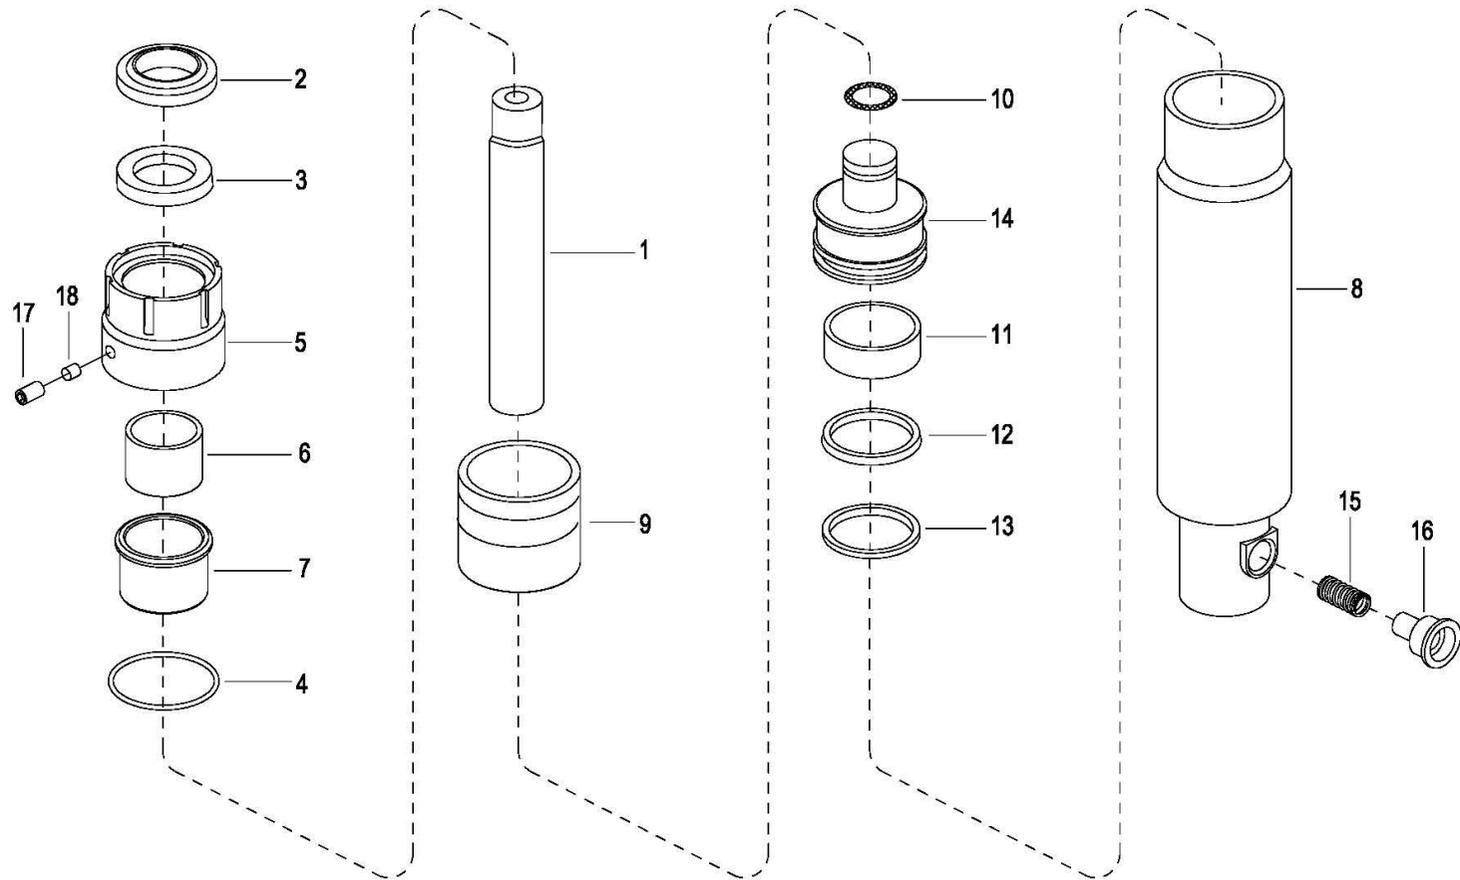


0705 Lifting Cylinder-R

右起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870001-30	Piston Rod 活塞杆	1		
2	3845-870002-30	Dust Seal 50×62×7/10 防尘圈	1		
3	3845-870003-30	Seal 50×60×8 轴用密封圈	1		
4	0000-000342-00	O-Ring 77.5×3.55 O形密封圈	1		
5	3845-870004-30	Cylinder Cap 缸盖	1		
6	3845-870005-30	Bearing 5050 钢背轴承	1		
7	3845-870006-30	Bushing 衬套	1		
8	3845-870007-30	Cylinder Body-R 右缸体	1		
9	3845-870008-30	Adjusting Sleeve 调整套	1		
10	3845-870009-30	Seal 钢丝挡圈	1		
11	3845-870010-30	Support Central 70×64×20 支承环	1		
12	3845-870011-30	Snap Ring 70×60×3 挡片	1		
13	3845-870012-30	Hole Seals 70×60×6 孔用密封圈	1		
14	3845-870013-30	Piston 活塞	1		
15	3845-870014-30	Spring 弹簧	1		
16	3845-870015-30	Valve 滑阀	1		
17	302019000001	Screw M6×8 内六角凹端紧定螺钉	1		
18	3845-870016-30	Plug 塞子	1		
KIT	3845-3BG2	Seal Kit for Lifting Cylinder (include item 3,4,13) 油缸修理包 (包含序号 3,4,13)	1		

0706 Tilt Cylinder

倾斜油缸

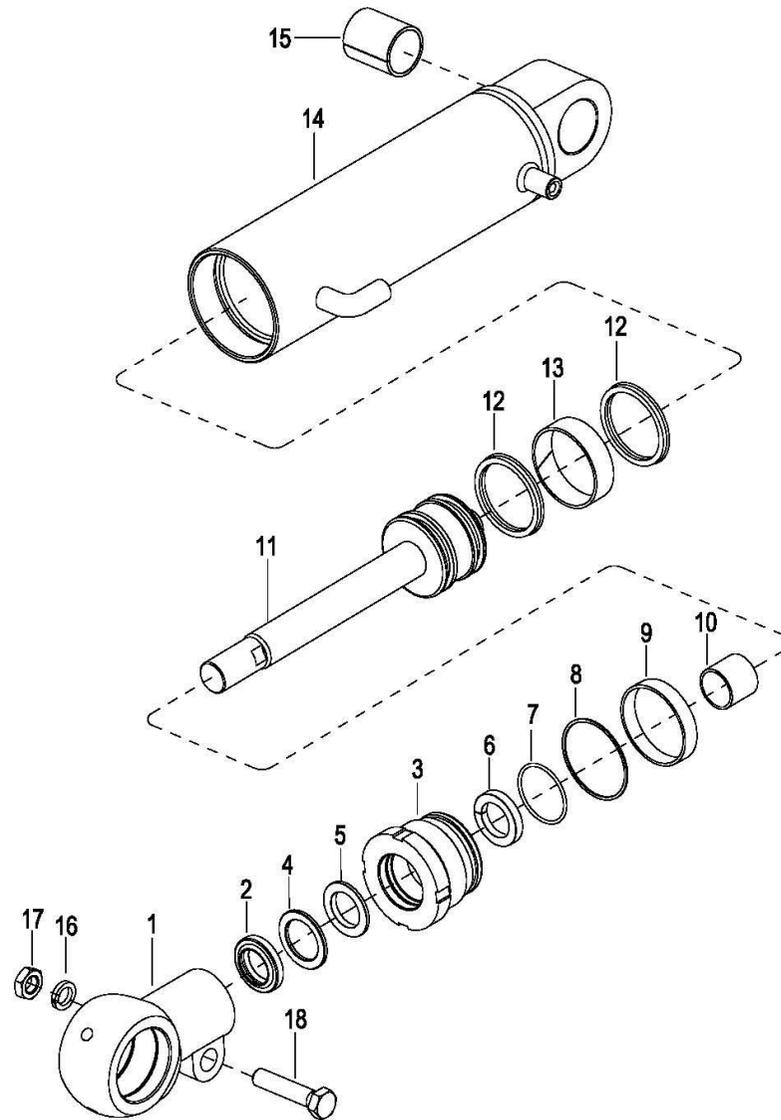


0706 Tilt Cylinder

倾斜油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-760001-00	Ear 耳环	1		
2	3845-760002-00	Dust Seal 45x57x8/10 防尘圈	1		
3	3845-760003-00	Guide Sleeve 导向套	1		
4	3845-760004-00	Snap Ring 45x55x3 挡片	1		
5	3845-760005-00	Ring 45x55x6 轴用密封圈	1		
6	3845-760006-00	Snap Ring 50.8x45x1.5 挡片	1		
7	3845-760007-00	O-Ring 44.7x3.55 O型圈	1		
8	3845-760008-00	O-Ring 82.5x3.55 O型圈	1		
9	3845-760009-00	Snap Ring 90x84.4x2 挡片(不开口)	1		
10	3845-760010-00	Bearing 4530 钢背轴承	1		
11	3845-760011-00	Piston 活塞体	1		
12	3845-760012-00	Ring 90x75x9 孔用密封圈	2		
13	3845-760013-00	Wear Ring 90x84x25 支承环	1		
14	3845-760014-00	Cylinder Body 缸体	1		
15	3845-760015-00	Bearing 4043 钢背轴承	1		
16	3845-760016-00	Lock Washer φ16 弹簧垫圈	1		
17	3845-760017-00	Hex Nut M16 六角螺母	1		
18	3845-760018-00	Hex Head Bolt M16x70 六角头螺栓	1		
KIT	3845-QXG-00	Seal kit for Tilt cylinder 油缸修理包 (包含 (Include item 5,7,8,12) 5,7,8,12)	1		

0707 Fork Frame

货叉架

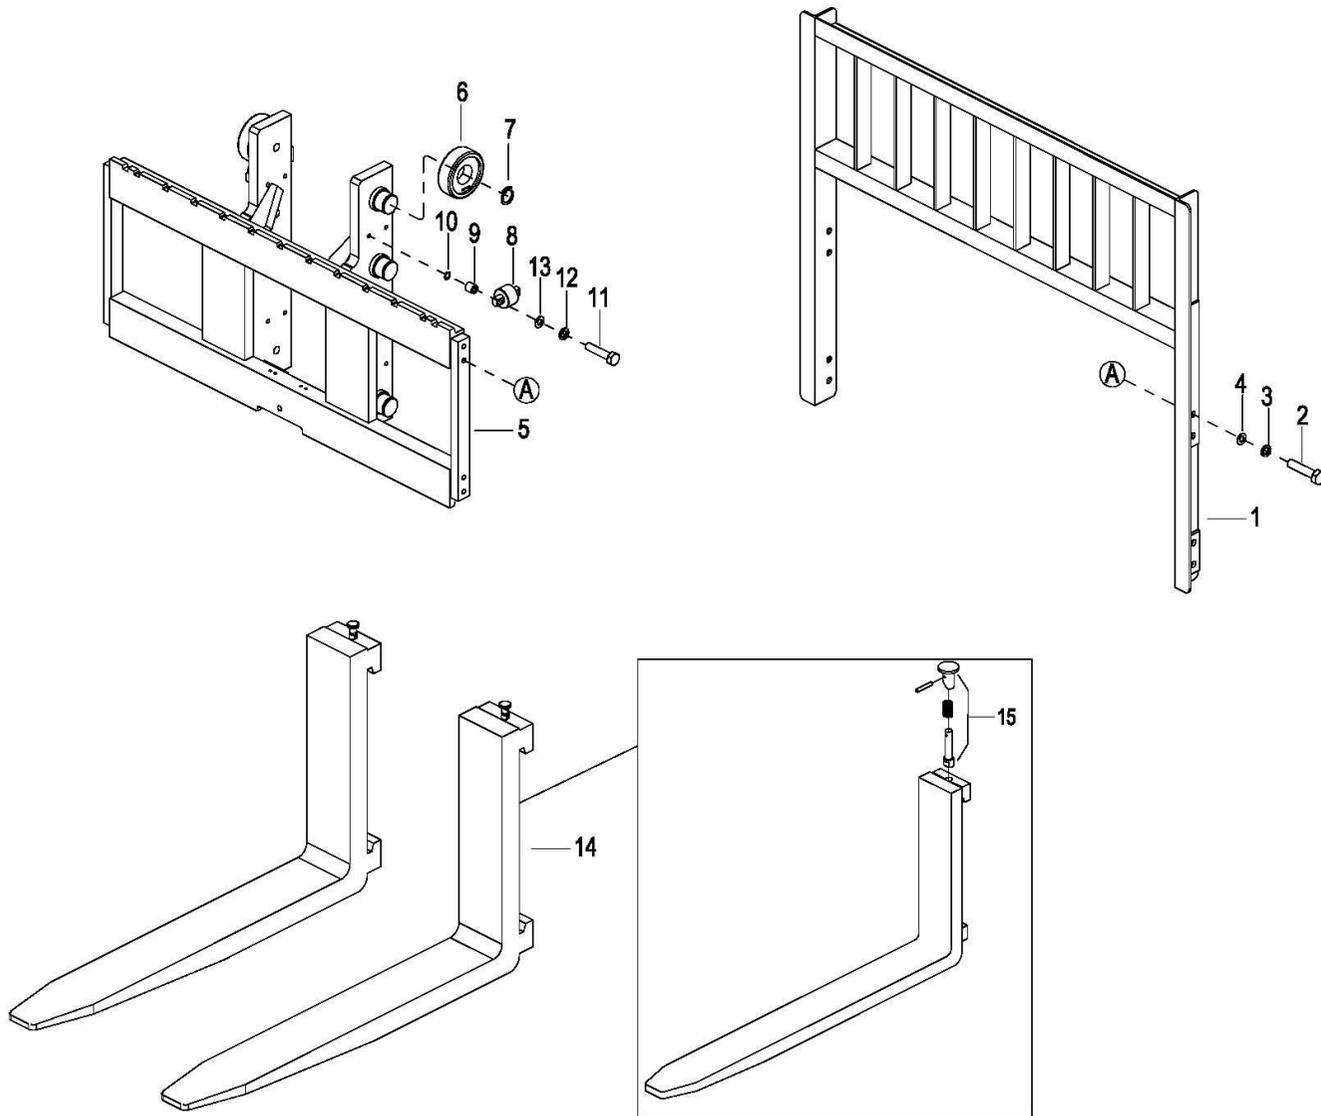


0707 Fork Frame

货叉架

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-842000-30	Baffle 挡货架体	1		
2	0000-000047-00	Bolt M14x45 螺栓	2		
3	0000-000233-00	Lock Washer ø14 弹垫	2		
4	0000-001004-00	Flat Washer ø14 平垫	2		
5	3845-841000-30	Lift Bracket 货叉架	1		
6	MG50A2-1T-00	Main Roller 主滚轮	6		
7	305001000021	Axle Circlip D50 轴用卡簧	6		
8	SR60N50-1-00	Side Roller II 侧滚轮 II	4		
9	3845-800012-30	Adjusting Sleeve 调整套	8		
10	3845-800013-30	Sleeve Washer 调整套垫	Req.		
11	301000000071	Bolt M12x1.5x60 螺栓	8		
12	0000-000060-00	Lock Washer ø12 弹垫	8		
13	0000-000554-00	Flat Washer ø12 平垫	8		
14	3845-803000-30	Fork 货叉	2		150*1070
15	3218-800002-00	Pin assembly 提拔销总成	2		

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

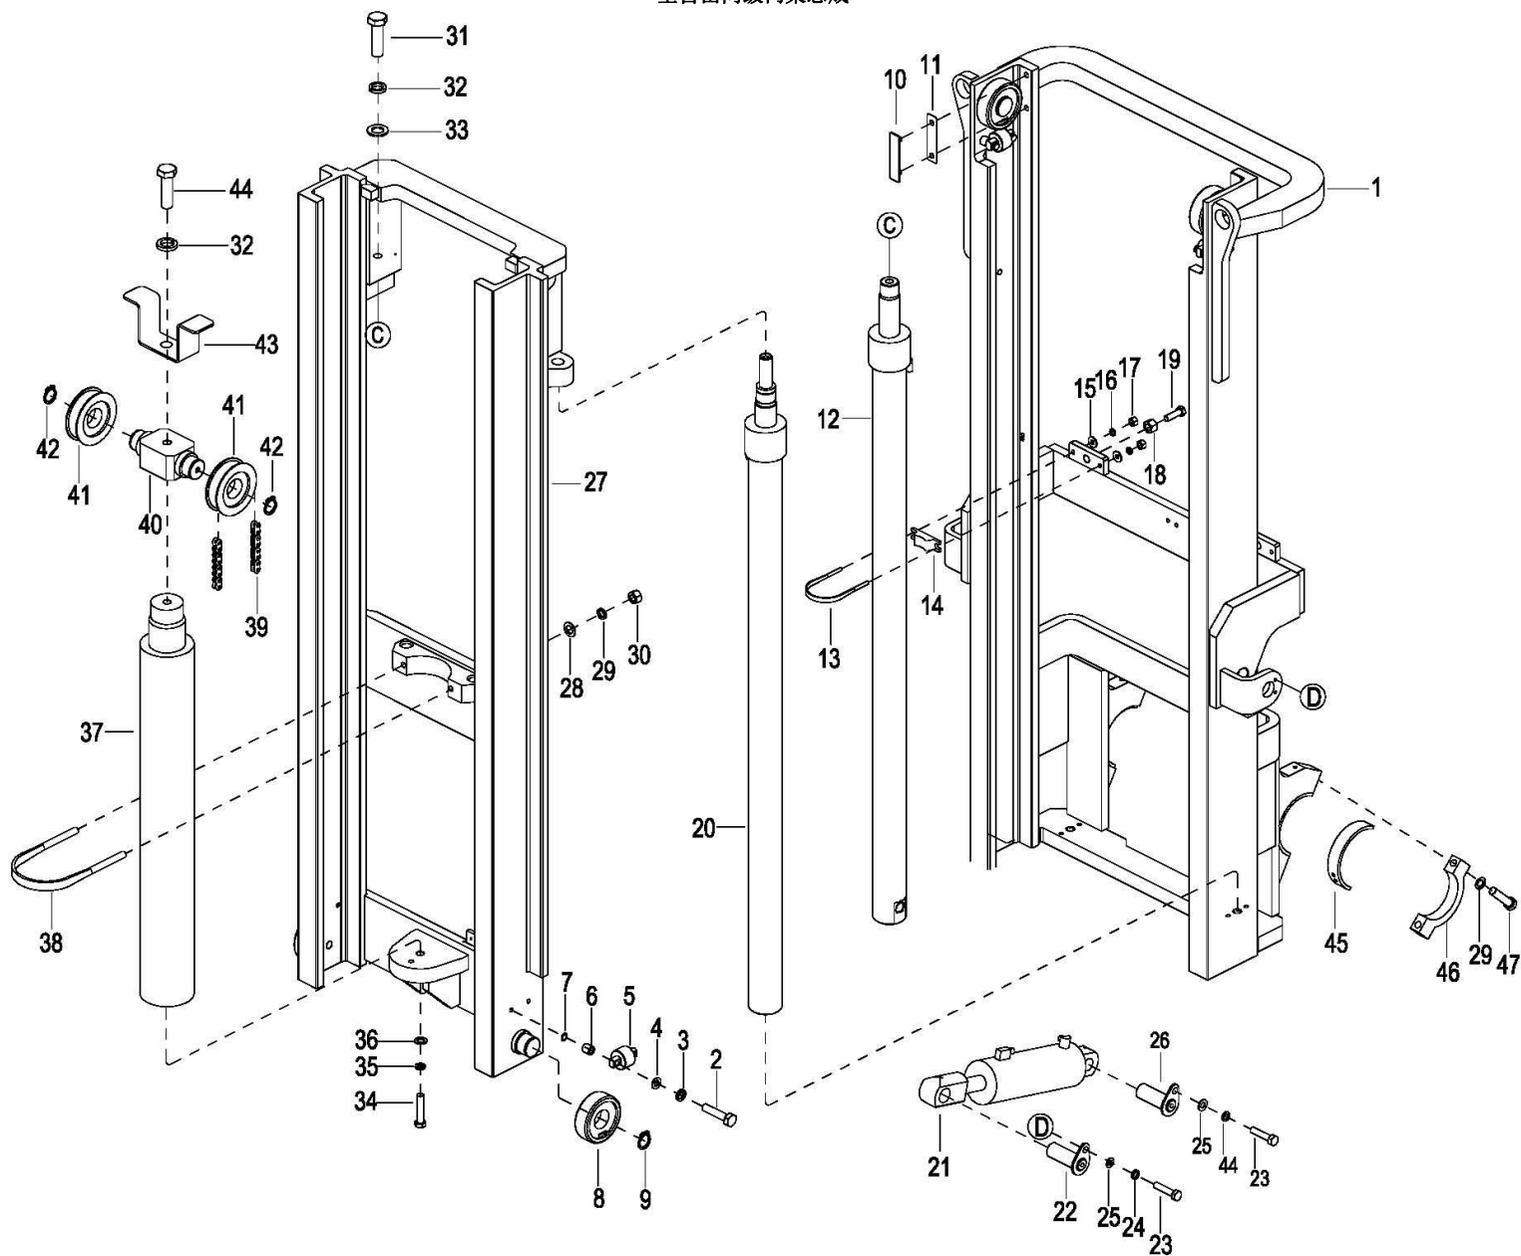

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-810000-20-01	Outside Mast 外门架	1		H=2610mm
1	3845-810000-20-02	Outside Mast 外门架	1		H=2710mm
1	3845-810000-20-03	Outside Mast 外门架	1		H=3000mm
1	3845-810000-20-04	Outside Mast 外门架	1		H=3300mm
1	3845-810000-20-05	Outside Mast 外门架	1		H=3500mm
1	3845-810000-20-06	Outside Mast 外门架	1		H=3750mm
1	3845-810000-20-07	Outside Mast 外门架	1		H=4000mm
1	3845-810000-20-08	Outside Mast 外门架	1		H=4500mm
1	3845-810000-20-09	Outside Mast 外门架	1		H=5000mm
1	3845-810000-20-10	Outside Mast 外门架	1		H=2430mm
1	3845-810000-20-11	Outside Mast 外门架	1		H=2300mm
1	3845-810000-20-12	Outside Mast 外门架	1		H=5500mm
1	3845-810000-20-13	Outside Mast 外门架	1		H=6000mm
2	301000000071	Bolt M12x1.5x60 螺栓	4		
3	0000-000060-00	Lock Washer φ12 垫圈	16		
4	0000-000554-00	Flat Washer ø12 平垫	16		
5	SR60N50-1-00	Side Roller II 侧滚轮 II	4		
6	3845-800012-30	Adjusting Sleeve 调整套	8		
7	3845-800013-30	Sleeve Washer 调整套垫	Req.		
8	MG50A2-1T-00	Main Roller 主滚轮	4		
9	305001000021	Axle Circlip D50 轴用卡簧	4		
10	3845-800010-30	Nylon Guide Plate 尼龙导板	4		
11	3845-800011-30	Guide Plate Washer 导板调整垫	Req.		
12	3845-870000-20-01	Lift Cylinder R 右起升油缸	1		H=2610mm
12	3845-870000-20-02	Lift Cylinder R 右起升油缸	1		H=2710mm

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
12	3845-870000-20-03	Lift Cylinder R 右起升油缸	1		H=3000mm
12	3845-870000-20-04	Lift Cylinder R 右起升油缸	1		H=3300mm
12	3845-870000-20-05	Lift Cylinder R 右起升油缸	1		H=3500mm
12	3845-870000-20-06	Lift Cylinder R 右起升油缸	1		H=3750mm
12	3845-870000-20-07	Lift Cylinder R 右起升油缸	1		H=4000mm
12	3845-870000-20-08	Lift Cylinder R 右起升油缸	1		H=4500mm
12	3845-870000-20-09	Lift Cylinder R 右起升油缸	1		H=5000mm
12	3845-870000-20-10	Lift Cylinder R 右起升油缸	1		H=2430mm
12	3845-870000-20-11	Lift Cylinder R 右起升油缸	1		H=2300mm
12	3845-870000-20-12	Lift Cylinder R 右起升油缸	1		H=5500mm
12	3845-870000-20-13	Lift Cylinder R 右起升油缸	1		H=6000mm
13	3845-800007-30	U Bolt - Side 边缸 U 型螺栓	2		
14	3845-800020-30	Support Block 提升缸上支撑块	2		
15	0000-000175-00	Flat Washer ϕ 10 大平垫	4		
16	0000-000063-00	Lock Washer ϕ 10 弹垫	4		
17	0000-000315-00	Nut M10x1.25 螺母	4		
18	0000-000237-00	Nut M16x1.5 螺母	2		
19	0000-000449-00	Bolt M16x1.5x40 螺栓	2		
20	3845-860000-20-01	Lift Cylinder L 左起升油缸	1		H=2610mm
20	3845-860000-20-02	Lift Cylinder L 左起升油缸	1		H=2710mm
20	3845-860000-20-03	Lift Cylinder L 左起升油缸	1		H=3000mm
20	3845-860000-20-04	Lift Cylinder L 左起升油缸	1		H=3300mm
20	3845-860000-20-05	Lift Cylinder L 左起升油缸	1		H=3500mm
20	3845-860000-20-06	Lift Cylinder L 左起升油缸	1		H=3750mm
20	3845-860000-20-07	Lift Cylinder L 左起升油缸	1		H=4000mm

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
20	3845-860000-20-08	Lift Cylinder L 左起升油缸	1		H=4500mm
20	3845-860000-20-09	Lift Cylinder L 左起升油缸	1		H=5000mm
20	3845-860000-20-10	Lift Cylinder L 左起升油缸	1		H=2430mm
20	3845-860000-20-11	Lift Cylinder L 左起升油缸	1		H=2300mm
20	3845-860000-20-12	Lift Cylinder L 左起升油缸	1		H=5500mm
20	3845-860000-20-13	Lift Cylinder L 左起升油缸	1		H=6000mm
21	3845-760000-00	Tilt Cylinder 倾斜油缸	2		
22	3845-800014-30	Tilt Cylinder Front Shaft 倾斜油缸前安装销轴	2		
23	0000-000255-00	Bolt M8x20 螺栓	4		
24	0000-000159-00	Lock Washer ø8 弹垫	4		
25	0000-000540-00	Flat Washer ø8 平垫	4		
26	3845-860000-00	Tilt Cylinder Back Shaft 倾斜油缸后安装销轴	2		
27	3845-820000-20-01	Inside Mast 内门架	1		H=2610mm
27	3845-820000-20-02	Inside Mast 内门架	1		H=2710mm
27	3845-820000-20-03	Inside Mast 内门架	1		H=3000mm
27	3845-820000-20-04	Inside Mast 内门架	1		H=3300mm
27	3845-820000-20-05	Inside Mast 内门架	1		H=3500mm
27	3845-820000-20-06	Inside Mast 内门架	1		H=3750mm
27	3845-820000-20-07	Inside Mast 内门架	1		H=4000mm
27	3845-820000-20-08	Inside Mast 内门架	1		H=4500mm
27	3845-820000-20-09	Inside Mast 内门架	1		H=5000mm
27	3845-820000-20-10	Inside Mast 内门架	1		H=2430mm
27	3845-820000-20-11	Inside Mast 内门架	1		H=2300mm
27	3845-820000-20-12	Inside Mast 内门架	1		H=5500mm
27	3845-820000-20-13	Inside Mast 内门架	1		H=6000mm

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
28	0000-001004-00	Flat Washer ϕ 14 平垫	2		
29	0000-000233-00	Lock Washer ϕ 14 弹垫	6		
30	0000-001202-00	Nut M14 螺母	2		
31	301000000067	Bolt M20x1.5x65 螺栓	1		
32	0000-000266-00	Lock Washer ϕ 20 弹垫	2		
33	0000-000581-00	Flat Washer ϕ 20 平垫	1		
34	301000000069	Bolt M10x1x45 螺栓	1		
35	0000-000063-00	Lock Washer ϕ 10 弹垫	1		
36	0000-000547-00	Flat Washer ϕ 10 平垫	1		
37	3845-850000-20-01	Lift Cylinder F 前起升油缸	1		H=2610mm
37	3845-850000-20-02	Lift Cylinder F 前起升油缸	1		H=2710mm
37	3845-850000-20-03	Lift Cylinder F 前起升油缸	1		H=3000mm
37	3845-850000-20-04	Lift Cylinder F 前起升油缸	1		H=3300mm
37	3845-850000-20-05	Lift Cylinder F 前起升油缸	1		H=3500mm
37	3845-850000-20-06	Lift Cylinder F 前起升油缸	1		H=3750mm
37	3845-850000-20-07	Lift Cylinder F 前起升油缸	1		H=4000mm
37	3845-850000-20-08	Lift Cylinder F 前起升油缸	1		H=4500mm
37	3845-850000-20-09	Lift Cylinder F 前起升油缸	1		H=5000mm
37	3845-850000-20-10	Lift Cylinder F 前起升油缸	1		H=2430mm
37	3845-850000-20-11	Lift Cylinder F 前起升油缸	1		H=2300mm
37	3845-850000-20-12	Lift Cylinder F 前起升油缸	1		H=5500mm
37	3845-850000-20-13	Lift Cylinder F 前起升油缸	1		H=6000mm
38	3845-800006-30	U Bolt - Middle 中缸 U 型螺栓	1		
39	3845-802000-20-01	Chain-S 短链条总成	2		H=2610mm
39	3845-802000-20-02	Chain-S 短链条总成	2		H=2710mm

0708 Full free 2-Stage Mast Assembly

全自由两级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
39	3845-802000-20-03	Chain-S 短链条总成	2		H=3000mm
39	3845-802000-20-04	Chain-S 短链条总成	2		H=3300mm
39	3845-802000-20-05	Chain-S 短链条总成	2		H=3500mm
39	3845-802000-20-06	Chain-S 短链条总成	2		H=3750mm
39	3845-802000-20-07	Chain-S 短链条总成	2		H=4000mm
39	3845-802000-20-08	Chain-S 短链条总成	2		H=4500mm
39	3845-802000-20-09	Chain-S 短链条总成	2		H=5000mm
39	3845-802000-20-10	Chain-S 短链条总成	2		H=2430mm
39	3845-802000-20-11	Chain-S 短链条总成	2		H=2300mm
39	3845-802000-20-12	Chain-S 短链条总成	2		H=5500mm
39	3845-802000-20-13	Chain-S 短链条总成	2		H=6000mm
40	3845-800001-30	Chain Shaft 链轮座	1		
41	CG55R1-12-00	Chain Pulley 链轮	2		
42	0000-000903-00	Axle Circlip D55 轴用卡簧	2		
43	3845-800021-30	Chain Baffle 链条挡板	1		
44	301000000070	Bolt M20x1.5x80 螺栓	1		
45	3845-800019-30	Mast BushingΦ165x150 门架轴瓦	2		
46	3845-100006-00	Cap 轴承盖	2		
47	0000-000452-00	Bolt M20x90 螺栓	4		


0709 Oil Pipe

油管

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870000-00	Flow Regulator 限速阀	1		XSF-F16L-4T-1
2	0000-000335-00	Washer ø27 组合垫圈	5		
3	2701-272700-00	Connector 直通接头	2		
4	3845-860003-00	Three Way 三通接头总成	1		
5	3845-880200-00	Hose 高压胶管	1		
6	3845-880300-20	Hose 高压胶管	1		
7	3845-880400-20	Oiling pipe 上油管总成	1		
8	3845-880500-20	Oiling pipe 下油管总成	1		

0710 Full Free Lifting Cylinder

全自由起升缸

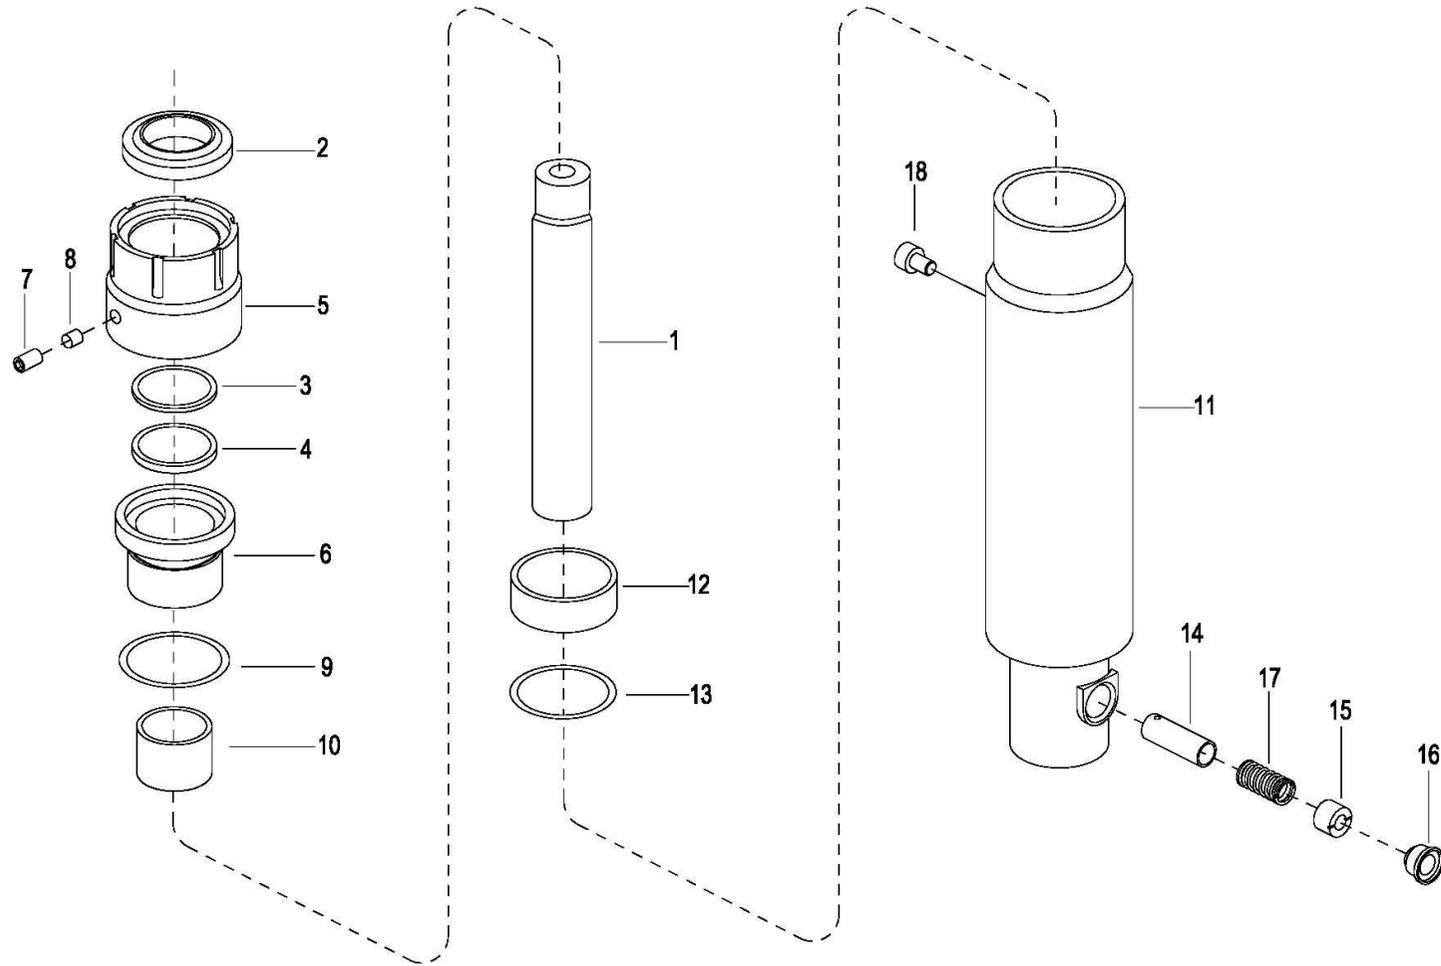


0710 Full Free Lifting Cylinder

全自由起升缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-850001-20	Piston Rod 活塞杆部件	1		
2	3845-850002-20	Dust Seal 110x126x9/12 防尘圈	1		
3	3845-850003-20	Snap Ring 125x110x3 挡圈	1		
4	3845-850004-20	Ring 125x110x9 轴用密封圈	1		
5	3845-850005-20	Cylinder Cap 缸盖	1		
6	3845-850006-20	Axle sleeve 轴套	1		
7	3845-850007-20	Screw M6x8 内六角凹端紧定螺钉	1		
8	3845-850008-20	Plug ø4.8x2.5 塞子	1		
9	3845-850009-20	O-Ring 115x5.3 O型密封圈	1		
10	3845-850010-20	Bearing 11035 钢背轴承	1		
11	3845-850011-20	Cylinder Body 缸体	1		
12	3845-850012-20	Support Central 125x30x3 支承环	1		
13	3845-850009-20	O-Ring 115x5.3 O型密封圈	1		
14	3845-850013-20	Valve 滑阀	1		
15	3845-850014-20	Spring Seat 弹簧座	1		
16	3845-850015-20	Cover M27x2 闷盖	1		
17	3845-850016-20	Spring 2.5x15x48 弹簧	1		
18	3845-850017-20	Plug Z1/4" 螺塞	1		
KIT	3845-2ZG	Seal Kit for Lifting Cylinder 油缸修理包(包含序号 (include item4,9,13) 4,9,13)	1		

0711 Beside Lifting Cylinder-L

左边起升油缸

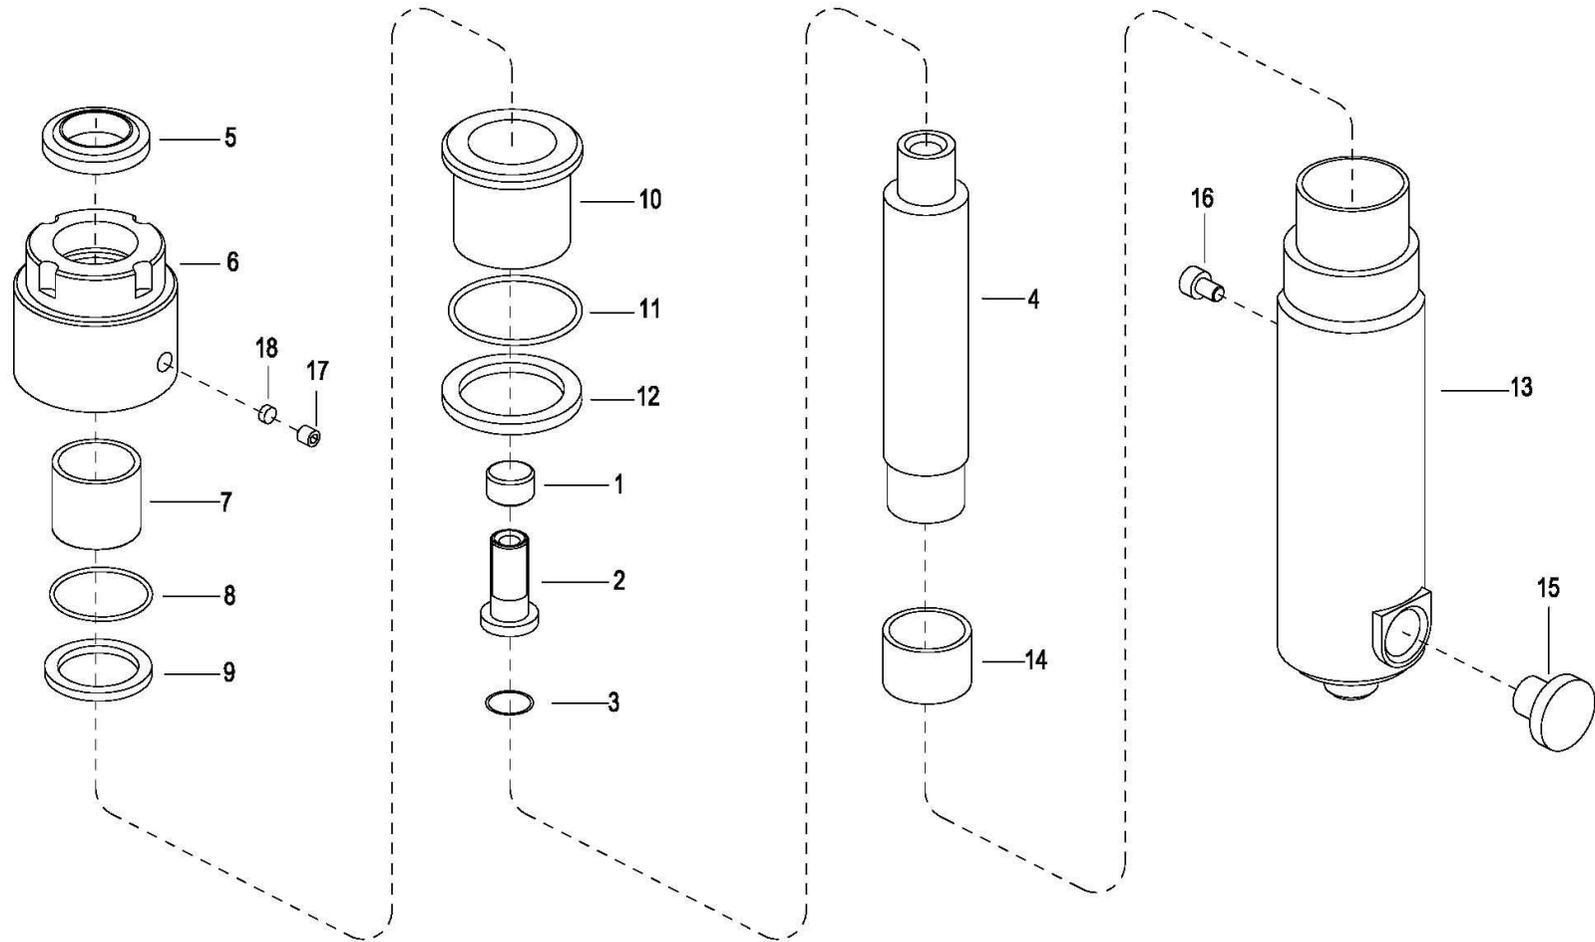


0711 Beside Lifting Cylinder-L

左边起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-860001-20	Plug M30×1.5-6H 堵头	1		
2	3845-860002-20	Pole 杆头	1		
3	3845-860003-20	O-Ring 23.6×3.55 O型密封圈	1		
4	3845-860004-20	Piston Rod 活塞杆总成	1		
5	3845-860005-20	Dust Seal 50×62×7/10 防尘圈	1		
6	3845-860006-20	Cylinder Cap 缸盖	1		
7	3845-860007-20	Bearing 5034 钢背轴承	1		
8	3845-860008-20	Snap Ring 60×50×3 挡圈	1		
9	3845-860009-20	Seal Ring 60×50×8 密封圈	1		
10	3845-860010-20	Guide Ring 导向套	1		
11	3845-860011-20	Snap Ringφ70×ø64.5×1.5 挡片	1		
12	3845-860012-20	O-Ring 63×3.55 O型密封圈	1		
13	3845-860013-20	Cylinder Body 缸体	1		
14	3845-860014-20	Support Central 70×20×2.5 支承环	1		
15	3845-860015-20	Cover M27×2 闷盖	1		
16	3845-860016-20	Plug Z1/4 " 螺塞	1		
17	3845-860017-20	Screw M6×8 内六角凹端紧定螺钉	1		
18	3845-860018-20	Plug ø4.8×2.5 塞子	1		
KIT	3845-2BG1	Seal Kit for Lifting Cylinder (include item3,9,12) 油缸修理包 (包含序号 3,9,12)	1		

0712 Beside Lifting Cylinder-R

右边起升油缸

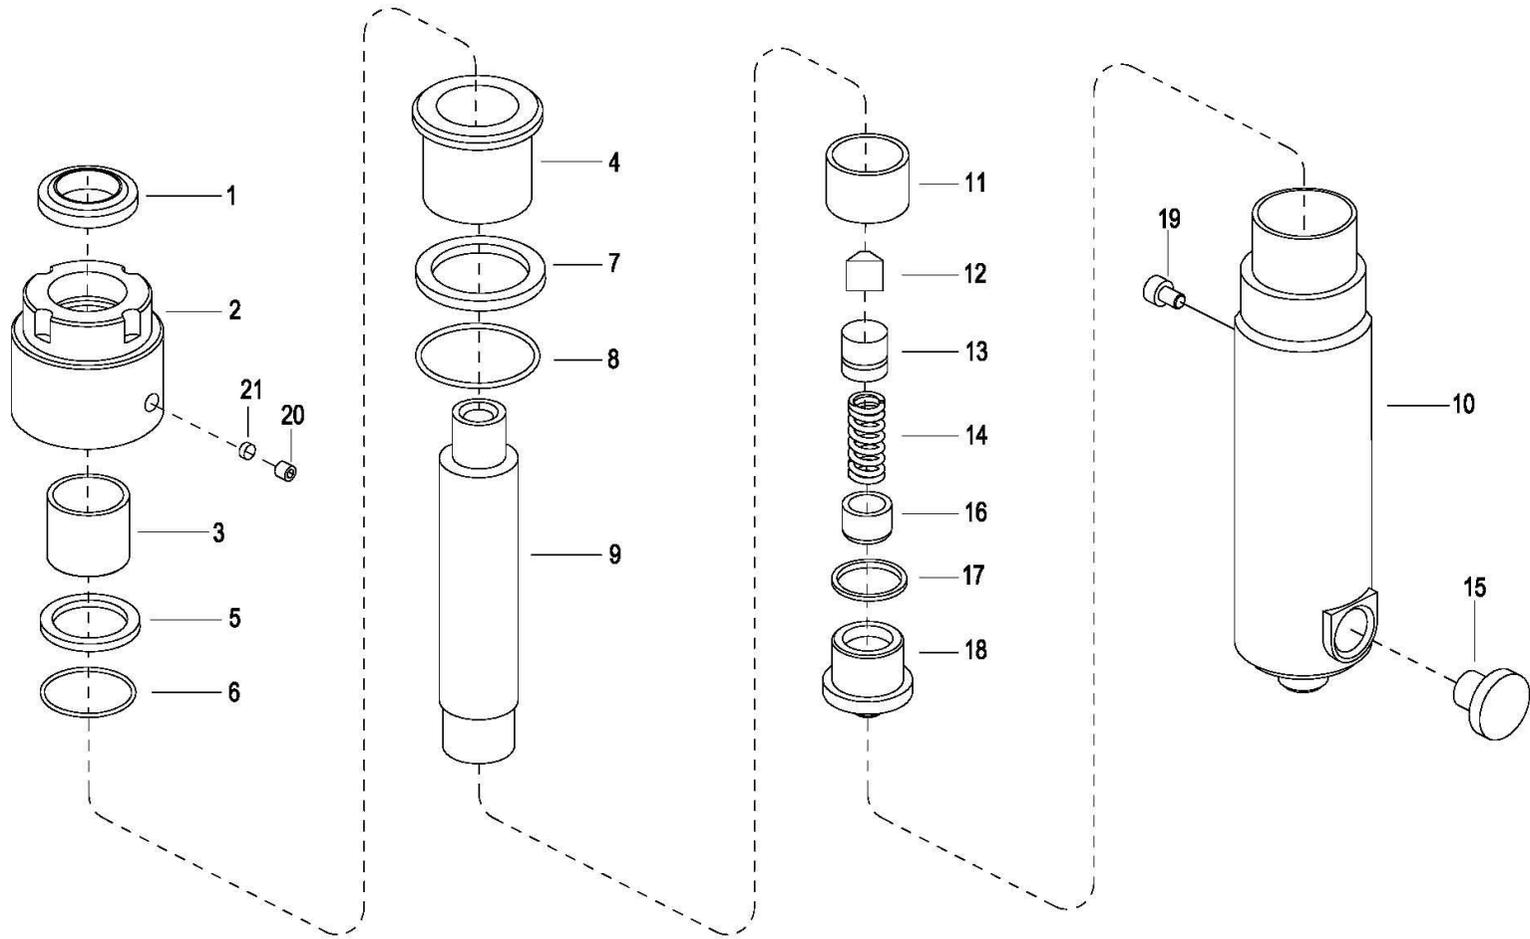


0712 Beside Lifting Cylinder-R

右边起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870001-20	Dust Seal 50×62×7/10 防尘圈	1		
2	3845-870002-20	Cylinder Cap 缸盖	1		
3	3845-870003-20	Bearing 5034 钢背轴承	1		
4	3845-870004-20	Guide Ring 导向套	1		
5	3845-870005-20	Snap Ring 60×50×3 挡圈	1		
6	3845-870006-20	Seal Ring 60×50×8 密封圈	1		
7	3845-870007-20	Snap Ring $\phi 70 \times \phi 64.5 \times 1.5$ 挡片	1		
8	3845-870008-20	O-Ring 63×3.55 O型密封圈	1		
9	3845-870009-20	Piston Rod 活塞杆总成	1		
10	3845-870010-20	Cylinder Body 缸体	1		
11	3845-870011-20	Support Central 70×20×2.5 支承环	1		
12	3845-870012-20	Spool 阀芯	1		
13	3845-870013-20	Valve Cover 阀套	1		
14	3845-870014-20	Spring 2x19.5x73.5 弹簧	1		
15	3845-870015-20	Cover M27×2 闷盖	1		
16	3845-870016-20	Valve Seat 阀座	1		
17	3845-870017-20	O-Ring 38.7×3.55 O型密封圈	1		
18	3845-870018-20	Plug 定位塞	1		
19	3845-870019-20	Plug Z1/4 " 螺塞	1		
20	3845-870020-20	Screw M6×8 内六角凹端紧定螺钉	1		
21	3845-870021-20	Plug $\phi 4.8 \times 2.5$ 塞子	1		
KIT	3845-2BG2	Seal Kit for Lifting Cylinder (include item6,8,17) 油缸修理包(包含序号 6,8,17)	1		

0713 Fork Frame

货叉架

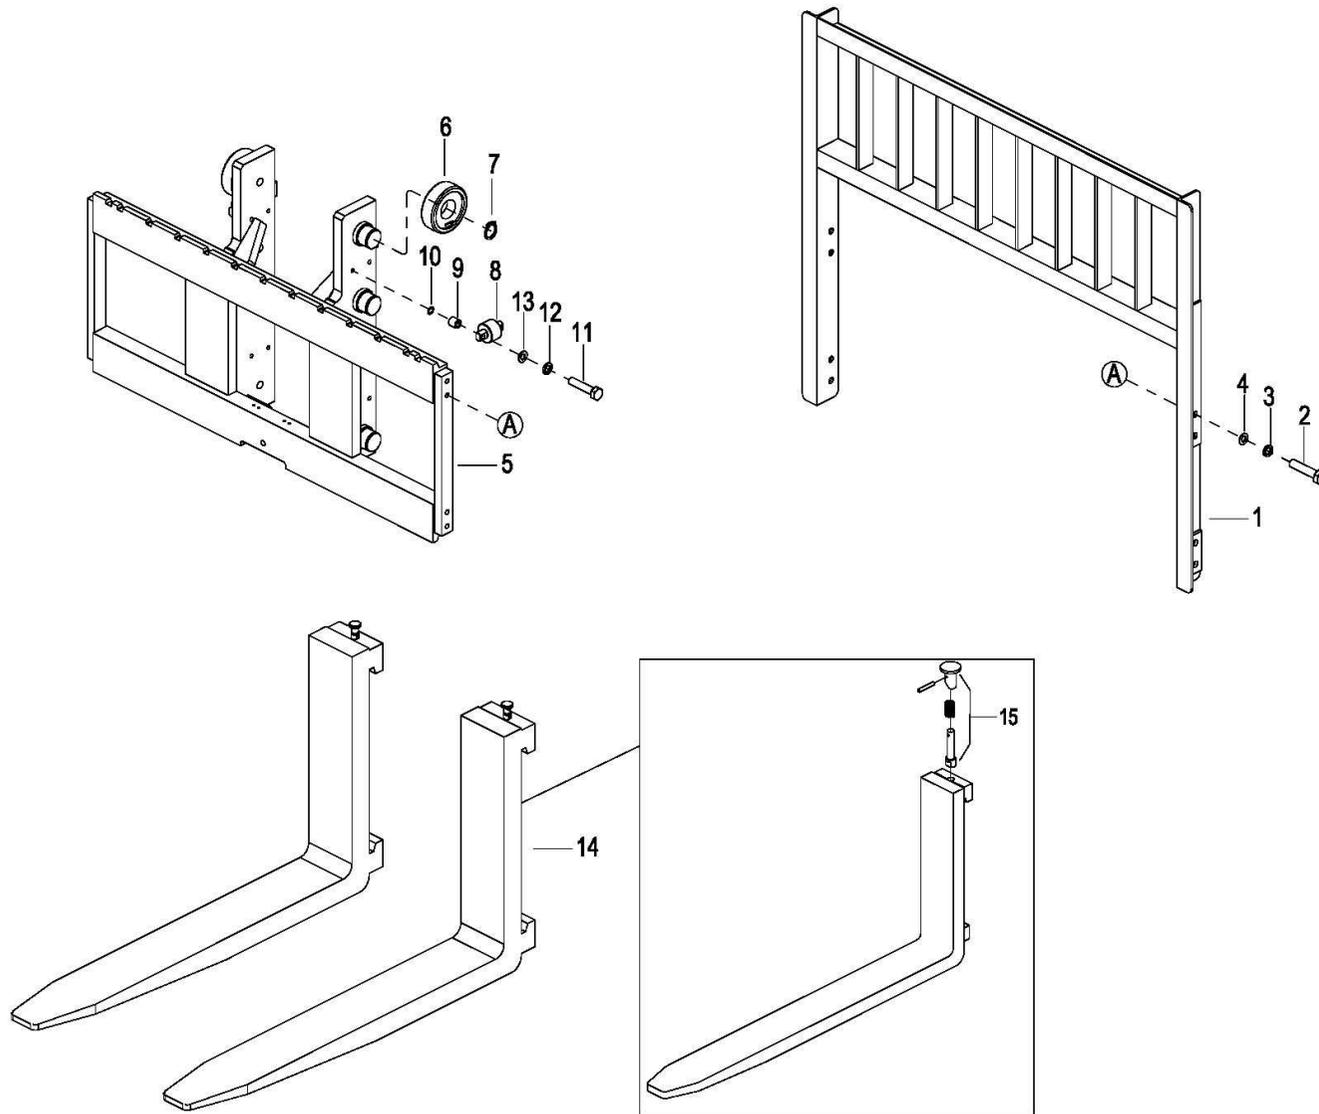


0713 Fork Frame

货叉架

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-842000-30	Baffle 挡货架体	1		
2	0000-000047-00	Bolt M14x45 螺栓	8		
3	0000-000233-00	Lock Washer ø14 弹垫	8		
4	0000-001004-00	Flat Washer ø14 平垫	8		
5	3845-831000-20	Lift Bracket 货叉架	1		
6	MG50A2-1T-00	Main Roller 主滚轮	6		
7	305001000021	Axle Circlip D50 轴用卡簧	6		
8	SR60N50-1-00	Side Roller II 侧滚轮 II	4		
9	3845-800012-30	Adjusting Sleeve 调整套	8		
10	3845-800013-30	Sleeve Washer 调整套垫	Req		
11	301000000071	Bolt M12x1.5x60 螺栓	8		
12	0000-000060-00	Lock Washer ø12 弹垫	8		
13	0000-000554-00	Flat Washer ø12 平垫	8		
14	3845-803000-30	Fork 货叉	2		150*1070
15	3218-800002-00	Pin assembly 提拔销总成	2		

0714 Wide-View 2-Stage Mast Assembly

宽视野二级门架总成

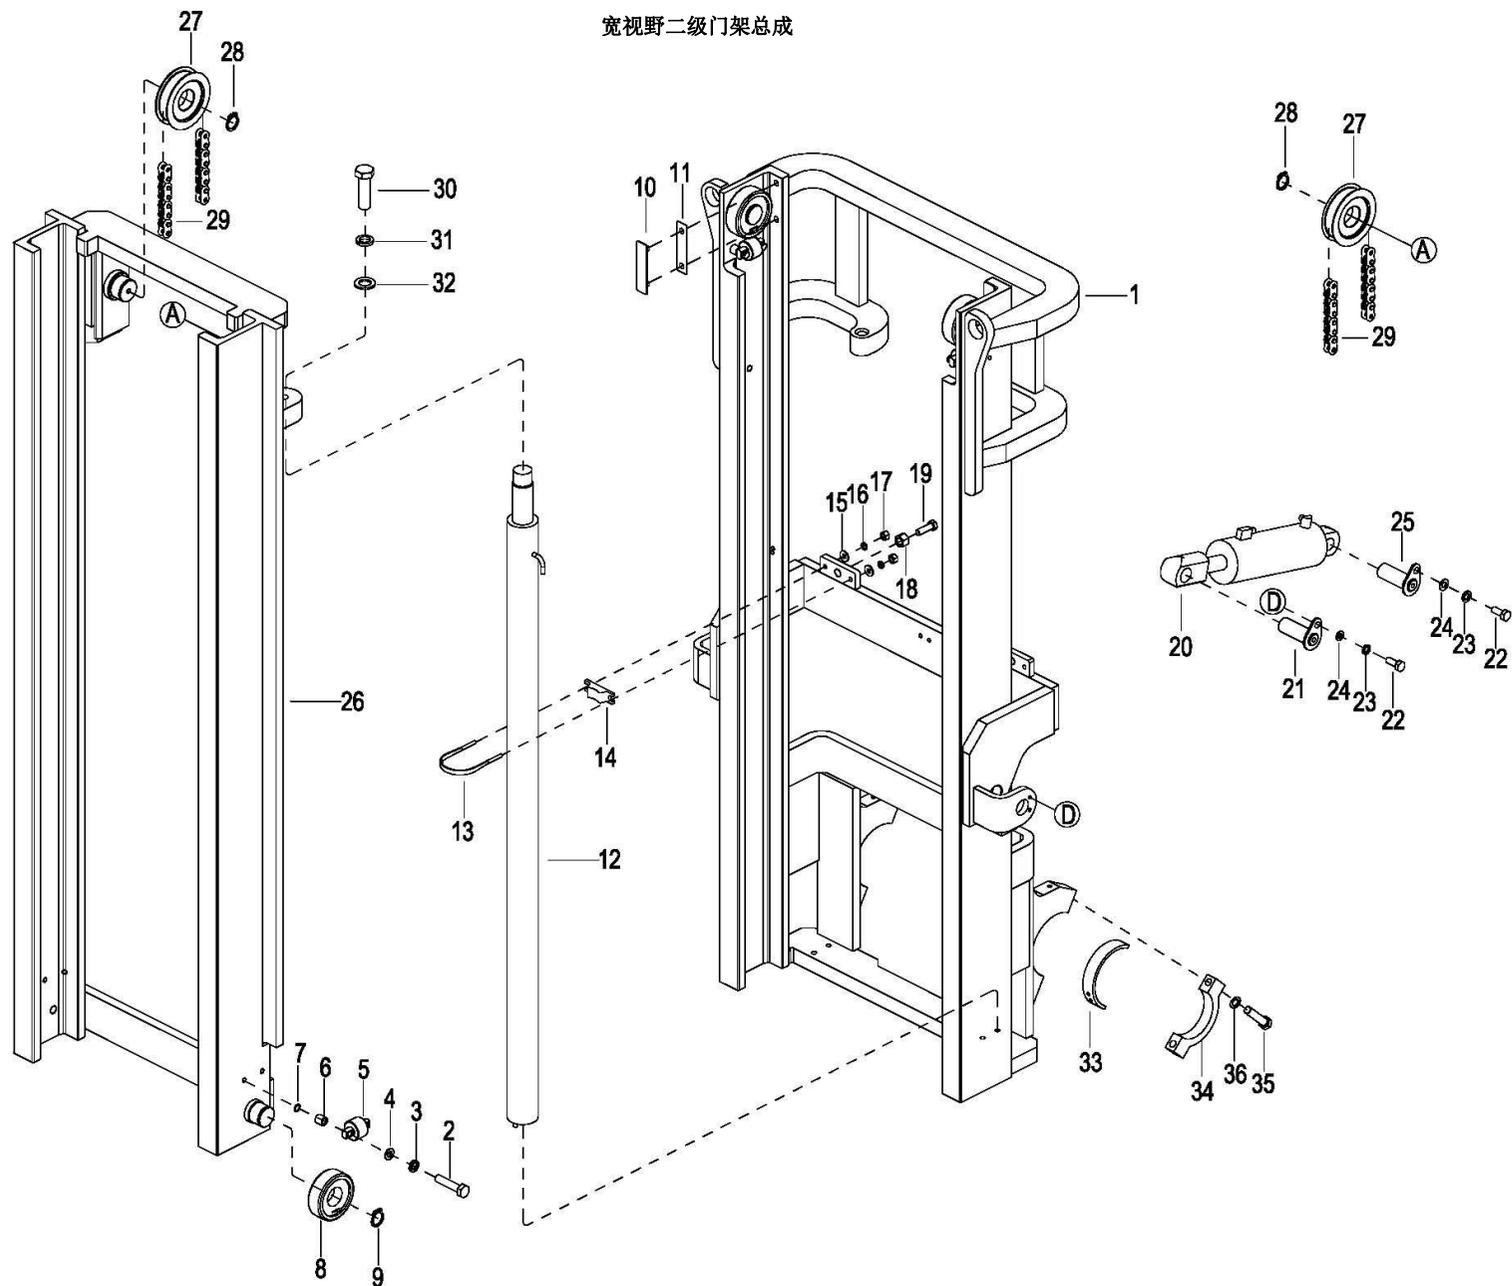

0714 Wide-View 2-Stage Mast Assembly

宽视野二级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-810000-00-01	Outside Mast 外门架	1		H=3000mm
1	3845-810000-00-02	Outside Mast 外门架	1		H=3300mm
1	3845-810000-00-03	Outside Mast 外门架	1		H=3500mm
1	3845-810000-00-04	Outside Mast 外门架	1		H=3700mm
1	3845-810000-00-05	Outside Mast 外门架	1		H=3750mm
1	3845-810000-00-06	Outside Mast 外门架	1		H=4000mm
1	3845-810000-00-07	Outside Mast 外门架	1		H=4250mm
1	3845-810000-00-08	Outside Mast 外门架	1		H=4500mm
1	3845-810000-00-09	Outside Mast 外门架	1		H=4750mm
1	3845-810000-00-10	Outside Mast 外门架	1		H=5000mm
1	3845-810000-00-11	Outside Mast 外门架	1		H=5500mm
1	3845-810000-00-12	Outside Mast 外门架	1		H=6000mm
2	301000000071	Bolt M12x1.5x60 螺栓	8		
3	0000-000060-00	Lock Washer ϕ 12 垫圈	8		
4	0000-000554-00	Flat Washer ϕ 12 平垫	8		
5	SR60N50-1-00	Side Roller II 侧滚轮 II	4		
6	3845-800012-30	Adjusting Sleeve 调整套	8		
7	3845-800013-30	Sleeve Washer 调整套垫	Req.		
8	MG50A2-1T-00	Main Roller 主滚轮	4		
9	305001000021	Axle Circlip D50 轴用卡簧	4		
10	3845-800010-30	Nylon Guide Plate 尼龙导板	4		
11	3845-800011-30	Guide Plate Washer 导板调整垫	Req.		
12	3845-870100-00-04	Lift Cylinder 起升油缸	2		H=3000mm

0714 Wide-View 2-Stage Mast Assembly

宽视野二级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
12	3845-870100-00-05	Lift Cylinder 起升油缸	2		H=3300mm
12	3845-870100-00-06	Lift Cylinder 起升油缸	2		H=3500mm
12	3845-870100-00-07	Lift Cylinder 起升油缸	2		H=3700mm
12	3845-870100-00-08	Lift Cylinder 起升油缸	2		H=3750mm
12	3845-870100-00-09	Lift Cylinder 起升油缸	2		H=4000mm
12	3845-870100-00-10	Lift Cylinder 起升油缸	2		H=4250mm
12	3845-870100-00-11	Lift Cylinder 起升油缸	2		H=4500mm
12	3845-870100-00-12	Lift Cylinder 起升油缸	2		H=4750mm
12	3845-870100-00-13	Lift Cylinder 起升油缸	2		H=5000mm
12	3845-870100-00-14	Lift Cylinder 起升油缸	2		H=5500mm
12	3845-870100-00-15	Lift Cylinder 起升油缸	2		H=6000mm
13	3845-800007-30	U Bolt - Side 边缸 U 型螺栓	2		
14	3845-800020-30	Support Block 提升缸上支撑块	2		
15	0000-000175-00	Flat Washer ϕ 10 大平垫	4		
16	0000-000063-00	Lock Washer ϕ 10 弹垫	4		
17	0000-000315-00	Nut M10x1.25 螺母	4		
18	0000-000237-00	Nut M16x1.5 螺母	2		
19	0000-000449-00	Bolt M16x1.5x40 螺栓	2		
20	3845-760000-00	Tilt Cylinder 倾斜油缸	2		
21	3845-800014-30	Tilt Cylinder Front Shaft 倾斜油缸前安装销轴	2		
22	0000-000255-00	Bolt M8x20 螺栓	4		
23	0000-000159-00	Lock Washer ϕ 8 弹垫	4		
24	0000-000540-00	Flat Washer ϕ 8 平垫	4		
25	3845-860000-00	Tilt Cylinder Back Shaft 倾斜油缸后安装销轴	2		
26	3845-820000-00-01	Inside Mast 内门架	1		H=3000mm

0714 Wide-View 2-Stage Mast Assembly

宽视野二级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
26	3845-820000-00-02	Inside Mast 内门架	1		H=3300mm
26	3845-820000-00-03	Inside Mast 内门架	1		H=3500mm
26	3845-820000-00-04	Inside Mast 内门架	1		H=3700mm
26	3845-820000-00-05	Inside Mast 内门架	1		H=3750mm
26	3845-820000-00-06	Inside Mast 内门架	1		H=4000mm
26	3845-820000-00-07	Inside Mast 内门架	1		H=4250mm
26	3845-820000-00-08	Inside Mast 内门架	1		H=4500mm
26	3845-820000-00-09	Inside Mast 内门架	1		H=4750mm
26	3845-820000-00-10	Inside Mast 内门架	1		H=5000mm
26	3845-820000-00-11	Inside Mast 内门架	1		H=5500mm
26	3845-820000-00-12	Inside Mast 内门架	1		H=6000mm
27	CG55R1-12-00	Chain Pulley 链轮	4		
28	0000-000903-00	Axle Circlip D55 轴用卡簧	4		
29	3845-801000-00-01	Chain 链条总成	2		3000mm,81p
29	3845-801000-00-02	Chain 链条总成	2		3300mm,87p
29	3845-801000-00-03	Chain 链条总成	2		3500mm,91p
29	3845-801000-00-04	Chain 链条总成	2		3700mm,95p
29	3845-801000-00-05	Chain 链条总成	2		3750mm,95p
29	3845-801000-00-06	Chain 链条总成	2		4000mm,103p
29	3845-801000-00-07	Chain 链条总成	2		4250mm,107p
29	3845-801000-00-08	Chain 链条总成	2		4500mm,113p
29	3845-801000-00-09	Chain 链条总成	2		4750mm,117p
29	3845-801000-00-10	Chain 链条总成	2		5000mm,123p
29	3845-801000-00-11	Chain 链条总成	2		5500mm,133p
29	3845-801000-00-12	Chain 链条总成	2		6000mm,141p


0714 Wide-View 2-Stage Mast Assembly

宽视野二级门架总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
30	301000000067	Bolt M20x1.5x65 螺栓	2		
31	0000-000266-00	Lock Washer ø20 弹垫	2		
32	0000-000581-00	Flat Washer ø20 平垫	2		
33	3845-800019-30	Mast BushingΦ165x150 门架轴瓦	2		
34	3845-100006-00	Cap 轴承盖	2		
35	0000-000452-00	Bolt M20x90 螺栓	4		
36	0000-000233-00	Lock Washer ø14 弹垫	4		

0715 Oil Pipe

油管

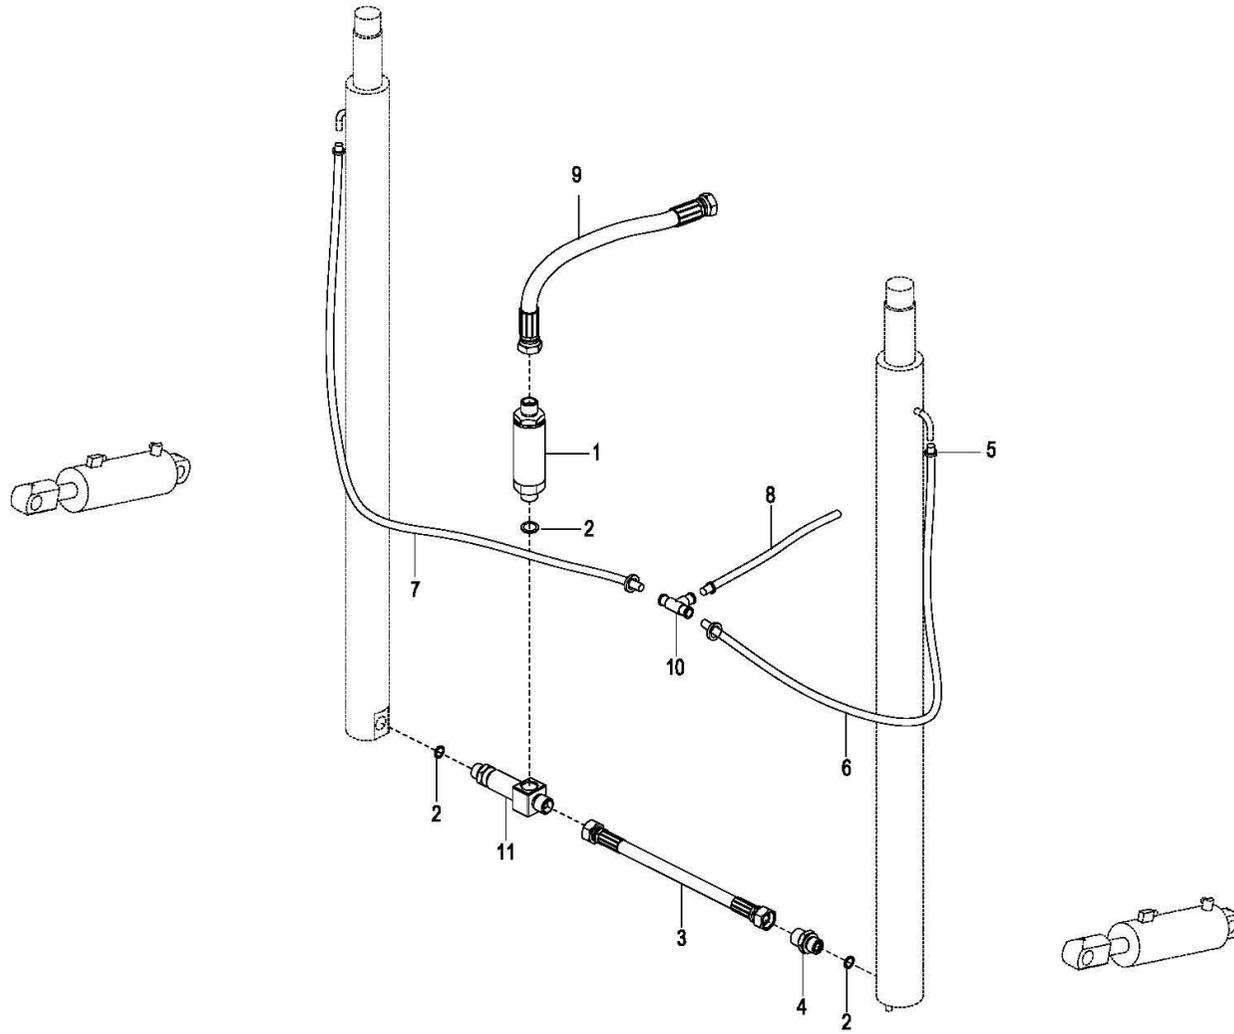


0715 Oil Pipe

油管

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870000-00	Flow Regulator 限速阀	1		XSF-F16L-4T-1
2	0000-000366-00	Washer ø22 组合垫圈	5		
3	3845-850100-00	Hose 高压胶管	1		
4	2701-272700-00	Elbow 提升油缸直接通头	1		
5	0000-000468-00	Clip ø10-16 夹箍	6		
6	3845-850001-00	Tube vinyl 塑料回油管	1		
7	3845-850001-00	Tube vinyl 塑料回油管	1		
8	3845-850001-00	Tube vinyl 塑料回油管	1		
9	3845-850200-00	Hose 高压胶管	1		
10	69008-15T11	Three Way 三通接头	1		
11	3845-855000-30	Three Way 三通接头总成	1		

0716 Lifting Cylinder

起升油缸

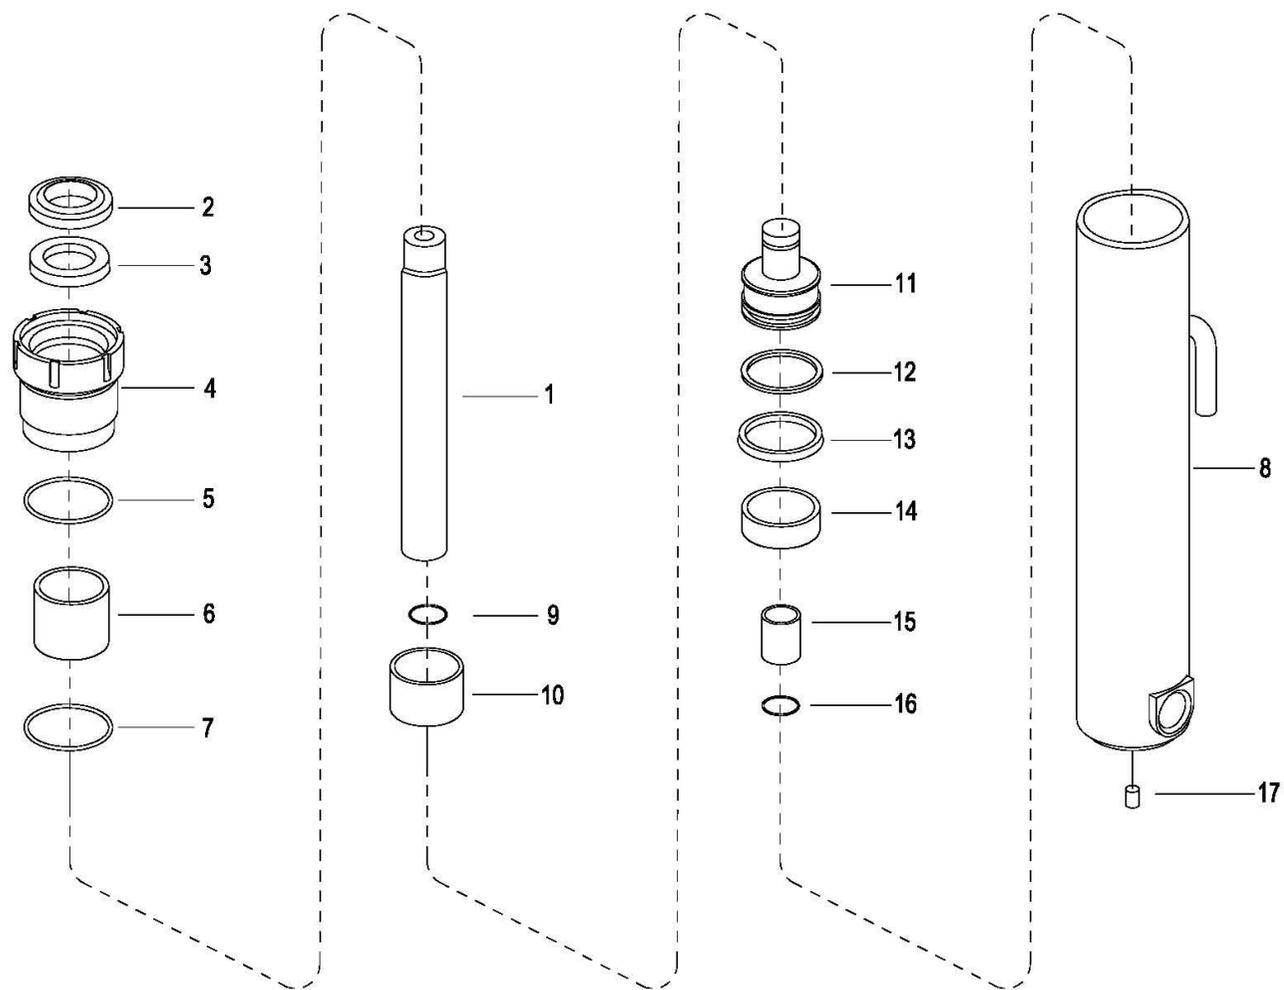


0716 Lifting Cylinder

起升油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-870101-00	Piston Rod 活塞杆	1		
2	3845-870102-00	Dust Seal 50×62×7/10 防尘圈	1		
3	3845-870103-00	Seal D50×60×6 轴用密封圈	1		
4	3845-870104-00	Guide Sleeve 导向套	1		
5	3845-870105-00	O-Ring D62.6×2.4 O型密封圈	1		
6	3845-870106-00	Bearing 5050 钢背轴承	1		
7	3845-870107-00	O-Ring D58.42×2.62 O型密封圈	1		
8	3845-870108-00	Cylinder Body 缸体	1		
9	3845-870109-00	Snap Ring 钢丝挡圈	1		
10	3845-870110-00	Adjusting Sleeve 调整套	1		
11	3845-870111-00	Piston 活塞	1		
12	3845-870112-00	Snap Ring 63×53×3 挡片	1		
13	3845-870113-00	Seal 63×53×6 孔用密封圈	1		
14	3845-870114-00	Support Central 63×58×15 支承环	1		
15	3845-870115-00	Bushing 套	1		
16	3845-870116-00	Snap Ring 钢丝挡圈	1		
17	3845-870117-00	Pin D10×26 圆柱销	1		
KIT	3845-2ZG2	Seal kit for Lifting cylinder 起升油缸修理包 (Include item3,5,7,13) (包含 3,5,7,13)	1		

0717 Fork Frame

货叉架

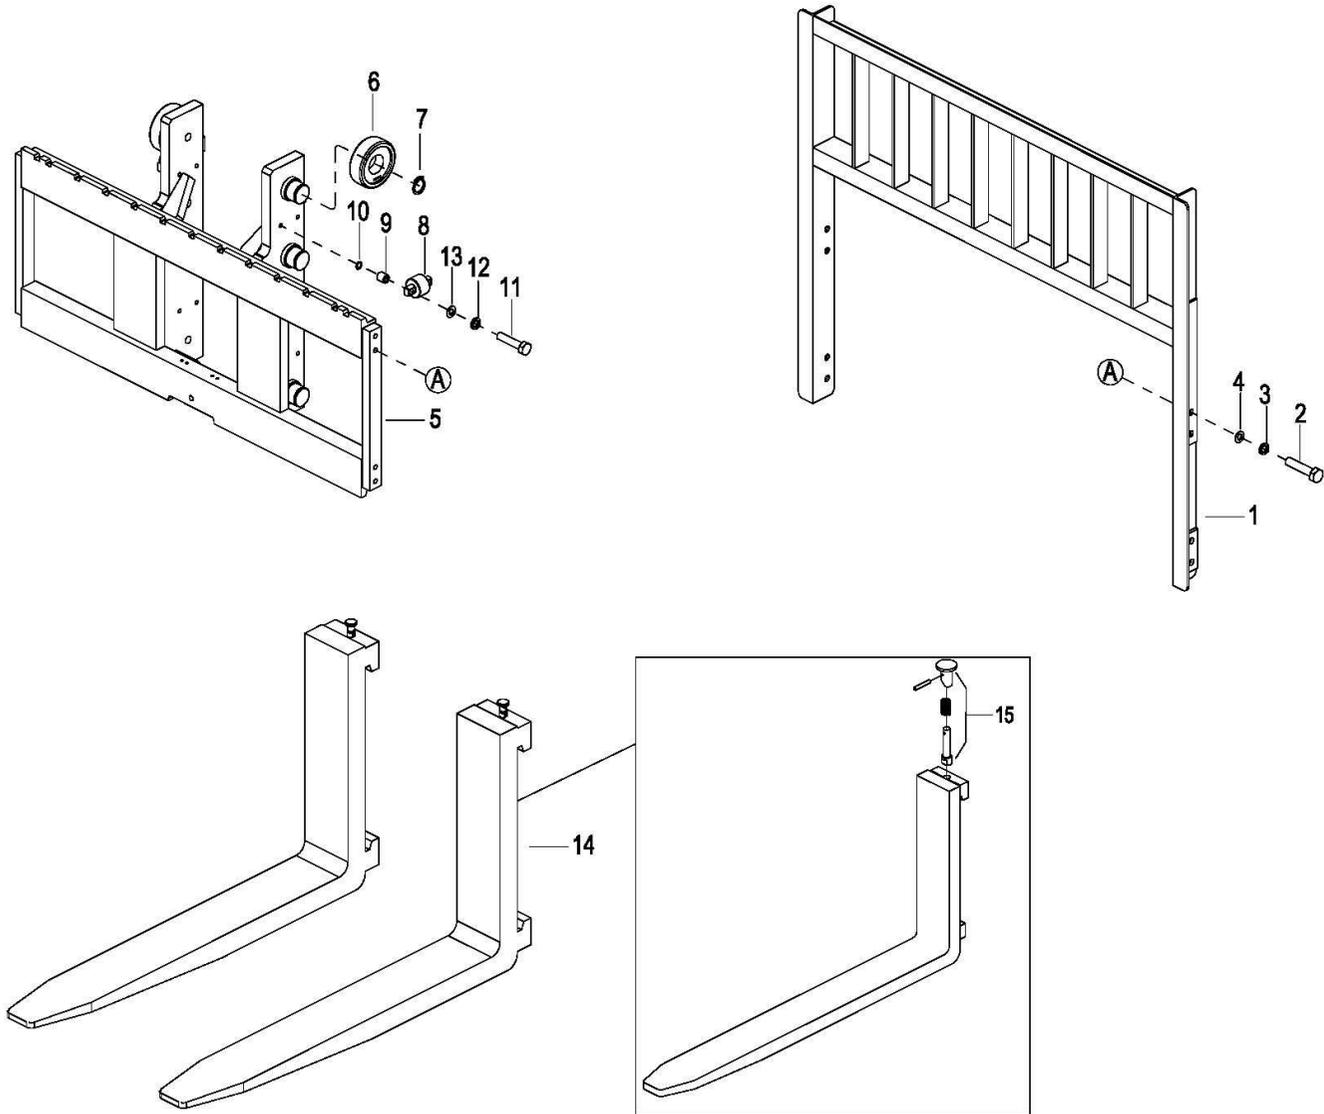


0717 Fork Frame

货叉架

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-842000-30	Baffle 挡货架体	1		
2	0000-000047-00	Bolt M14x45 螺栓	2		
3	0000-000233-00	Lock Washer ø14 弹垫	2		
4	0000-001004-00	Flat Washer ø14 平垫	2		
5	3845-831000-00	Lift Bracket 货叉架	1		
6	MG50A2-1T-00	Main Roller 主滚轮	6		
7	305001000021	Axle Circlip D50 轴用卡簧	6		
8	SR60N50-1-00	Side Roller II 侧滚轮 II	4		
9	3845-800012-30	Adjusting Sleeve 调整套	8		
10	3845-800013-30	Sleeve Washer 调整套垫	Req.		
11	301000000071	Bolt M12x1.5x60 螺栓	8		
12	0000-000060-00	Lock Washer ø12 弹垫	8		
13	0000-000554-00	Flat Washer ø12 平垫	8		
14	3845-803000-30	Fork 货叉	2		150*1070
15	3218-800002-00	Pin assembly 提拔销总成	2		

0718 Chain Assembly

链条总成

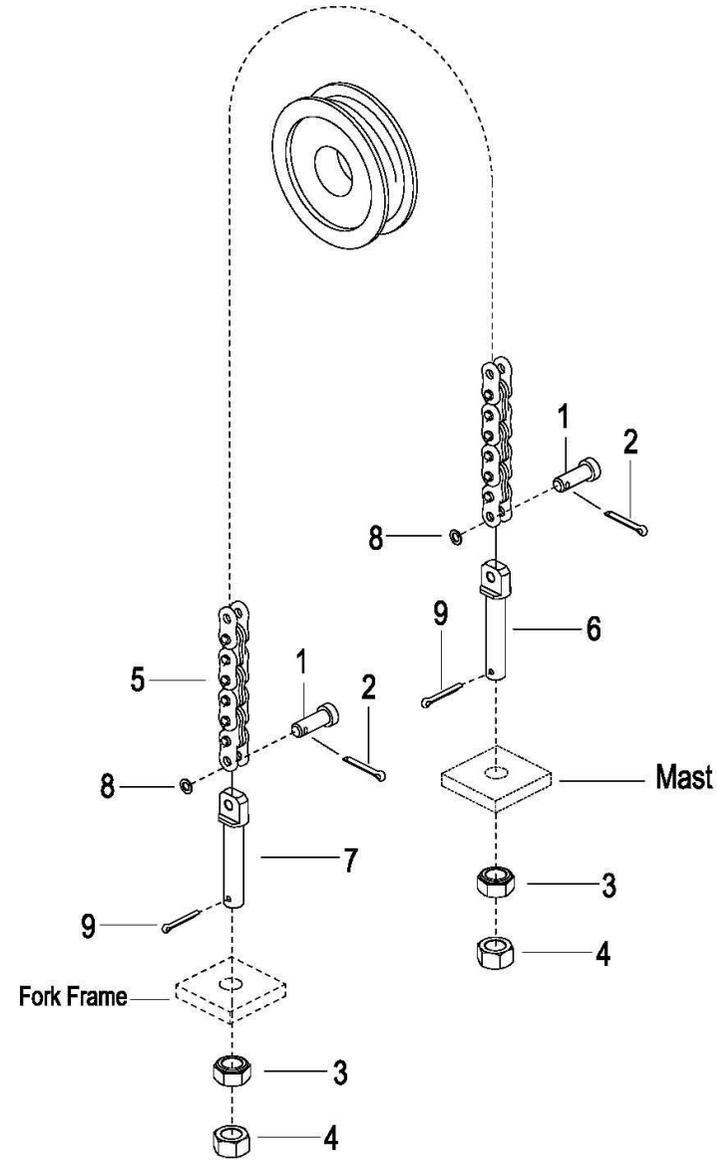

0718 Chain Assembly

链条总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3845-801002-30	Pin 销轴（链接头）	2		
2	0000-001151-00	Cotter Pin \varnothing 3.2×36 开口销	2		
3	303000000016	Nut M24×1.5 锁紧螺母	2		
4	303002000013	Nut M24×1.5 螺母	2		
5	3845-801100-30	Chain I 链条 I	1		
5	3845-802100-30	Chain II 链条 II	1		
6	3845-801001-30	Chain Anchor 链条上接头	1		
7	3845-801003-30	Chain Anchor 链条下接头	1		
8	0000-000007-00	Washer \varnothing 10 垫片	2		
9	307000000001	Cotter Pin \varnothing 3.2×50 开口销	2		