

ICE251B/EFL252/ICE251

Counterbalance Lift Truck

Parts Manual

平衡重式叉车

零件目录



PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handling of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your EP. If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval . EP cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received. Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

PART LIST

The Index, describes the item on the figure you are looking at. The Part No. is a numerical description of the item and the part ordering number. The Part Name is a description of the part number in alphabetical form. The No.Req.is the quantity used on the machine.

零件订购说明

怎么样订购

当你订购的时候，你需要提供叉车零件的编号，数量，型号和序列号。提供这些信息能够保证你的订购更加的高效。

因为你的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理你的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎么样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

你要总是从销售给你 EP 叉车的经销商那里订购零件。如果经销商有必要从公司订购零件，他能为你提供快捷的服务。根据你的订购信息，零件和它对应的操作说明会被一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司接受的。

EP 不会对没有经过授权但退还过来的零件负责。

如果你有一些零件一定要退还，请联系你的经销商。如果他认为零件可以被退还，那么他会安排授权要退还的零件。

技术修改

当叉车技术上有修改时，这本手册的修正页会重新发行。当你拿到这些修正页时，你一定要立即把它们插入到你的零件手册中。没有及时的更新你的零件手册，会导致你有些困惑，或者会导致你订购错误的零件。

零件清单

Index 描述的是在插图上，你想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Part Name** 是用文字的形式描述零件的号码。**No.Req.**代表的是零件在叉车上使用的数量。

HOW TO READ PARTS MANUAL

怎么读取零件明目录

Tip 1:

A: The part of Index 10 is chosen by different tongue of the same series type.

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
-------------	------------------	-------------------	-----------	----------------------	--------------

9	0000-000539-00	Flatwasher Φ24 平垫	3		
10	3218-130000-00	Counter Weight 平衡重	1		CPD18TV
10	3220-130000-00	Counter Weight 平衡重	1		CPD20TV
10	3216-130000-00	Counter Weight 平衡重	1		CPD16TV
10	3215-130000-00	Counter Weight 平衡重	1		CPD15TV
10	3213-130000-00	Counter Weight 平衡重	1		CPD13TV
11	1220-150006-00	Screw 螺钉	2		

A ⇒

B: The part of Index 7 is Optional.

KIT	3115-WHK-0A02	Kit for slider 滑块修理包	1		
7	3218-800001-10	Fork 货叉	1		100*40*920
7	3218-800001-20	Fork 货叉	1		100*40*1070
7	3218-800001-30	Fork 货叉	1		100*40*1150
7	3218-800001-40	Fork 货叉	1		100*40*1200
8	3218-800002-00	Pin assembly 提拨销总成	2		

B ⇒

C: The number of Index 40 is chosen by the actual requirements.

39	3218-600006-00	Shock Absorber 减震垫	3		
40	3218-332002-00	Collar 旋转套筒	Req		

C ⇒

D: The part of Index 34 is cancelled because of the design perfect , and there is an new part which is make the use more perfect.

33	3218-330001-A0	Cushion 靠垫	1		
34	01 3218-330005-A0	Switch 指尖触动开关	4		Cancelled
	02 CK11-56003-00	JC100 Switch 拇指开关	4		
35	0000-000277-00	Bolt M6×25 螺栓	2		

D ⇒

E: The part of Index 19 has an Applicability, because it's our policy to constantly improve our products.

E-1: Record by time

- 053011 : Ending on May 30, 2011.

053011- : Beginning on May 30, 2011.

E-2: Record by serial number

-S2016344 : Ending at S2016344

S2016345- : Starting at S2016345

There are three types of serial number:

1) 1 (LETTER)+7 (NUMBERS)

Applied Date: Up to February 1, 2015

2) 1 (LETTER)+ 8 (NUMBERS)

Applied Date: From February 1, 2015 to June 1, 2015

3) 1 (NUMBER)+ 8 (NUMBERS)

Applied Date: From June 1, 2015




Index	Part No.	Part Name	No.	Applied Date	Remark
序号	零件编号	零件名称	数量	适用日期	备注

E →

18		0000-000277-00	Bolt M8×25 螺栓	3		
19	01	3218-113000-00	Gas Spring 气弹簧后安装板	1	-053011	
	02	3218-113000-0A	Gas Spring 气弹簧后安装板	1	053011-	
20		3218-110007-00	Shock Absorber 地板减震垫	4		

F →

7	01	2125-410004-	Cap 导向套	1	-S2016344	
	02	2125-410004-	Cap 导向套	1	S2016345-	
8		0000-000084-	Ring Wiper 防尘圈	1		
9		0000-000370-	O-ring O型密封圈	1		

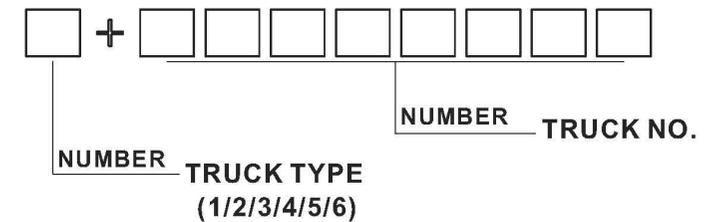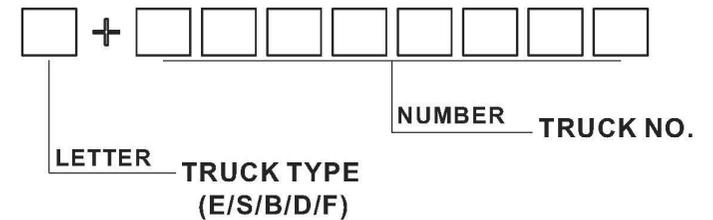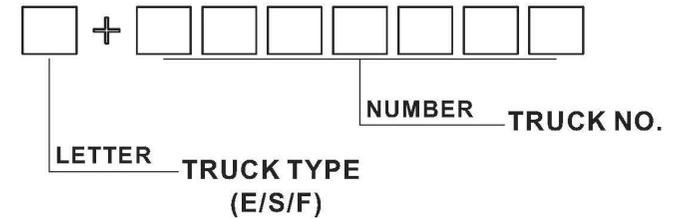

要点 1:

A: 同系车型中，序列 10 根据不同吨位进行选择。

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
9	0000-000539-00	Flatwasher Φ24 平垫	3		
10	3218-130000-00	Counter Weight 平衡重	1		CPD18TV
10	3220-130000-00	Counter Weight 平衡重	1		CPD20TV
10	3216-130000-00	Counter Weight 平衡重	1		CPD16TV
10	3215-130000-00	Counter Weight 平衡重	1		CPD15TV
10	3213-130000-00	Counter Weight 平衡重	1		CPD13TV
11	1220-150008-00	Screw 螺钉	2		

A ⇒

B: 序号 7 表示该零件有几个品种可供您的选择。

KIT	3115-WHK-0A02	Kit for slider 滑块修理包	1		
7	3218-800001-10	Fork 货叉	1		100*40*920
7	3218-800001-20	Fork 货叉	1		100*40*1070
7	3218-800001-30	Fork 货叉	1		100*40*1150
7	3218-800001-40	Fork 货叉	1		100*40*1200
8	3218-800002-00	Pin assembly 提拔销总成	2		

B ⇒

C: 序号 40 表示该零件的数量有实际需求决定。

39	3218-600006-00	Shock Absorber 减震垫	3		
40	3218-332002-00	Collar 旋转套筒	Req		

C ⇒

D: 序号 34 表示由于设计完善要求，取消并由新的零件替换。

33	3218-330001-A0	Cushion 靠垫	1		
34	01 3218-330005-A0	Switch 指尖微动开关	4		Cancelled
	02 CK11-56003-00	JC100 Switch 拇指开关	4		
35	0000-000277-00	Bolt M8×25 螺栓	2		

D ⇒

E: 序号 19 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。

E-1: 用时间记录

- 053011 : 截止到 2011 年 5 月 30 日

053011- : 起始于 2011 年 5 月 30 日

E-2: 用序列号记录

-S2016344 : 截止序列号 S2016344

S2016345- : 起始序列号 S2016345

有三种序列号形式:

1) 1 (字母) + 7 (数字)

适用时间: 截止到 2015 年 2 月 1 日

2) 1 (字母) + 8 (数字)

适用时间: 2015 年 2 月 1 日至 2015 年 6 月 1 日

3) 1 (数字) + 8 (数字)

适用时间: 2015 年 6 月 1 日至今




Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
-------------	------------------	-------------------	-----------	----------------------	--------------

E →

18	0000-000277-00	Bolt M8x25 螺栓	3		
19	01 3218-113000-00	Gas Spring 气弹簧后安装板	1	-053011	
	02 3218-113000-0A	Gas Spring 气弹簧后安装板	1	053011-	
20	3218-110007-00	Shock Absorber 地板减震垫	4		

F →

7	01 2125-410004-	Cap 导向套	1	-S2016344	
	02 2125-410004-	Cap 导向套	1	S2016345-	
8	0000-000084-	Ring Wiper 防尘圈	1		
9	0000-000370-	O-ring O型密封圈	1		

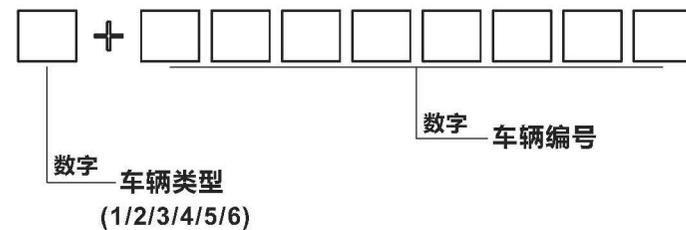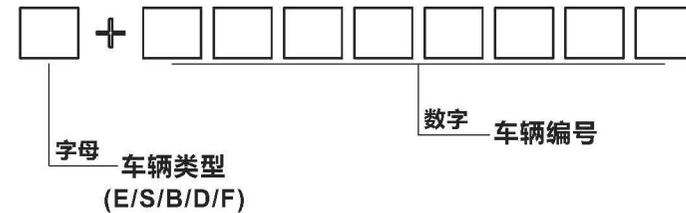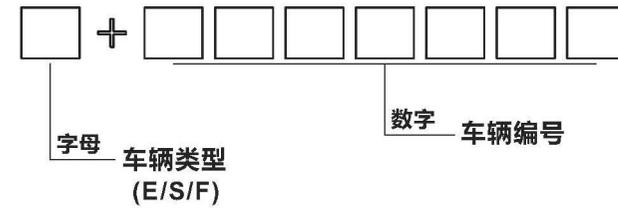

Tip 2

A: Section 0102 is the original version.

B: Section 010201 is the version that some parts in the Section 0102 have been changed.

C: Section 010202 is the version that some parts in the Section 010201 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.


要点 2

A: 章节 0102 表示原始版本;

B: 章节 010201 表示在原始版本 (章节 0102) 上零件有所变更;

C: 章节 010202 表示在变更版本 (章节 010201) 上零件有所变更。

当您订购零件时, 请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

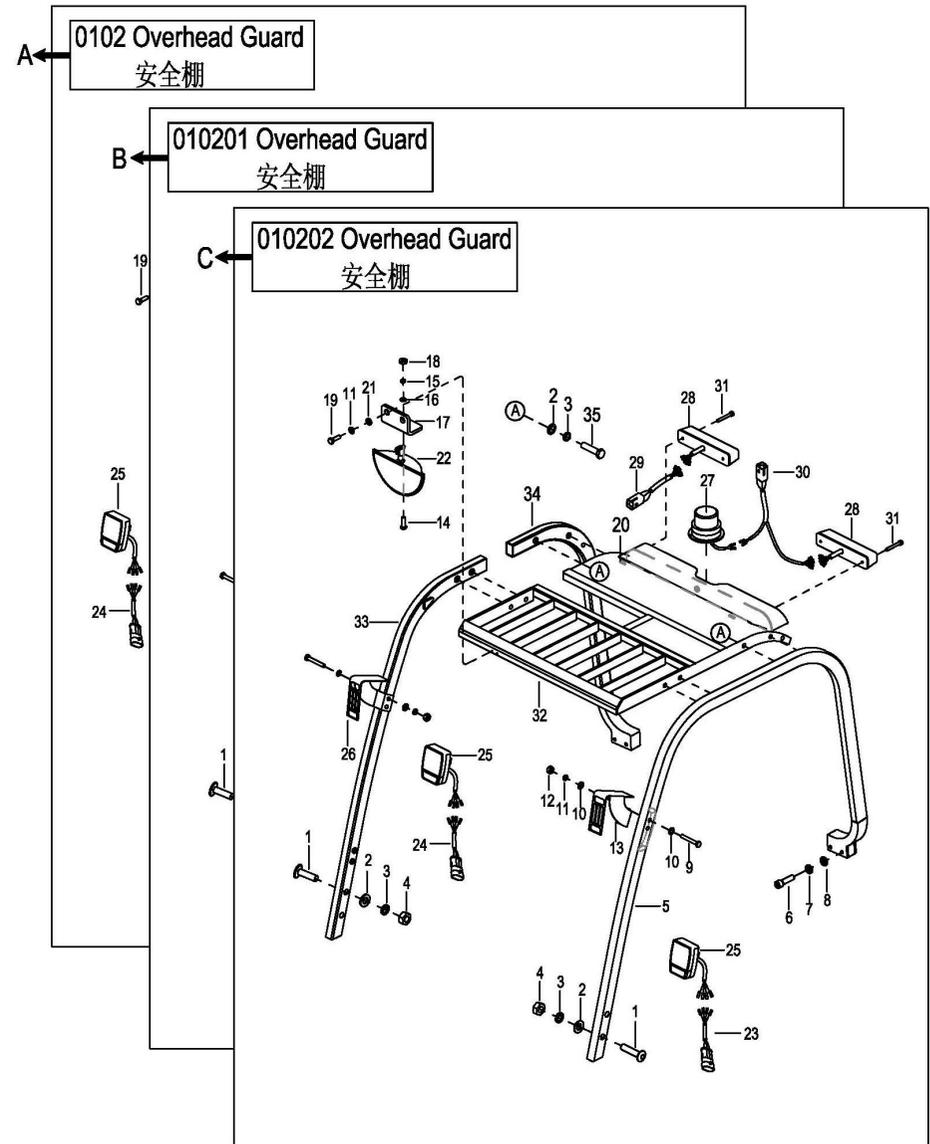

Index 目录


1000 Frame System 车身系统	1
0101 Frame System 车身系统	2
0102 Overhead Guard 安全棚	7
0103 Front Cover 前外罩	10
0104 Back Cover 后外罩	12
2000 Steering Control System 操作系统	18
0201 Steering Control System 操作系统	19
0202 Parking Brake 脚刹总成	22
0203 Meter 仪表	24
0204 Steering Assembly 转向柱总成	28
0205 Valve Control Linkage 多路阀操作杆	31
3000 Driving System 驱动系统	35
0301 Driving System 驱动系统	36
0302 Drive axle assembly 驱动桥总成	40
0303 Brake assembly 制动器总成	43
0304 Drive wheel 驱动轮	44
0305 Differential 差速器	46
0306 Gearbox assembly 减速箱总成	48
4000 Hydraulic System 转向系统	51
0401 Steering system 转向系统	52
0402 STEERING AXLE 转向桥	54
0403 STEERING CYLINDER 转向油缸	57
5000 Electrical System 电气系统	59
0501 HARNESS 线束	60
0502 Control Bracket Assembly (ICE251B) 控制器安装板总成	64

0503 Control Bracket Assembly (ICE251、EFL252)控制器安装板总成	67
0504 Cable 电缆总成	73
0505 Lithium Battery Assembly 锂电池总成	77
6000 液压系统	81
0601 Hydraulic System I 液压管路 I	82
0602 Hydraulic System I 液压管路 II	84
0603 Hydraulic oil 油箱	90

1000
Frame System
车身系统

0101 Frame System (Serial Number up to -2301800075)

车身系统

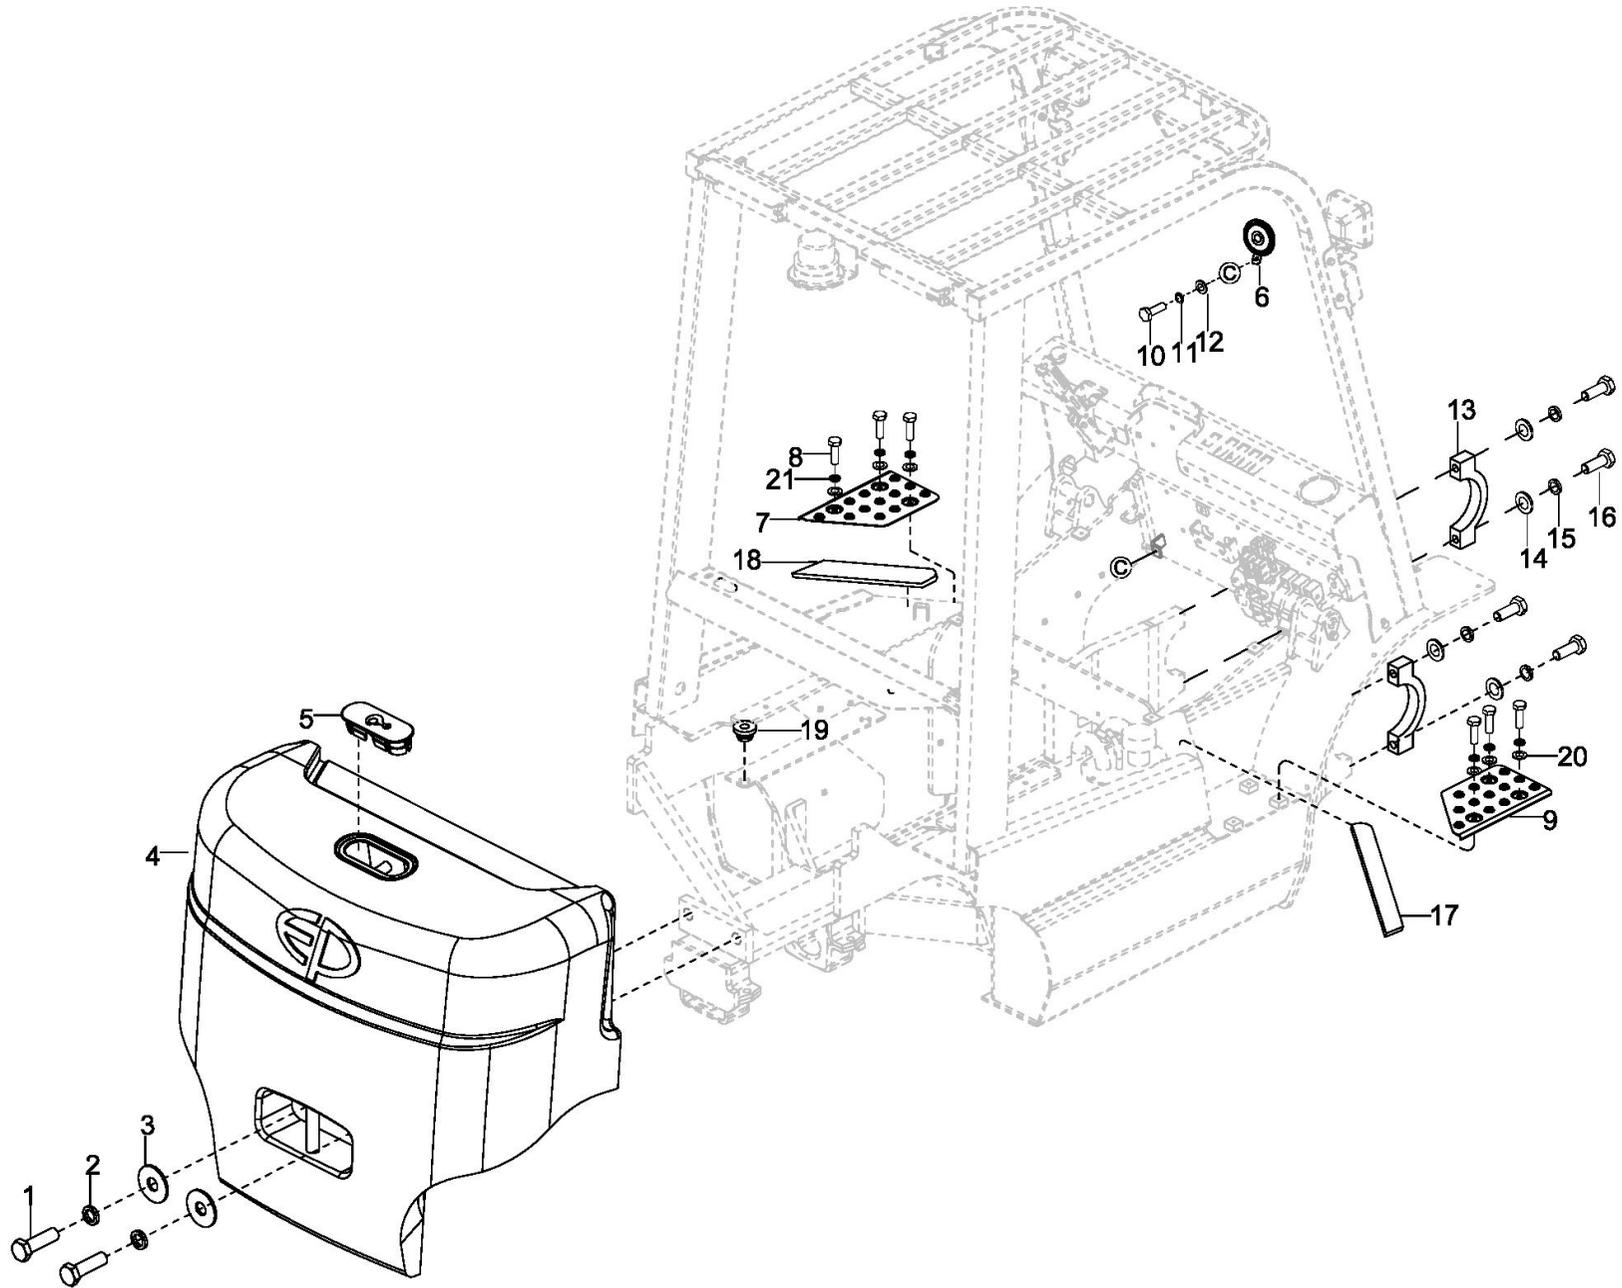


0101 Frame System (Serial Number up to -2301800075)

车身系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	301000000463	Bolt M30×2×120 螺栓	2	-2301800075	
2	304000000092	Lock washerø30 弹垫	2	-2301800075	
3	3127-100004-00	Washer ø30 垫片	2	-2301800075	
4	3127-100003-00	Counter Weight 平衡重	1	-2301800075	ICE251B、EFL252
4	3127-100003-10	Counter Weight 平衡重	1	-2301800075	ICE251
5	3125-100009-00	Lifting Hole Cover 起吊孔盖	1	-2301800075	
6	3218-600500-00	Speaker 喇叭	1	-2301800075	
7	7331-500019-00	Pedal L 左上车踏板	1	-2301800075	
8	302000000189	Screw M8×16 螺栓	6	-2301800075	
9	7331-500036-00	Pedal R 右上车踏板	1	-2301800075	
10	301002000014	Bolt M8x20 螺栓	1	-2301800075	
11	304003000005	Lock washer ø8 弹垫	1	-2301800075	
12	304002000005	Plain washer ø8 平垫	1	-2301800075	
13	3127-100001-00	CAP 驱动桥支撑轴承盖	2	-2301800075	
14	304000000044	Plain washer ø16 平垫	4	-2301800075	
15	304000000055	Lock washer ø16 弹垫	4	-2301800075	
16	301000000315	Bolt M16x1.5x80 螺栓	4	-2301800075	
17	7331-500022-00	Cushion Mat L 左橡胶垫板	1	-2301800075	
18	7331-500025-00	Cushion Mat R 右橡胶垫板	1	-2301800075	
19	3218-110005-00	Rubber 侧板减震垫	4	-2301800075	
20	304000000040	Pain washer 平垫	6	-2301800075	
21	304000000052	Lock washer ø8 弹垫	6	-2301800075	

010101 Frame System (Serial Number from 2301800076-)

车身系统

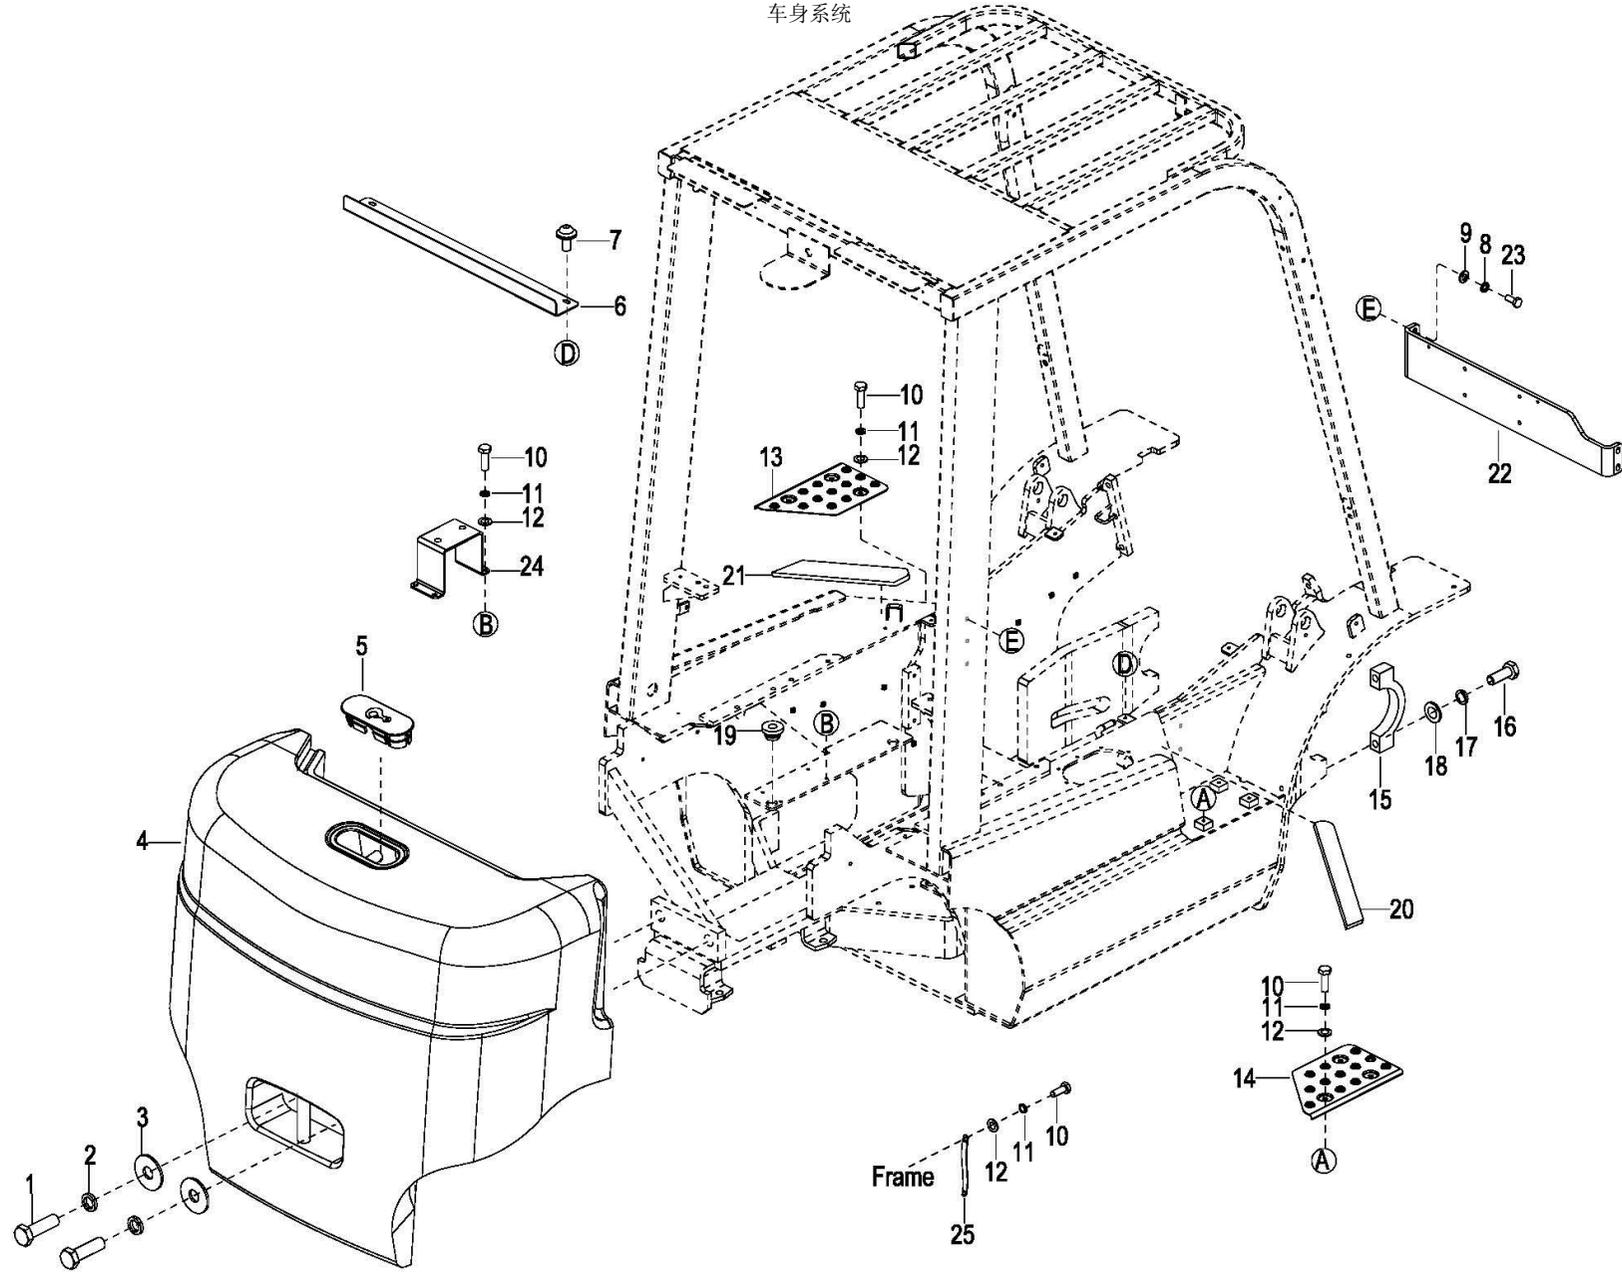

010101 Frame System (Serial Number from 2301800076-)


车身系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	301000000463	Bolt M30×2×120 螺栓	2	2301800076-	
2	304000000092	Lock washerø30 弹垫	2	2301800076-	
3	3127-100004-00	Washer ø30 垫片	2	2301800076-	
4	3127-100003-00	Counter Weight 平衡重	1	2301800076-	ICE251B、EFL252,No Casting,EP20230414
4	3127-100003-20	Counter Weight 平衡重	1		ICE251B、EFL252,typecasting,EP20230414
4	3127-100003-10	Counter Weight 平衡重	1	2301800076-	ICE251
5	3125-100009-00	Lifting Hole Cover 起吊孔盖	1	2301800076-	
6	3127-100005-00	Plate 控制器前防水板	1	2301800076-	BGD-21-002289
7	302000000221	Screw M8x20 螺钉	2	2301800076-	
8	304000000053	Lock washer ø10 弹垫	9	2301800076-	
9	304000000034	Flat washer ø10 大平垫	9	2301800076-	
10	302000000189	Screw M8×16 螺钉	15	2301800076-	
11	304000000052	Lock washer ø8 弹垫	15	2301800076-	
12	304000000040	Flat washer ø8 平垫	15	2301800076-	
13	7331-500019-00	Pedal L 左上车踏板	1	2301800076-	
14	7331-500036-00	Pedal R 右上车踏板	1	2301800076-	
15	3127-100001-00	CAP 驱动桥支撑轴承盖	2	2301800076-	
16	301000000315	Bolt M16x1.5x80 螺栓	4	2301800076-	
17	304000000055	Lock washer ø16 弹垫	4	2301800076-	
18	304000000044	Flat washer ø16 平垫	4	2301800076-	
19	3218-110005-00	Rubber 侧板减震垫	4	2301800076-	
20	7331-500022-00	Cushion Mat L 左橡胶垫板	1	2301800076-	
21	7331-500025-00	Cushion Mat R 右橡胶垫板	1	2301800076-	
22	3127-100006-00	Brake Mounting plate 脚刹安装板	1	2301800076-	BGD-21-002289
23	301002000028	Bolt M10x30 螺栓	5	2301800076-	

24	3132-100013-00	Battery Bracket	电池底支架	2	2301800076-	BGD-21-002289,For 160Ah/205Ah/280Ah Option
25	3112-100033-10	Chain	静电链条	1	2311700352-	BGD-22-002701

0102 Overhead Guard

安全棚

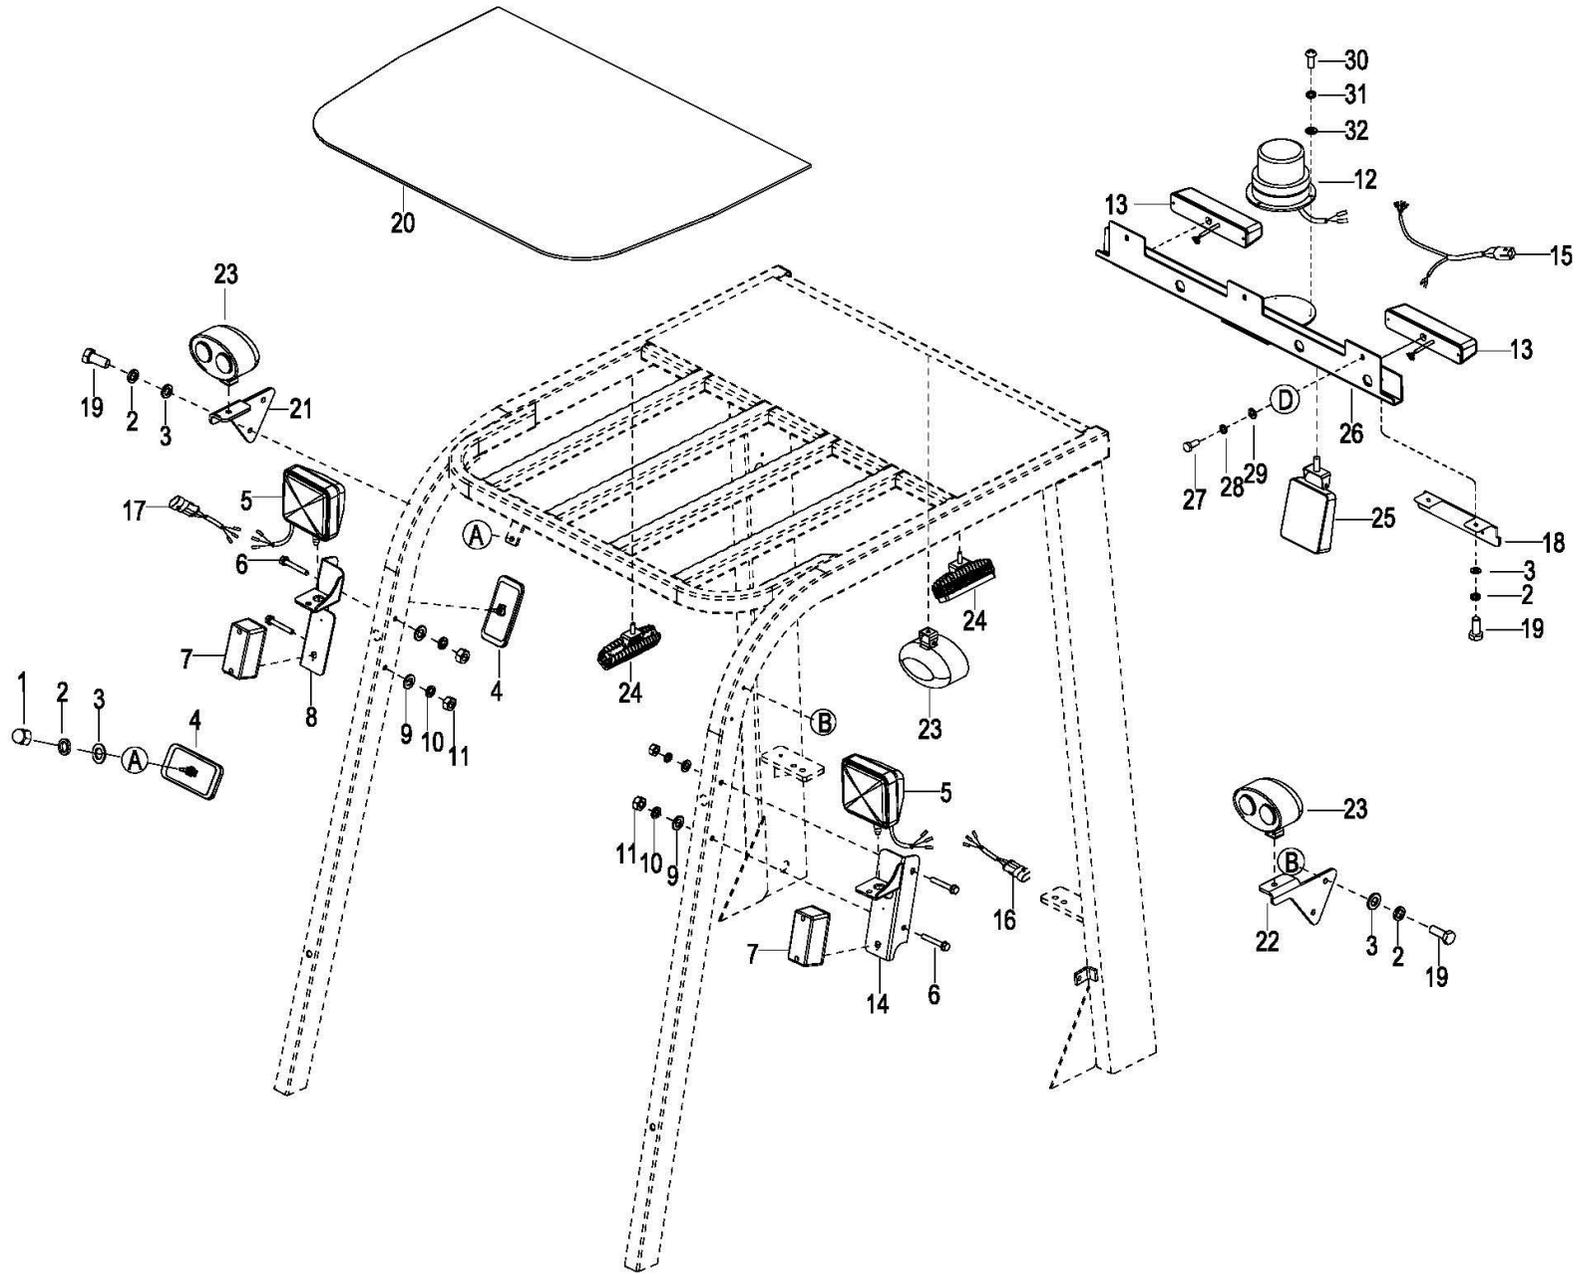

0102 Overhead Guard


安全棚

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	303013000003	Nut M8 带帽螺母	1		
2	304003000005	Lockwasher ø8 弹垫	7		
3	304002000005	Flatwasher ø8 平垫	7		
4	3125-122000-00-01	Viewfinder 后视镜	1		
5	01 3125-600300-00	Head lamp 前大灯	2		superseded by 7830-800010-00
	02 7830-800010-00	Head lamp 前大灯	2		BGD-22-001726
6	301016000001	Bolt M8x55 螺栓	4		
7	01 3125-600400-00	Front combination lamp 前小灯	2		superseded by 3870-300012-00
	02 3870-300012-00	Front combination lamp 前小灯	2		BGD-22-001726
8	7331-527000-00	Lamp Block R 右灯架焊件	1		
9	304000000040	Flatwasher ø8 平垫	4		
10	304000000052	Lockwasher ø8 弹垫	4		
11	303001000005	Nut M8 螺母	4		
12	3218-600400-00	Caution Switch 警示灯	1		
13	3525-680003-00	LED light LED 尾灯	2		
14	7331-526000-00	Lamp Block L 左灯架焊件	1		
15	3127-610003-00	Rear wiring harness 后尾灯线束	1		
16	7331-801200-00	Overhead guard harness L 左护顶架线束	1		
17	7331-801300-00	Overhead guard harness R 右护顶架线束	1		
18	7830-20002W-00	Bracket 牌照框安装板	1		
19	301002000013	Bolt M8x16 螺栓	6		
20	01 7330-582002-00	Glass roof 玻璃顶板	1	-2311000017	For EFL252、 ICE251
	02 3127-100009-00	Glass roof 玻璃顶板	1	2311000018-	BGD-21-008802

21		3111-100007-B0	Blue Light Plate R	右蓝光灯安装板	1		Optional
22		3111-100006-B0	Blue Light Plate L	左蓝光灯安装板	1		Optional
23		3316-971002-00	Blue Light	蓝光灯	3		Optional
24	01	1601-100004-10	Red Light	红光灯	3		Optional, Superseded by 3316-971100-00
	02	3316-971100-00	Red Light	红光灯	3		Optional, BGD-22-004396
25		3130-680100-10	Rear Work Light	后工作灯	1		Optional
26		3127-160000-00	Plate	后灯安装件	1	2311401029-	BGD-22-000067
27		301000000090	Bolt M6x16	螺栓	3	2311401029-	BGD-22-000067
28		304000000050	Lockwasher Φ6	弹垫	3	2311401029-	BGD-22-000067
29		304000000036	Flatwasher Φ6	平垫	3	2311401029-	BGD-22-000067
30		302004000027	Screw M4×12	螺钉	3		
31		304000000048	Lockwasher Φ4	弹垫	3		
32		304000000038	Flatwasher Φ4	平垫	3		

0103 Front Cover

前外罩

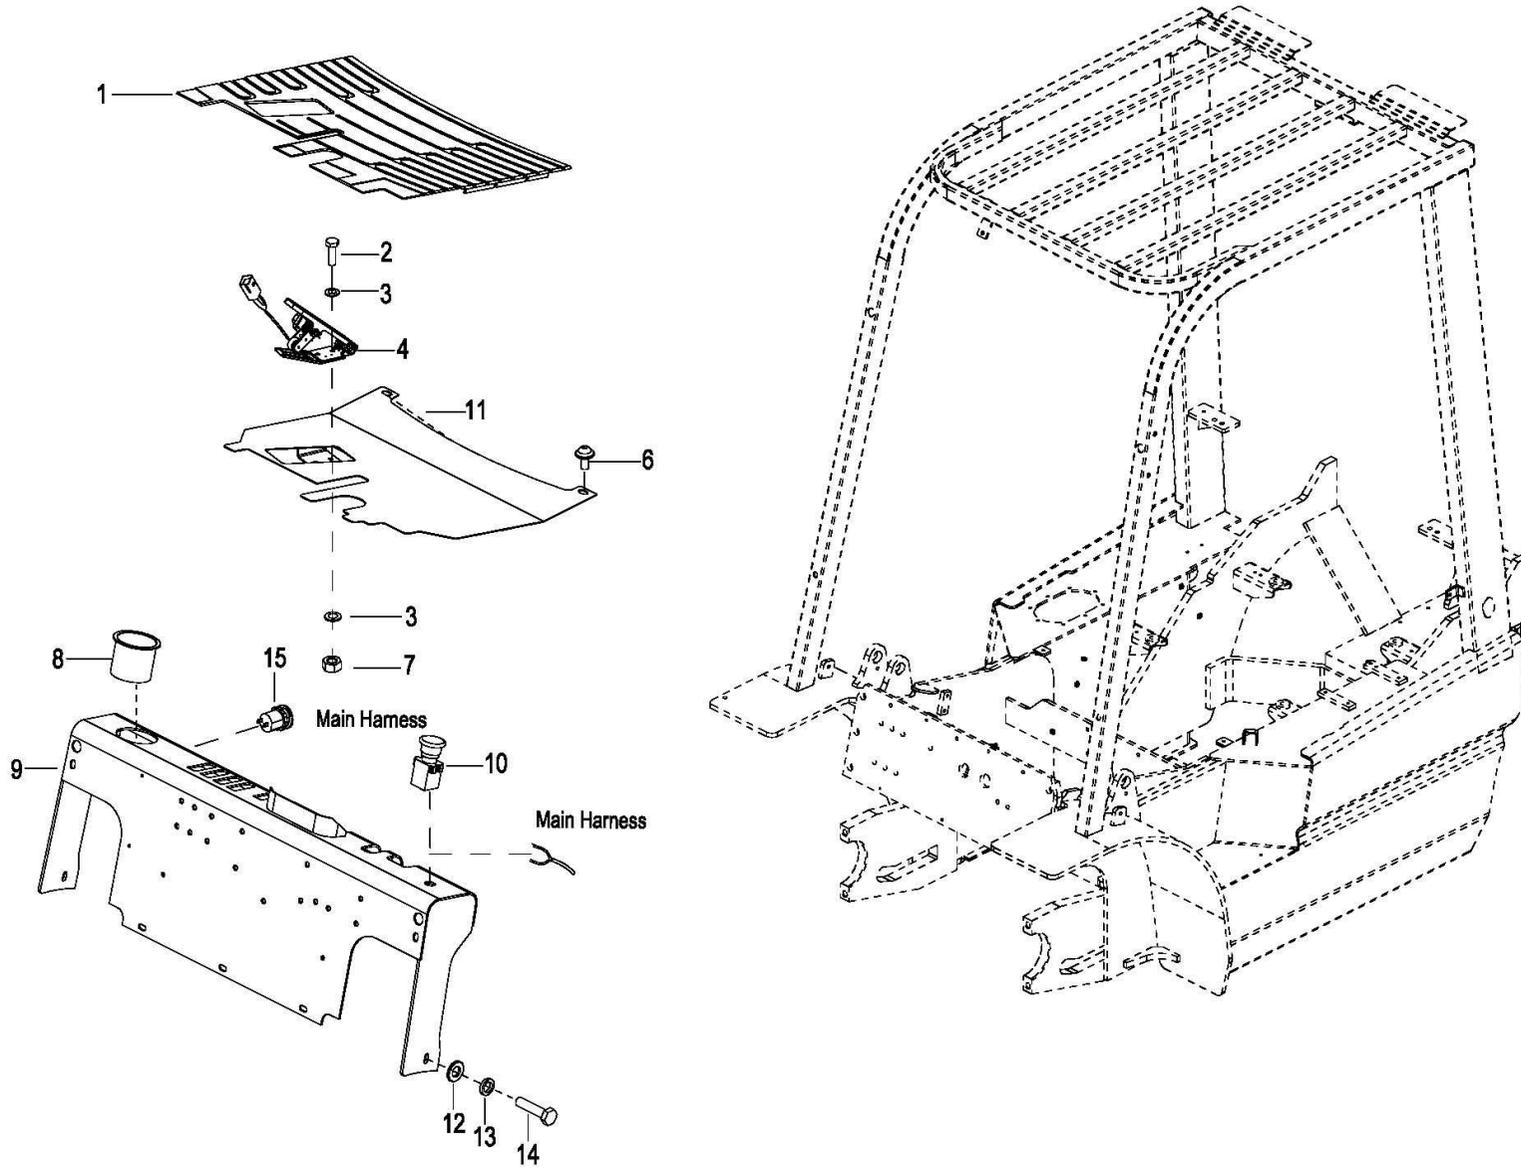


0103 Front Cover

前外罩

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3132-500001-00	Cushion 地板垫	1		
2	301000000372	Bolt M8x20 螺栓	2		
3	304000000105	Flat washer ø8 平垫	4		
4	3218-680000-10	Accelerator 加速器	1		
5	3218-606000-00	Warning Light Switch 警示灯开关	1	-2301400243	BGD-21-000886
6	302000000189	Screw M8x16 凸缘螺钉	4		
7	303022000004	Nut M8 螺母	2		
8	7331-550004-00	Box 储物盒	1		
9	01 3132-113000-0A	Dashboard 仪表架焊件	1	-2311000017	ICE251B
9	01 3132-113000-C0	Dashboard 仪表架焊件	1	-2311000017	EFL252、ICE251
	02 3132-113000-0B	Dashboard 仪表架焊件	1	2311000018-	BGD-21-008802
10	01 3218-604000-00	Emergency Stop Switch 急停开关	1		Superseded by 1113-5000012-E2
	02 1113-500012-E2	Emergency Stop Switch 警停开关	1		BGD-21-005920
11	3132-240000-0A	Floor Plate 前地板焊件	1		
12	304000000119	Flat washer ø10 平垫	2		
13	304000000053	Lock washer ø10 弹垫	2		
14	301000000209	Bolt M10x25 螺栓	2		
15	1261-500001-00	Cigarette Lighter 点烟器	1	2311000018-	BGD-21-008802

0104 Back Cover
后外罩

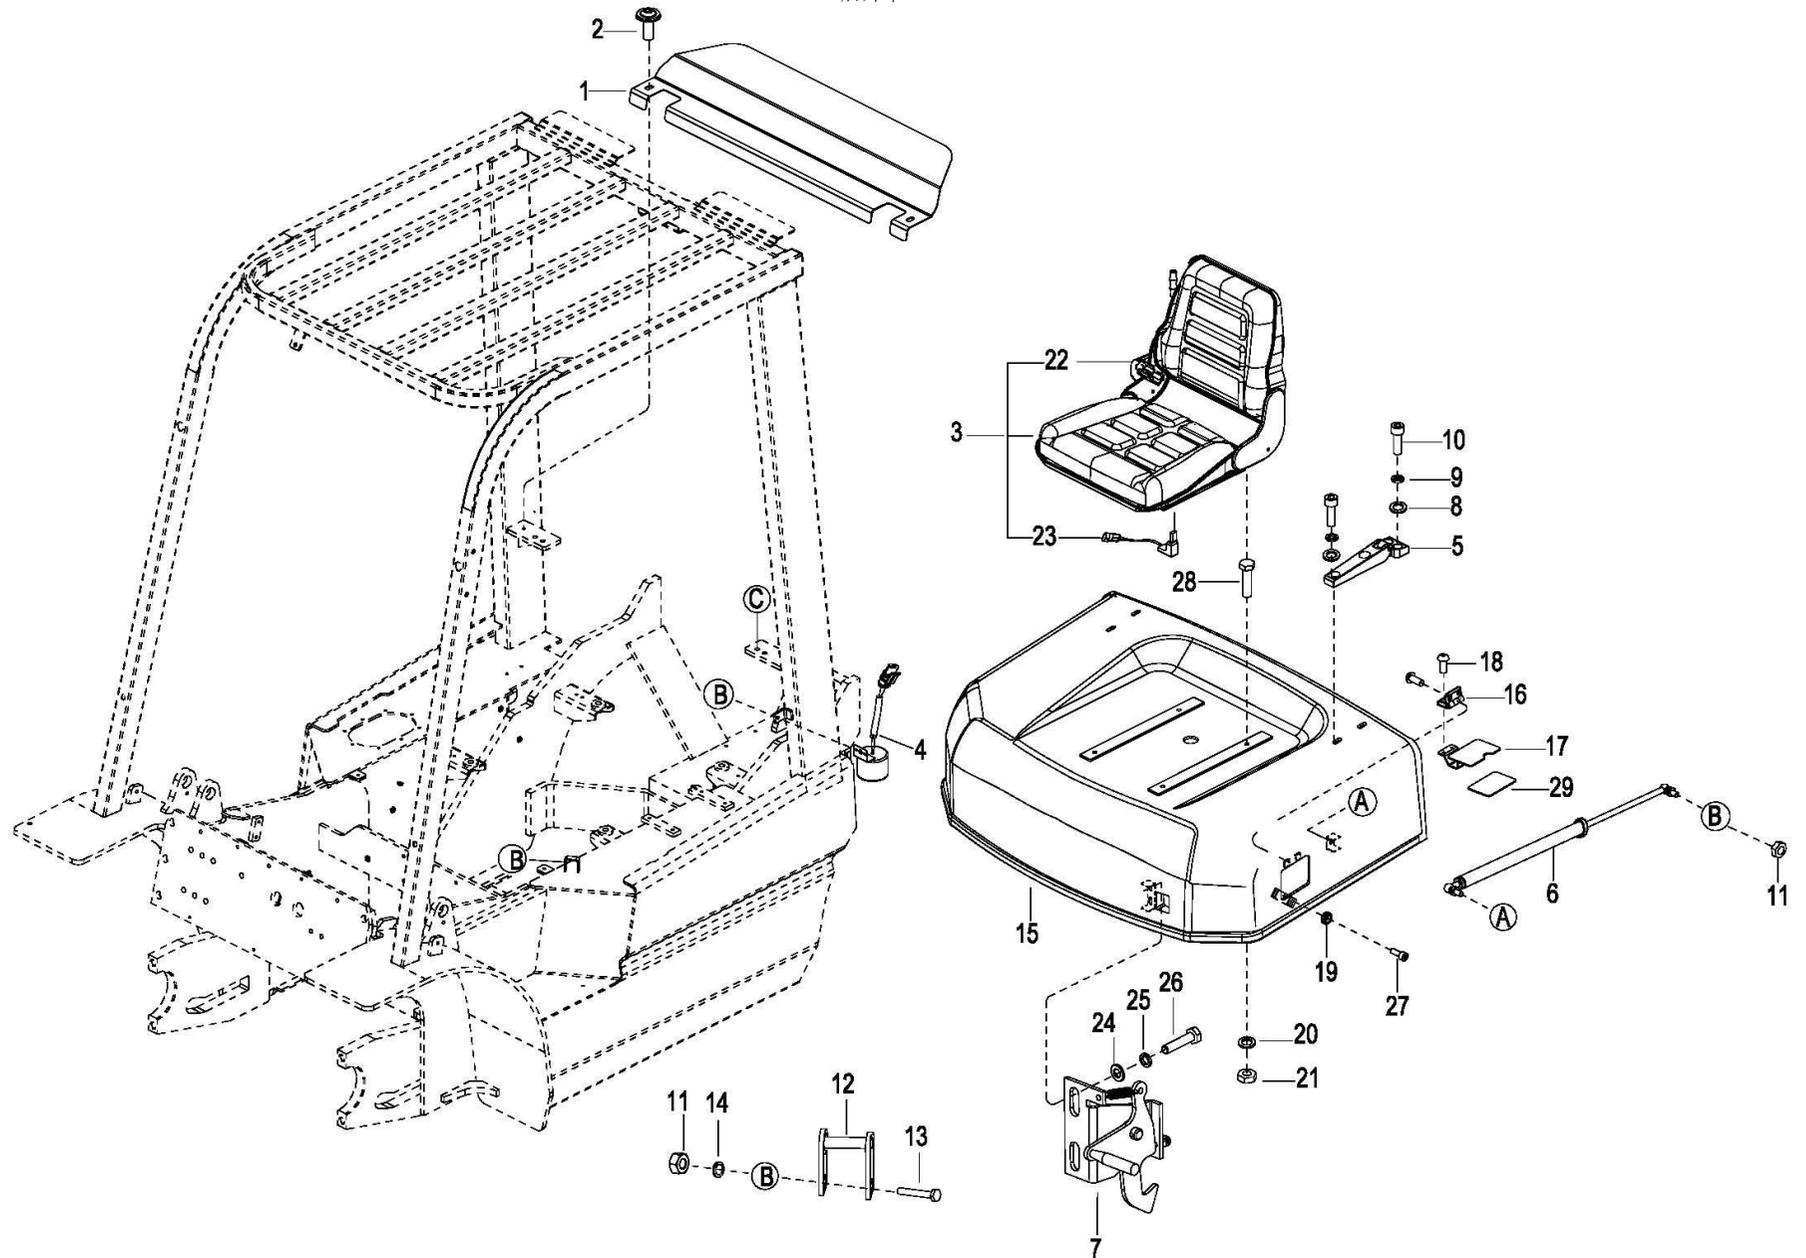

0104 Back Cover


后外罩

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7331-500026-00	Cover 水箱盖板	1		
2	302000000189	Screw M18x16 螺钉	2		
3	3132-212000-00	Seat 座椅	1		YL03.1103
3	3132-213000-00	Seat 座椅	1		YL03.1103,With Logic Switch,EP20230810
3	3132-215000-00	Seat 座椅	1		ZY-033BJ,EP20230810
3	3218-212000-00	Seat 座椅	1		16TA30013,EP20230810
3	3218-212000-10	Seat 座椅	1		16TA30041
3	3218-212000-20	Seat 座椅	1		16TA30046
3	3218-212000-10-02	Seat 座椅	1		With Logic Switch
3	3218-215000-10	Seat 座椅	1		BGD-23-001252,For CE
3	7825-500080-00	Seat 座椅	1		YY53-46,EP20230810
3	7830-500082-S0	Seat 座椅	1		16TA30055,EP20230810
3	7830-500083-S0	Seat 座椅	1		16TA30056,EP20230810
3	7830-500084-S0	Seat 座椅	1		16TA30041-1,EP20230810
3	7830-500120-S0	Seat 座椅	1		YY51-41,EP20230810
3	7845-525001-00	Seat 座椅	1		16TA30004,EP20230810
4	3218-600700-00	Alarm Buzzer 倒车蜂鸣器	1		
5	7331-560012-00	Hinge Assembly 机罩铰链总成	2		
6	7331-500016-00	Gas Spring 气弹簧	1		
7	3113-360000-00	Lock assembly 机罩锁组件	1		
8	304000000119	Flat washer ϕ 10 平垫	4		
9	304000000053	Lock washer ϕ 10 弹垫	4		
10	302000000427	Screw M10x30 内六角螺钉	8		
11	303022000004	Nut M8 螺母	2		

12	7331-500300-00	Bracket	锁钩固定轴总成	1		
13	301001000012	Screw M8x45	螺栓	1		
14	304000000040	Plain washer ø8	平垫	1		
15	3127-211000-00	Cover	机罩	1		
15	3127-211000-0A	Cover	机罩	1		For 410Ah Battery Version
16	3113-222000-00	Hinge	铰链	1		
17	3132-121000-00	Charge cover	充电舱盖	1		
18	302002000024	Screw M6×10	螺钉	4		
19	1118-650010-60	Magnet	磁铁	1		
20	302000000427	Screw M10x30	内六角螺钉	8		
21	304000000118	Flat washer ø8	平垫	4		
22	3132-212001-00	Seat belt	安全带	1		
23	3132-212002-00	Seat Switch	座椅开关	1		For 1103 Seat
23	3215-600200-00	Seat Switch	座椅开关	1		EP20230810
24	304000000040	Flat washer ø8	平垫	2		
25	304000000052	Lock washer ø8	弹垫	2		
26	301002000013	Bolt M8x16	螺栓	2		
27	302001000115	Screw M4x12	螺钉	1		
28	301016000004	Bolt M8x30	螺栓	4		
29	3132-100014-00	Rubber	橡胶圈	1	2311000018-	BGD-21-008802

0105 CAB

驾驶室

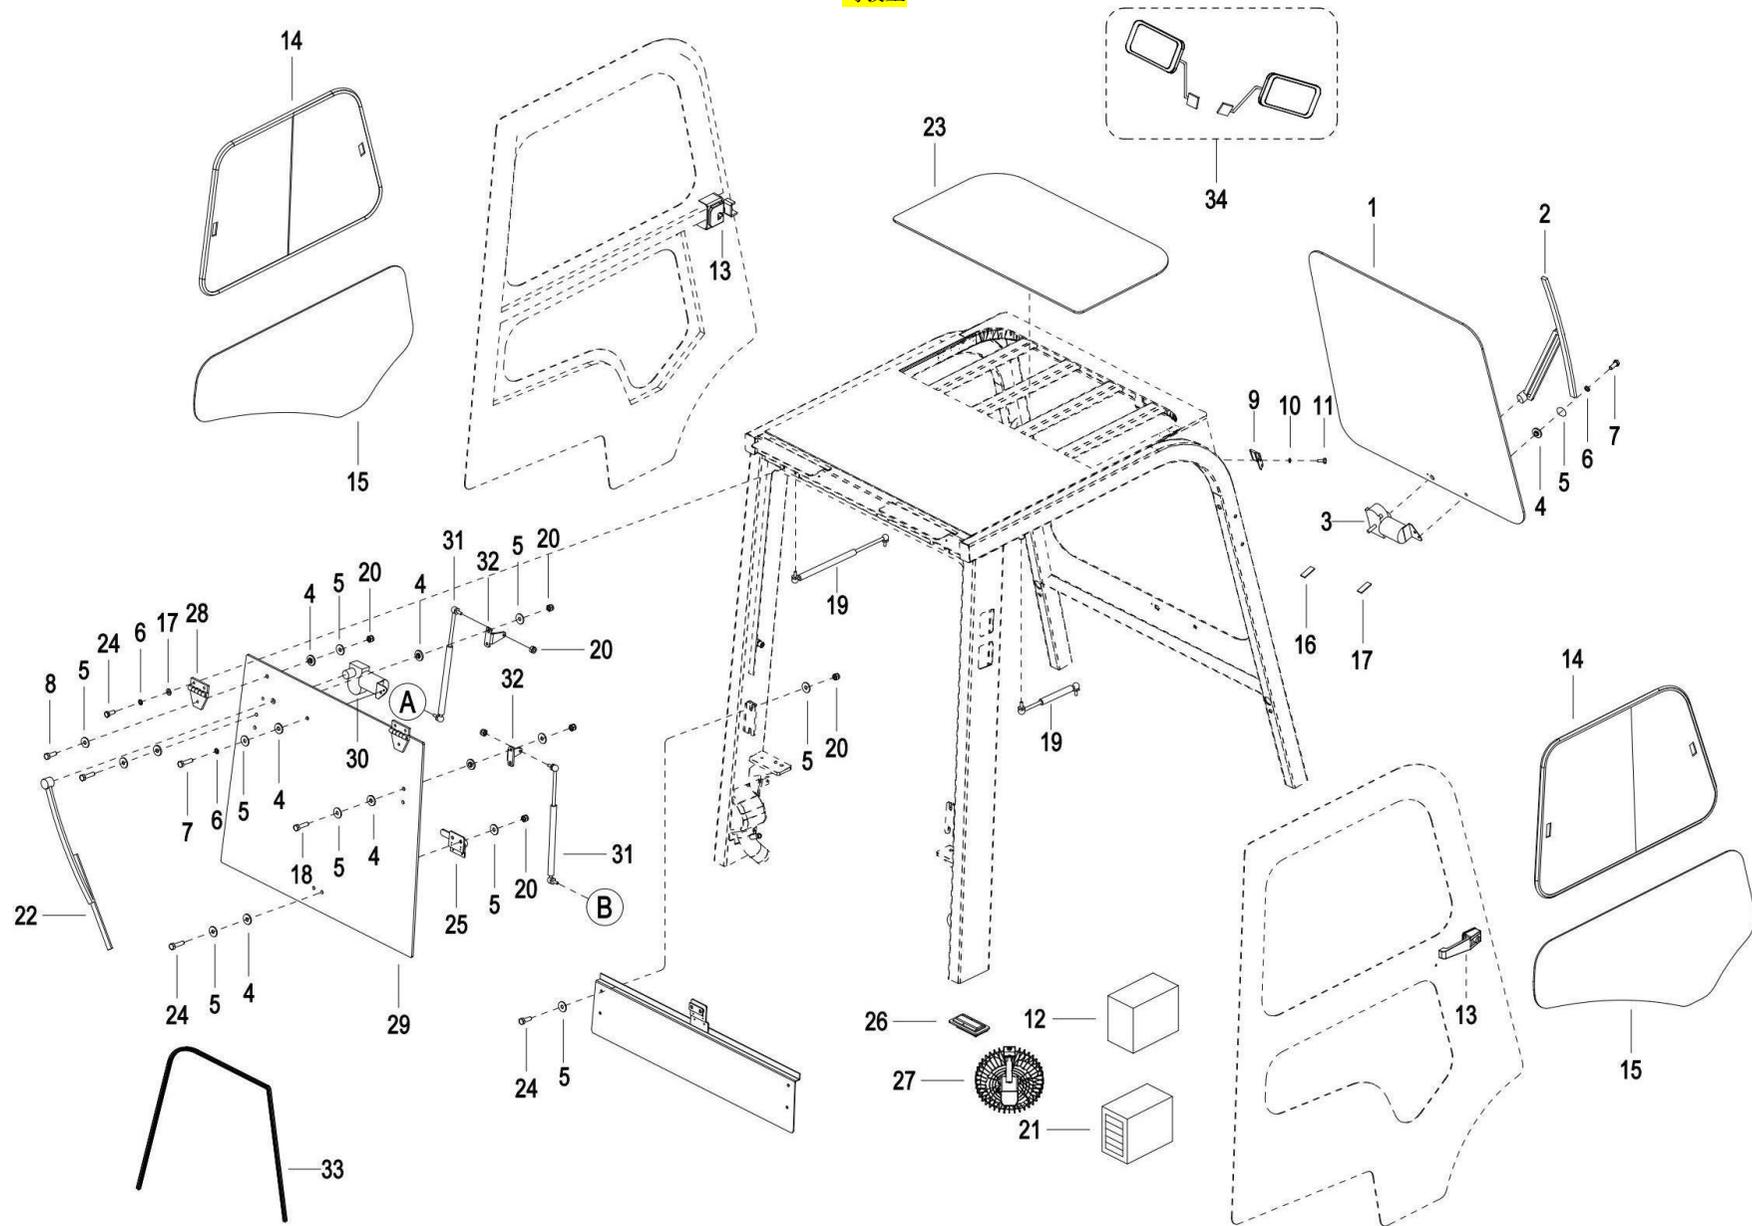

0105 CAB

驾驶室

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	7330-582001-00	Windscreen	前挡风玻璃	1		
2	7330-580013-00	Front wiper	前雨刮	1		
3	7330-580004-00	Front wiper motor	前雨刮电机	1		
4	3525-900013-00	Cushion	玻璃橡胶减震垫	Req.		
5	304000000033	Big plain washer 8	大垫圈	Req.		
6	304000000052	Lock washer 8	弹簧垫圈	Req.		
7	301002000014	Bolt M8*20	螺栓	3		
8	301002000017	Bolt M8*35	螺栓	2		
9	7815-581009-00	Fixed plate	前玻璃压板	4		
10	304000000050	Lock washer 6	弹簧垫圈	8		
11	301000000090	Bolt M6*16	螺栓	8		
12	7330-580005-00	Water box	喷水壶	1		
13	7330-580001-00	Door lock	门锁	2		
14	7330-582004-00	Mobile window	门活动玻璃	2		
15	7330-582005-00	Fixed window	门固定玻璃	2		
16	7330-580006-00	Switch,wiper	雨刮器开关	2		
17	7330-580007-00	Switch,water	喷水开关	1		
18	301002000018	Bolt M8*40	螺栓	4		
19	3115-212000-C0	Gas spring,side door	门气弹簧	2		
20	303000000047	Lock nut M8	防松螺母	Req.		
21	3132-300090-00	Fan heater	暖风机	1		Option
22	7330-580014-00	Rear wiper	后雨刮器	1		
23	7330-582002-00	Top glass	顶玻璃	1		
24	301002000015	Bolt M8*25	螺栓	12		
25	7330-580002-00	Window lock	窗锁	1		

0105 CAB


驾驶室

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
26	7330-580008-00	Top light	顶灯	1		
27	7330-580009-00	Fan	风扇	1		
28	7330-580010-00	Hinge	后玻璃铰链	2		
29	7330-582003-00	Rear window	后玻璃	1		
30	7330-580003-00	Rear wiper motor	后雨刮电机	1		
31	7330-580011-00	Gas spring,rear window	后玻璃气弹簧	2		
32	7330-580012-00	Bracket,rear	后气弹簧支座	2		
33	503100001538	Glass adhesive strip	玻璃胶条	1		
33	503100001344	Side door adhesive strip	侧门胶条	1		
34	7845-580007-00	Reflector Assembly	左右反光镜总成	1		

2000
Steering Control System
操作系统

0201 Steering Control System

操作系统

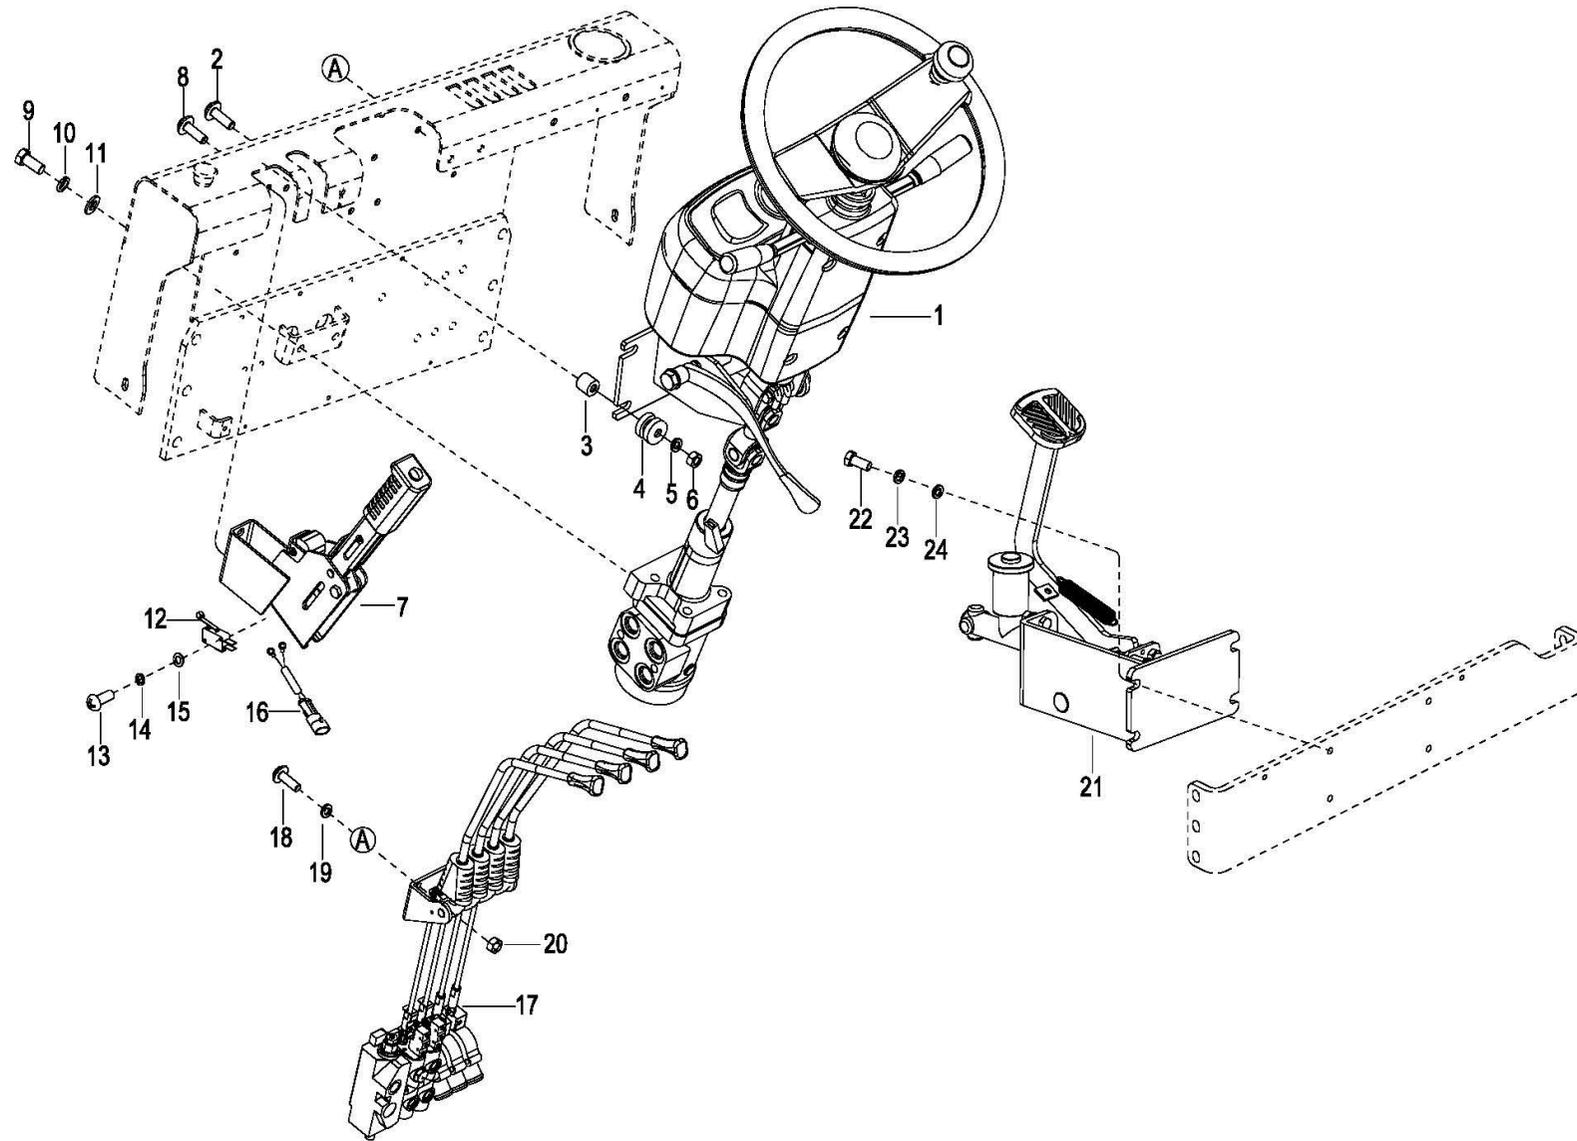

0201 Steering Control System


操作系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	See 0204	Steering Assembly 转向柱装配总成	1		
2	301000000334	Screw M10x40 法兰盘螺栓	4		
3	7331-410005-00	Locating bush 定位套	1		
4	7331-410007-00	Rubber meter 转向器橡胶垫	4		
5	304000000034	Flatwasher ø10 大平垫	4		
6	303000000024	Nut M10 螺母	4		
7	3132-650010-00	Parking Lever Assembly 手制动总成	1	-1312000706	
7	3132-340000-00	Handbrake 手刹	1	1312000707-	BGD-22-004558
8	301000000333	Blot M10x30 法兰面六角螺栓	2		
9	301004000006	Bolt M12x1.25x25 螺栓	2		
10	304000000051	Lockwasher ø12 弹垫	2		
11	304000000041	Flat washer ø12 平垫	2		
12	3132-605000-00	Micro-switch 微动开关	1		
13	302008000001	Screw M3x25 螺钉	2		
14	304003000001	Lockwasher ø3 弹垫	2		
15	304002000001	Flatwasher ø3 平垫	2		
16	3525-635000-00	Switch Harness 微动开关线束	1		
17	See 0205	Valve Control Linkage 多路阀操纵总成	1		
18	301016000002	Bolt M8x25 螺栓	4		
19	304000000118	Flatwasher ø8 大平垫	4		
20	303022000004	Nut M8 螺母	4		
21	See 0202	Parking Brake Assembly 脚刹总成	1		
22	301000000099	Blot M10x25 螺栓	4		
23	304000000053	Lockwasher ø10 弹垫	4		
24	304000000106	Flatwasher ø10 平垫	4		

--	--	--	--	--	--	--

0202 Parking Brake

脚刹总成

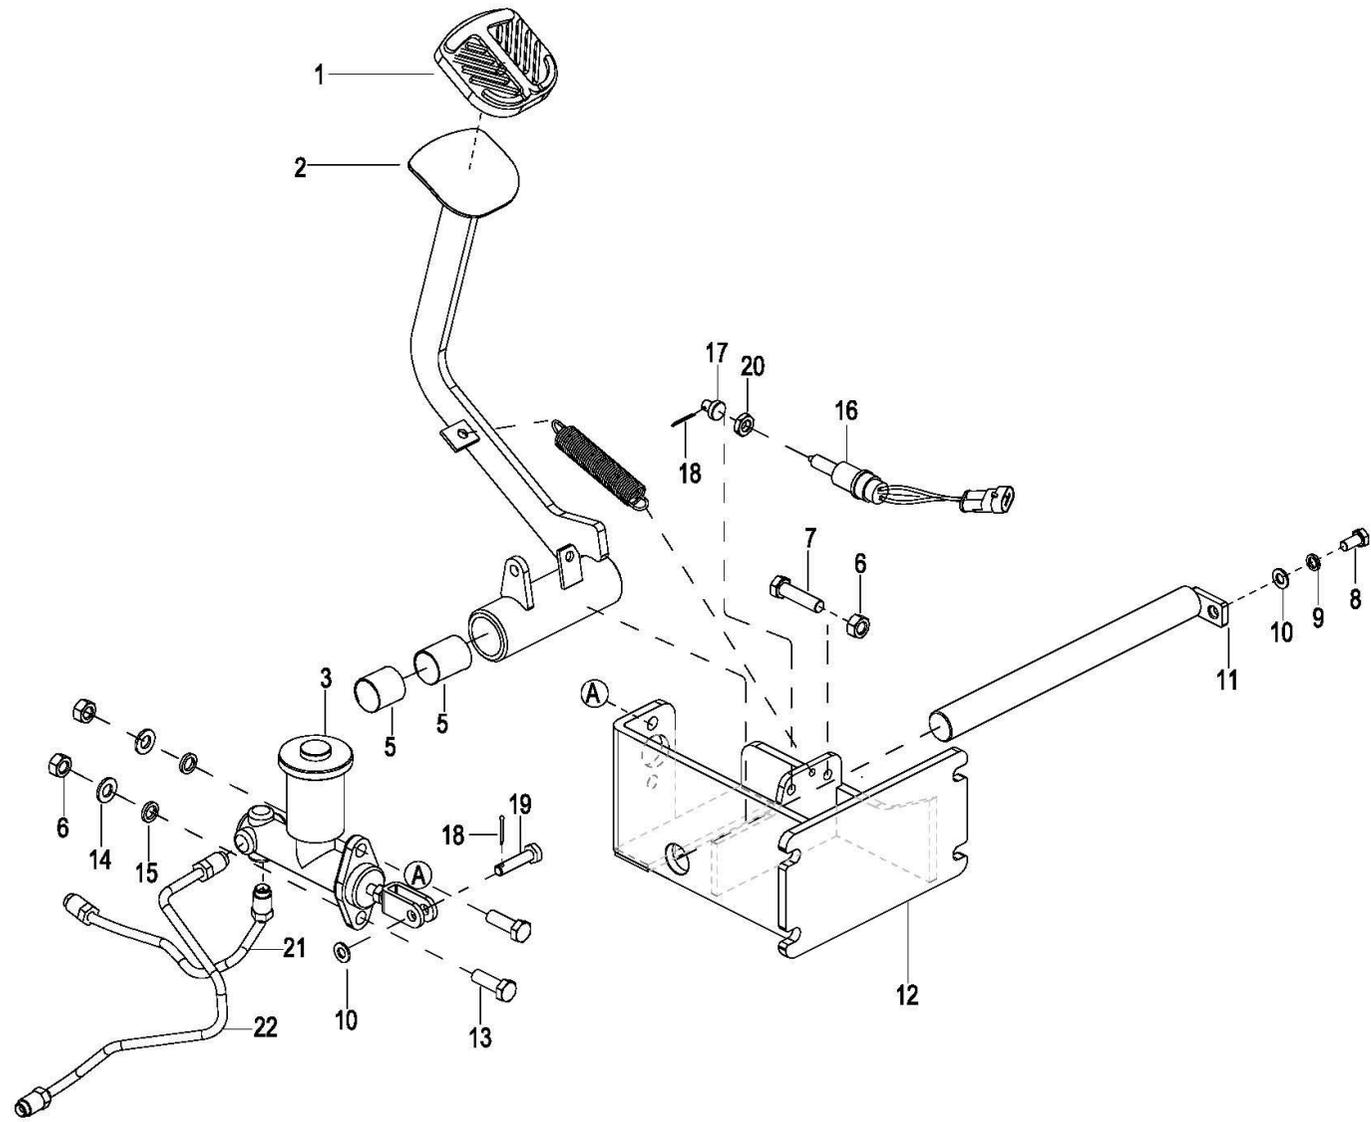


0202 Parking Brake

脚刹总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7331-610033-00	Foot Brake Pedal 脚制动踏板 EPDM	1		
2	7331-610007-00	Right Pedal Support Assembly 右踏板支架总成	1		
3	7331-610022-00	Brake Pump Assembly 制动泵总成	1		
4	7331-610032-00	Pull Spring 拉簧	1		
5	202800000171	Foot Brake Sleeve 脚制动轴套	2		
6	303001000006	Nut M10 螺母	3		
7	301002000030	Bolts M10x40 螺栓	1		
8	301002000013	Bolt M8x16 螺栓	1		
9	304003000005	Spring Washerø8 弹垫	1		
10	304002000005	Flat Washer ø8 平垫	2		
11	7331-610025-00	Shaft Assembly 轴总成	1		
12	01 3132-321000-00	Foot Brake Solder 脚刹座焊件	1	-2301800075	
	02 3132-321000-H0	Foot Brake Solder 脚刹座焊件	1	2301800076-	BGD-21-002289
13	301002000028	Blot M10x30 螺栓	2		
14	304007000003	Flat Washer ø10 平垫圈	2		
15	304003000006	Spring Washer ø10 弹垫	2		
16	3218-601000-00	Brake Light Switch 制动灯开关	1		
17	7331-610029-00	Cushion 缓冲垫	1		
18	307001000002	Pin ø2x20 开口销	2		
19	307006000003	Pin Shaft ø8x25 销轴	1		
20	303000000017	Bolt M10 螺母	1		
21	3127-322000-00	Left pipe 左制动钢管总成	1		
22	3127-321000-00	Right pipe 右制动钢管	1		

0203 Meter

仪表

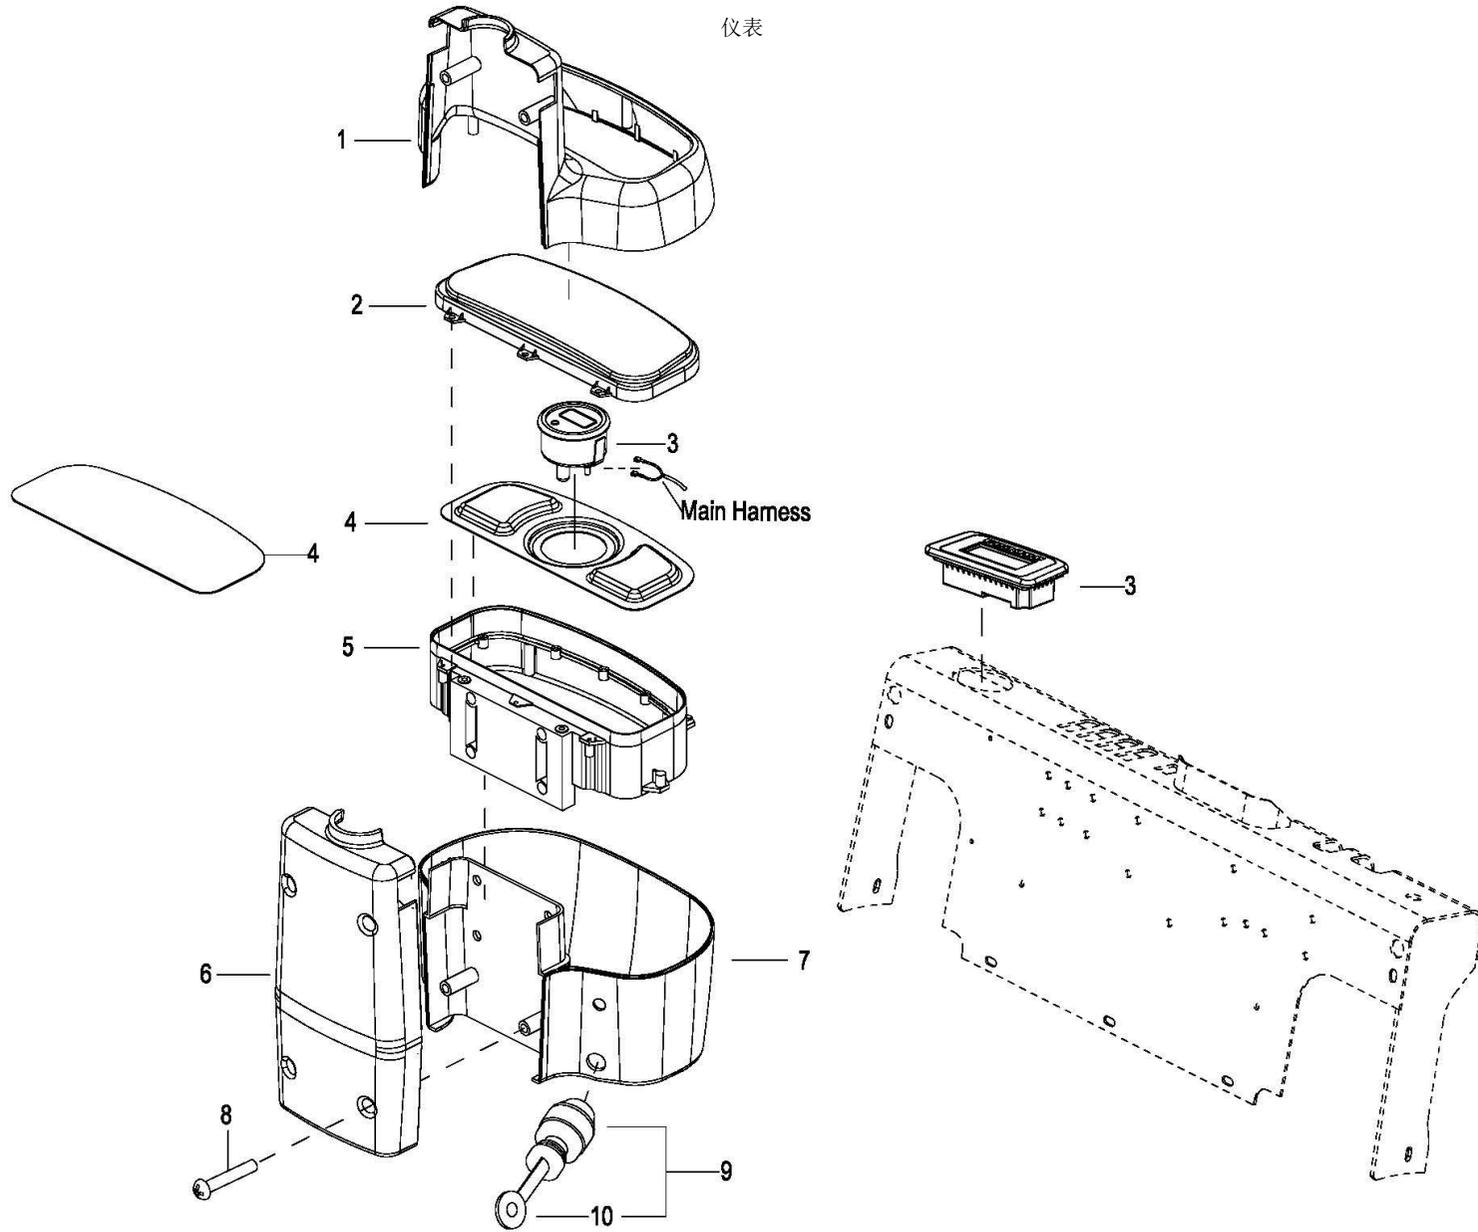


0203 Meter (SN up to -2311000017)

仪表

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3132-802011-00	Cover 仪表上壳	1	-2311000017	
2	3132-802012-00	Cover 仪表保护壳	1	-2311000017	
3	1155-520009-00	Electricity table 电量表	1		ICE251B,
3	3218-600007-60	Meter 仪表	1		For EFL252、ICE251
4	3132-100001-00	Bracket 仪表安装板	1	-2311000017	ICE251B
4	3132-100001-10	Bracket 仪表安装板	1	-2311000017	For EFL252、ICE251
5	3132-802013-00	Cover 仪表壳连接	1	-2311000017	
6	3132-802014-00	Cover 仪表后罩	1	-2311000017	
7	3132-802015-00	Cover 仪表底罩	1	-2311000017	
8	302000000144	Bolt M4x35 螺栓	1	-2311000017	
9	3112-603000-10	Key Switch 钥匙开关	1		
10	3112-60301X-10	Key 钥匙	1	1301600775- 2301700396-	BGD-21-003479

020301 Meter (SN from 2311000018-)

仪表

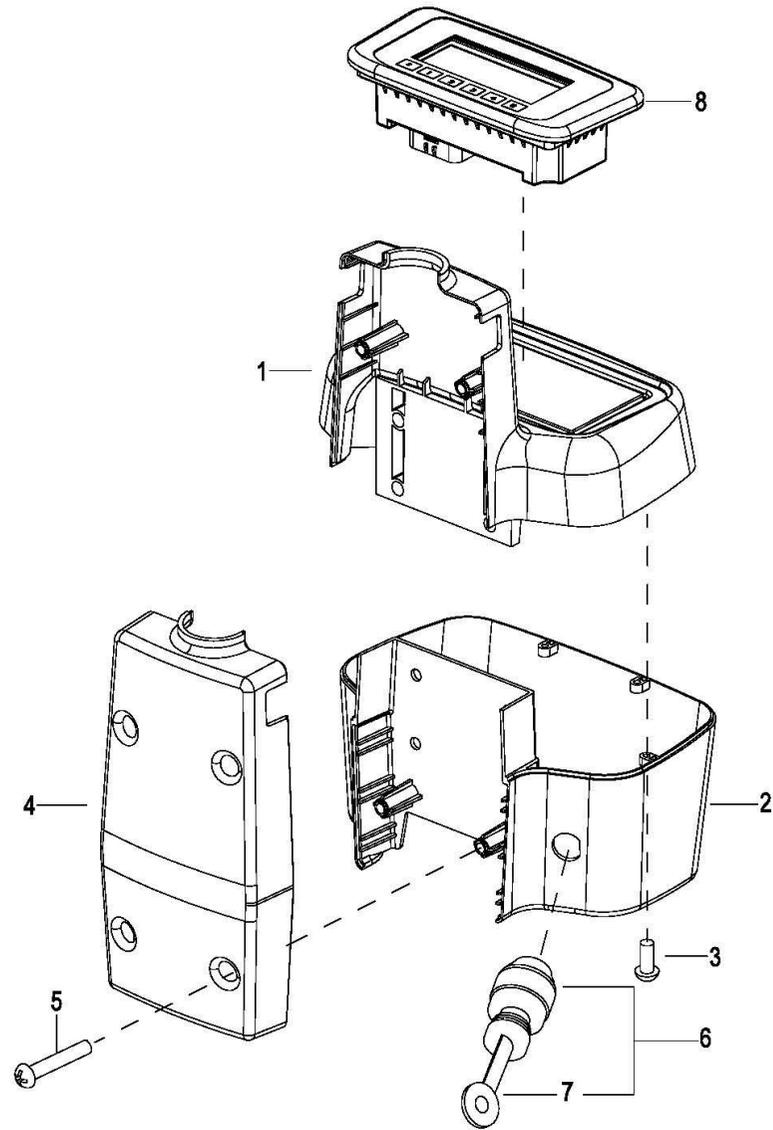


020301 Meter (SN from 2311000018-)

仪表

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3126-311002-00	Front Cover 前上罩壳	1	2311000018-	
2	3126-311003-00	Front Cover 前下罩壳	1	2311000018-	
3	302009000009	Screw ST4.2x13 螺钉	4	2311000018-	
4	3126-311001-00	Back Cover 方向柱后罩壳	1	2311000018-	
5	302000000144	Bolt M4x35 螺栓	1	2311000018-	
6	3112-603000-10	Key Switch 钥匙开关	1		
7	3112-60301X-10	Key 钥匙	1	1301600775- 2301700396-	BGD-21-003479
8	3218-600007-60	Meter 仪表	1		

0204 Steering Assembly

转向柱总成

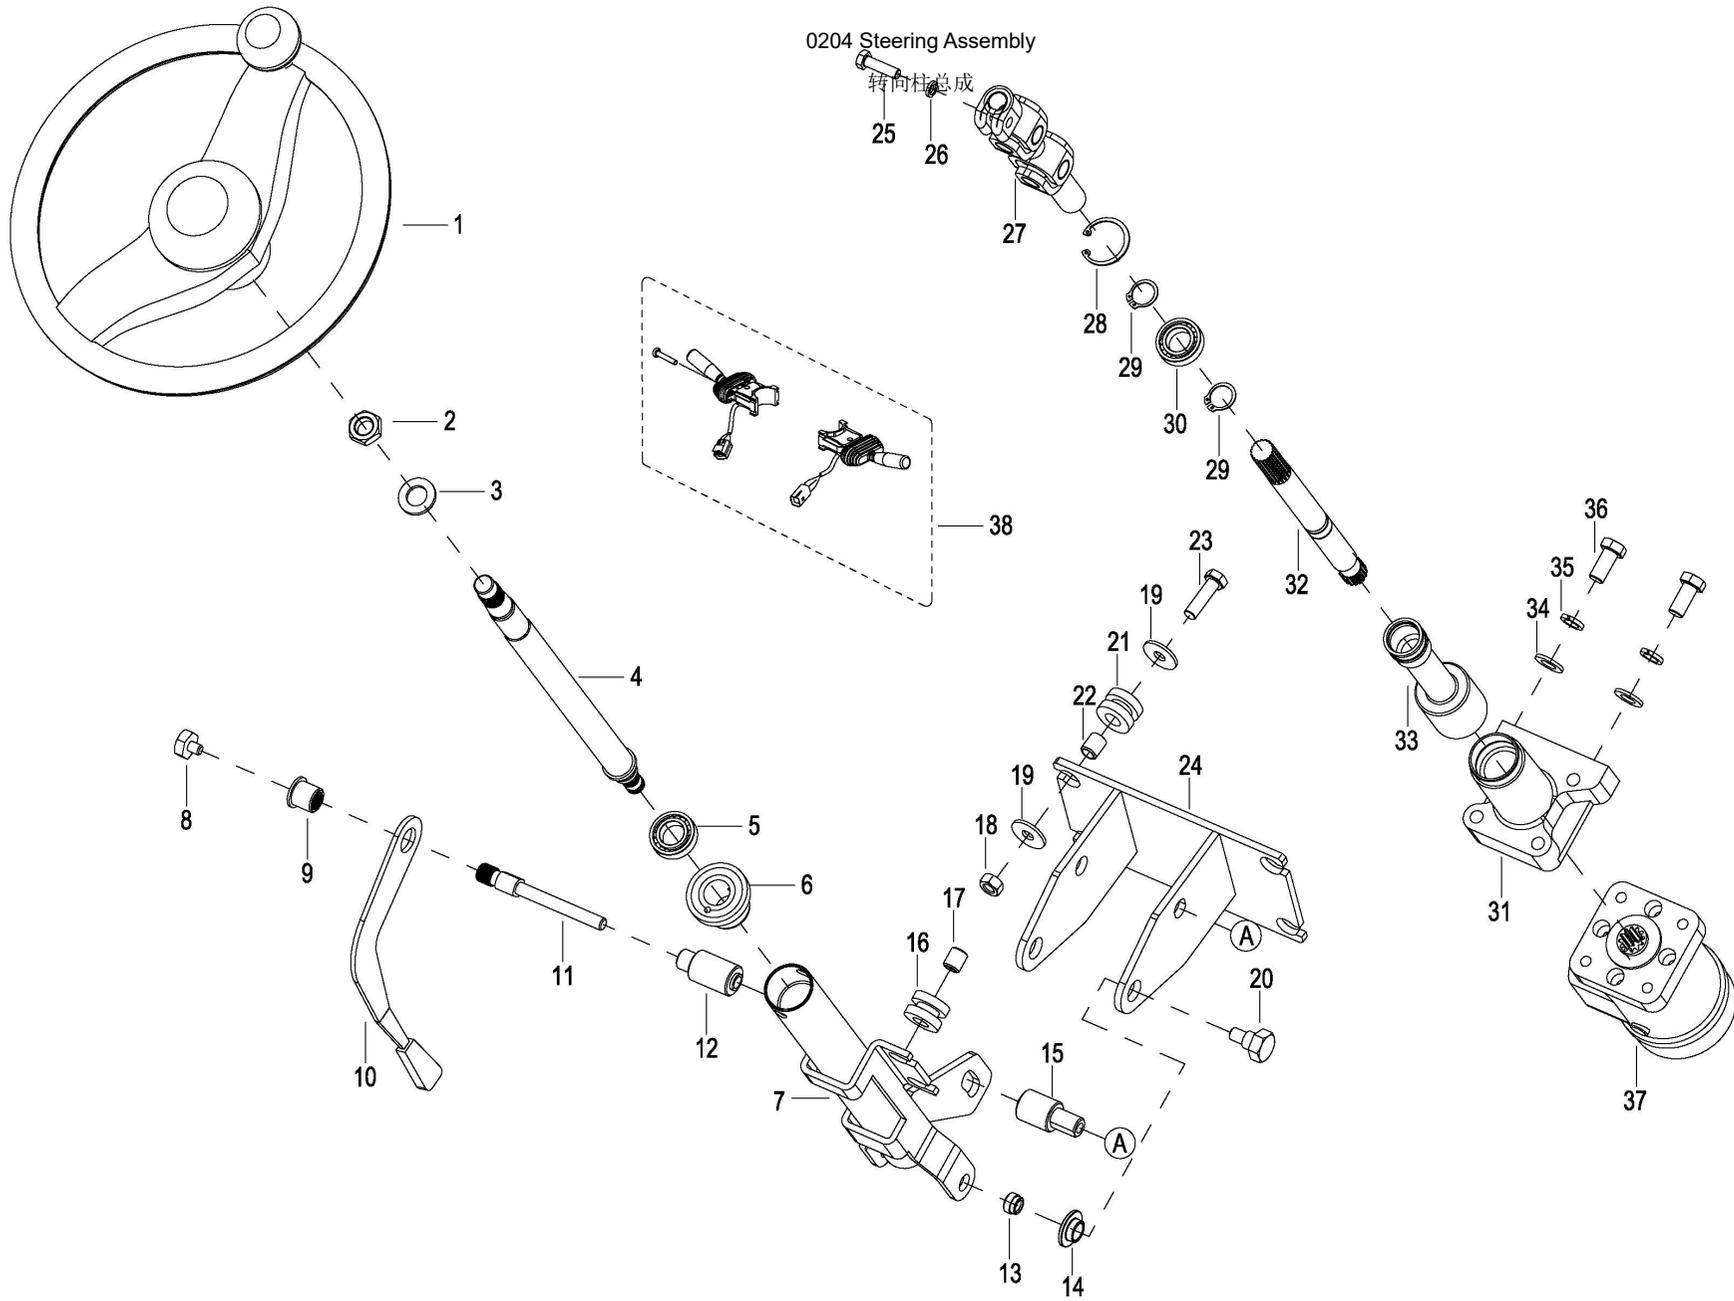

0204 Steering Assembly

转向柱总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3127-323000-00	Hand wheel assembly 标准方向盘总成	1		
2	303003000002	Nut M16*1.5 薄螺母	1		
3	304000000044	Washer ϕ 16 垫圈	1		
4	7331-410201-00	Steering axle 转向轴	1		
5	3132-410210-00	Sheath 喇叭线套	1		
6	7331-410203-00	Upper bushing assembly 上衬套总成	1		
7	7331-410210-00	Steering Column Assembly 转向管柱总成	1		
8	7331-410001-00	Bolt 手柄固定螺栓	1		
9	7331-410301-00	Handle spline sleeve 手柄花键套	1		
10	7331-410300-00	Lock lever 标准锁紧手柄总成	1		
11	7331-410002-00	Lock axle 锁紧轴	1		
12	7331-410004-00	Lock bushing 锁紧套 I	1		
13	7331-410214-00	Screw sleeve M10 螺套	2		
14	7331-410008-00	Nylon gasket 方向盘回转尼龙垫	2		
15	7331-410214-00	Lock bushing 锁紧套 II	1		
16	7331-410012-00	Gasket,rubber 仪表固定橡胶垫	4		
17	7331-410011-00	Steering column cover 仪表固定衬套	4		
18	303001000006	Nut M10 螺母	4		
19	304001000004	Large washer ϕ 10 大垫圈	8		
20	7331-410006-00	Upper bolt 支座上螺栓	2		
21	7331-410007-00	Steering gear rubber pad 转向器橡胶垫	4		
22	7331-410005-00	Locating sleeve 定位套	4		
23	301002000029	Blot M10*35 螺栓	4		
24	7331-410400-00	Bracket,hand wheel 方向盘支架	1		

0204 Steering Assembly

转向柱总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
25	301002000016	Blot M8*30 螺栓	1		
26	304003000005	Lock washer ø8 弹垫	1		
27	7331-410230-00	Knuckle 万向节总成	1		
28	305002000015	Snap ring ø37 孔用弹性挡圈	1		
29	305001000012	Snap ring ø20 轴用弹性挡圈	2		
30	309001000009	Bearing 61904-2Z 深沟球轴承	1		
31	7331-410501-00	Flange 连接法兰	1		
32	7331-410502-00	Connecting axle 连接轴	1		
33	7331-410009-00	Jacket 护套	1		
34	304002000007	Flat Washer ø12 平垫	2		
35	304003000007	Lock washer ø12 弹垫	2		
36	301004000006	Blot M12*1.25*25 螺栓	2		
37	3132-730000-00	Steering unit 转向器	1	-2321800621	Cancel,See 0602
38	3132-600900-00	Combined switch 组合开关	1		

0205 Valve Control Linkage

多路阀操作杆

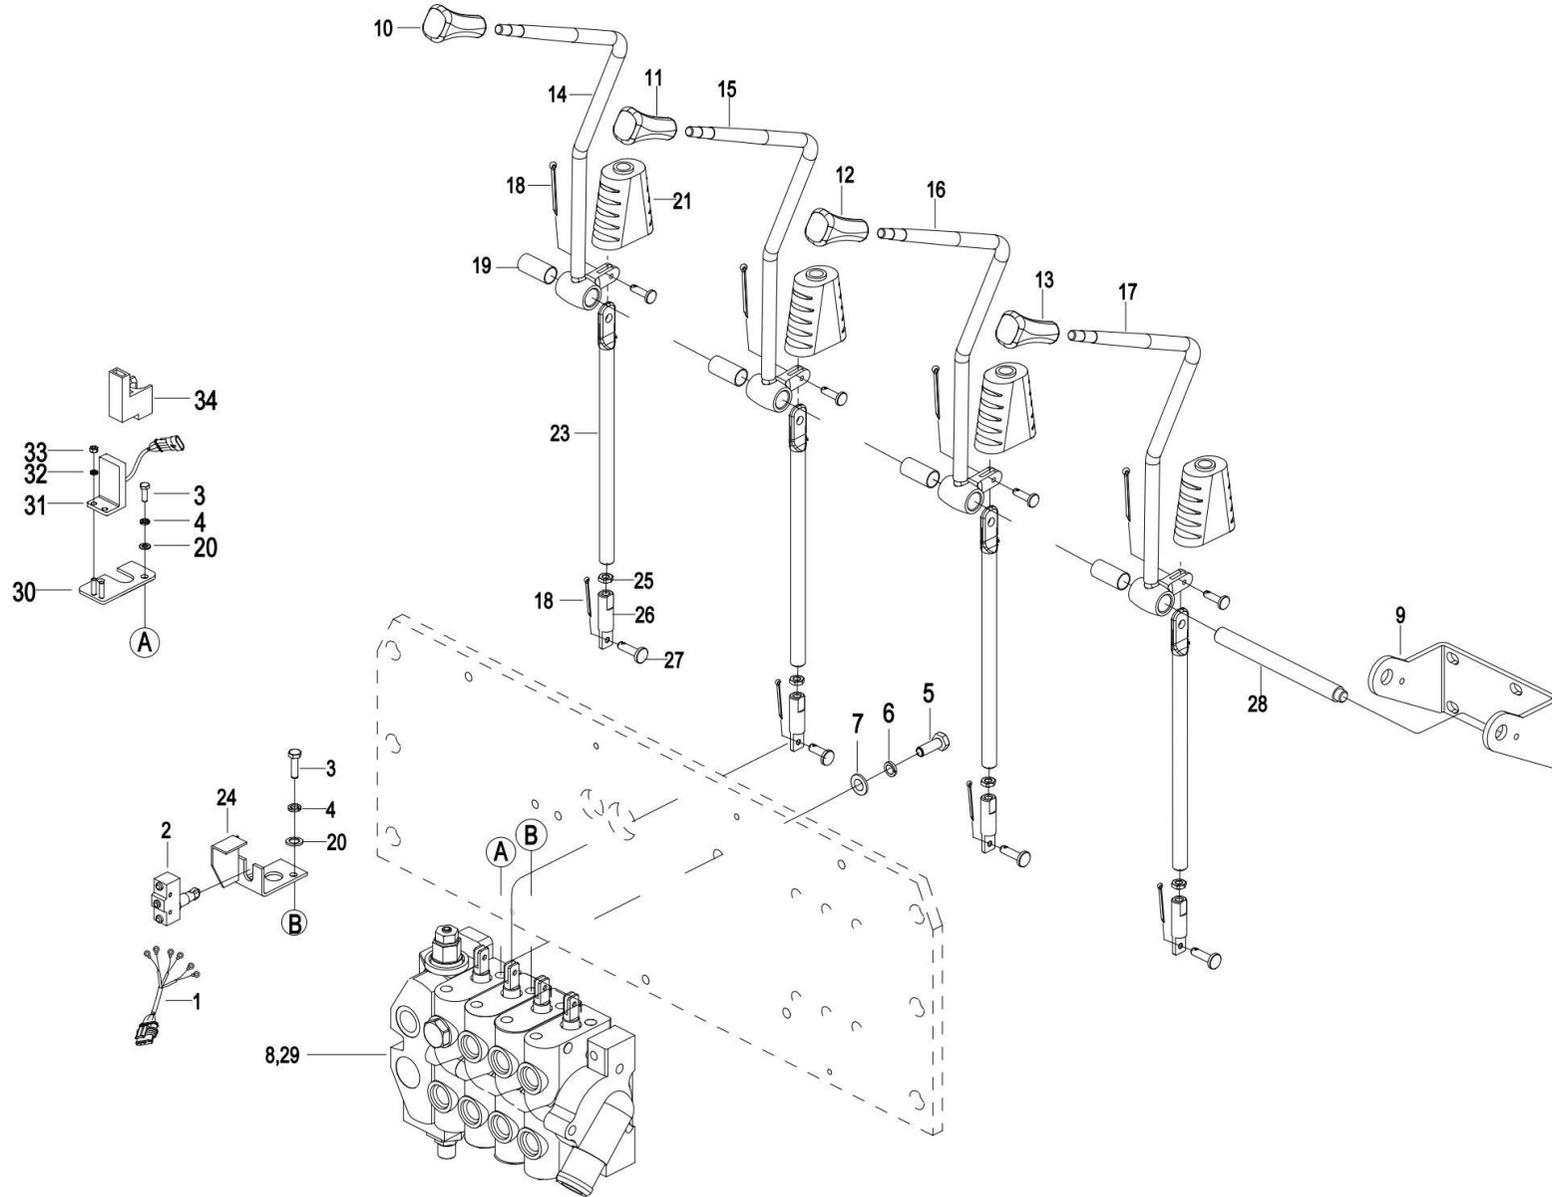


fig214000101

0205 Valve Control Linkage

多路阀操作杆

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3218-628000-00	Switch Harness 泵开关线束 2 联	1		For Two-way control valve
1	3218-627000-00	Switch Harness 泵开关线束 3 联	1		For Three-way control valve
1	3218-629000-00	Switch Harness 泵开关线束 4 联	1		For Four-way control valve
2	3218-605000-00	Switch 微动开关	Req.		
3	301000000090	Bolt M6x16 螺栓	5		
4	304000000050	Lock washer ø6 弹垫	5		
5	301004000059	Bolt M10x1.25x40 螺栓	3		
6	304000000053	Lockwasher ø10 弹垫	3		
7	304000000035	Flatwasher ø10 平垫	3		
8	3132-740000-00	Control Valve Assembly,2-spool 二联多路阀	1	-1321600187	For Two-way control valve
8	3132-660001-HC	Control Valve Assembly,2-spool 二联多路阀	1	1321600188-	For Two-way control valve,BGD-23-001488
8	3132-740010-00	Control Valve Assembly,3-spool 三联多路阀	1	-1321600187	For Three-way control valve
8	3132-660002-HC	Control Valve Assembly,3-spool 三联多路阀	1	1321600188-	For Three-way control valve,BGD-23-001488
8	3132-740020-00	Control Valve Assembly,4-spool 四联多路阀	1	-1321600187	For Four-way control valve
8	3132-660003-HC	Control Valve Assembly,4-spool 四联多路阀	1	1321600188-	For Four-way control valve,BGD-23-001488
8	3132-660005-00	Control Valve Assembly,2-spool 二联多路阀	1	-1321200998	For Two-way control valve, OPS option
8	3132-660005-10	Control Valve Assembly,2-spool 二联多路阀	1	1321200999-1321600187	For Two-way control valve, OPS option,BGD-22-006181
8	3132-660004-HC	Control Valve Assembly,2-spool 二联多路阀	1	1321600188-	For Two-way control valve, OPS option,BGD-23-001488
8	3132-660006-00	Control Valve Assembly,3-spool 三联多路阀	1	-1321200998	For Three-way control valve, OPS option
8	3132-660006-10	Control Valve Assembly,3-spool 三联多路阀	1	1321200999-1321600187	For Three-way control valve, OPS option,BGD-22-006181
8	3132-660005-HC	Control Valve Assembly,3-spool 三联多路阀	1	1321600188-	For Three-way control valve, OPS option,BGD-23-001488
8	3132-660007-00	Control Valve Assembly,4-spool 四联多路阀	1	-1321200998	For Four-way control valve, OPS option
8	3132-660007-10	Control Valve Assembly,4-spool 四联多路阀	1	1321200999-1321600187	For Four-way control valve, OPS option,BGD-22-006181
8	3132-660006-HC	Control Valve Assembly,4-spool 四联多路阀	1	1321600188-	For Four-way control valve, OPS option,BGD-23-001488
9	7331-641002-00	Bracket 2 二联多路阀固定板	1		For Two-way control valve

9	7331-641003-00	Bracket 3	三联多路阀固定板	1		For Three-way control valve
9	7331-641004-00	Bracket 4	四联多路阀固定板	1		For Four-way control valve
10	3218-330006-00	Handle	手柄	1		
11	3218-330007-00	Handle	手柄	1		
12	3218-330008-00	Handle	手柄	1		
13	3218-330009-00	Handle	手柄	1		
14	7331-640009-02	Control Lever,Lifting	一联杆	1		
15	7331-640000-02	Control Lever,Tilt	二联杆	1		
16	7331-640001-03	Control Lever,Sway	三联杆	1		Option
17	7331-640001-04	Control Lever,Attachment	四联杆	1.		Option
18	307001000002	Pin ϕ 2*20	开口销	Req.		
19	7331-64001X-00	Collar	旋转套筒	Req.		
20	304000000036	Flat washer ϕ 6	平垫	5		
21	7331-642001-00	Dirt-proof boot	防尘套	Req.		
22	307006000001	Pin Shaft	销轴	Req.		
23	7331-640004-02	Rod-Control Valve	多路阀挺杆	Req.		
24	3525-338001-00	Bracket	微动开关安装板	Req.		
25	303000000046	Nut	螺母	Req.		
26	7331-640003-02	Joint	连接叉	Req.		
27	307006000001	Pin ϕ 4.7*18	销轴	Req.		
28	7331-640006-02	Connecting rod	操作手柄连接杆	1		For Two-way control valve
28	7331-640006-03	Connecting rod	操作手柄连接杆	1		For Three-way control valve
28	7331-640006-04	Connecting rod	操作手柄连接杆	1		For Four-way control valve
29	3132-66000X-00	Solenoid valve	电磁阀	1	-1321200998	OPS option
29	3132-66000X-10	Solenoid valve	电磁阀	1	1321200999-	OPS option,BGD-22-006181
30	3112-606000-00	Bracket	固定板组件	1	1321600188-	BGD-23-001488
31	3112-604000-00	Proportional potentiometer	比例电位器	1	1321600188-	BGD-23-001488
32	304003000002	Lockwasher ϕ 4	弹垫	2	1321600188-	BGD-23-001488
33	303001000002	Nut M4	螺母	2	1321600188-	BGD-23-001488

34		3112-608000-00	Magnet buckle 一联磁铁卡扣	1	1321600188-	BGD-23-001488


3000

Driving System

驱动系统

0301 Driving System

驱动系统

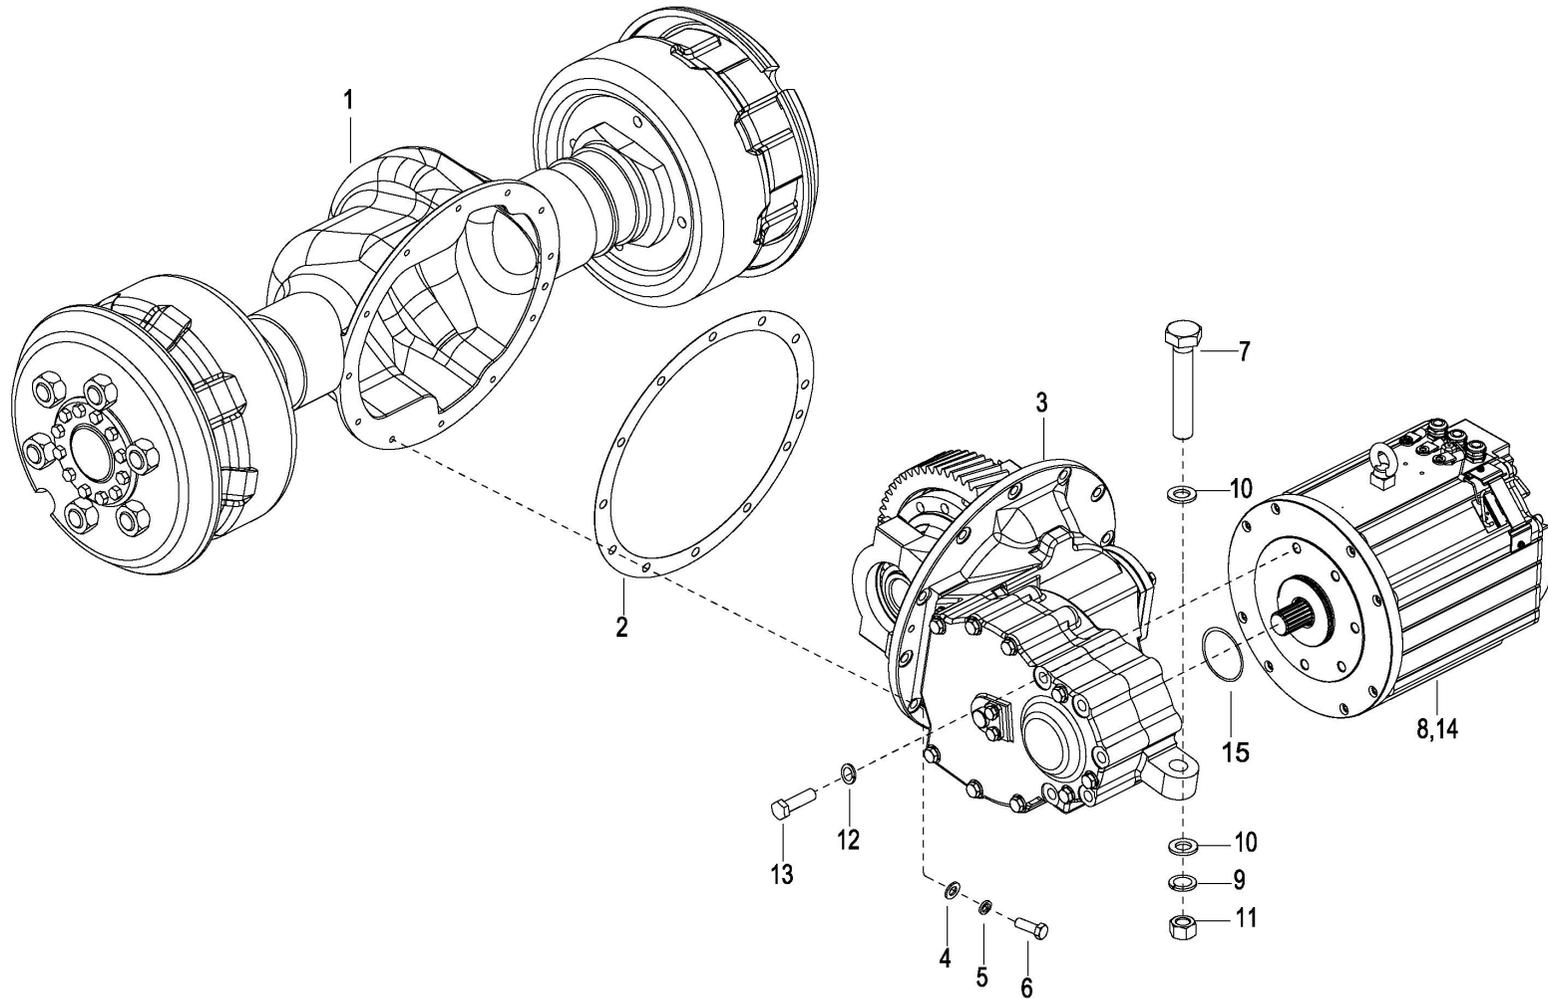


0301 Driving System

驱动系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3127-410000-00	Drive axle Assembly 驱动桥总成	1		
2	3525-400003-00	Gasket 驱动桥密封垫	1		
3	3902-430000-00	Gearbox Assembly 减速箱总成	1		
4	304000000041	Plain washer ϕ 12 平垫	12		
5	304000000051	Lock washer ϕ 12 弹垫	12		
6	301004000008	Bolt M12x35 螺栓	12		
7	301000000389	Bolt M20*100 螺栓	1		
8	3132-650000-00	Traction Motor 驱动电机	1		For 205/280Ah SP
8	01 3132-650000-10	Traction Motor 驱动电机	1	-1311800393	For 410Ah,HPQ8-4ZL
	02 3132-650000-40	Traction Motor 驱动电机	1	1311800394-	For 410Ah,HPQ8-6ZL,BGD-23-004718
9	304000000057	Lock washer ϕ 20 弹垫	1		
10	304000000045	Washer 平垫	2		
11	303000000160	Nut M20 自锁螺母	1		
12	304000000054	Lock washer ϕ 14 弹垫	5		
13	01 301003000012	Bolt M14x1.5x180 螺栓	5		Superseded by 301000000468
	02 301000000468	Bolt M14x1.5x150 螺栓	5		EP20210802
14	3132-65001X-00	Encoder 编码器	1		For 3132-650000-00
14	3132-65001X-10	Encoder 编码器	1	-1311800393	For 3132-650000-10
14	3132-65001X-40	Encoder 编码器	1	1311800394-	For 3132-650000-40
15	306000000145	O-Ring 87.5*3.55 O 型圈	1		

0302 Drive axle assembly

驱动桥总成

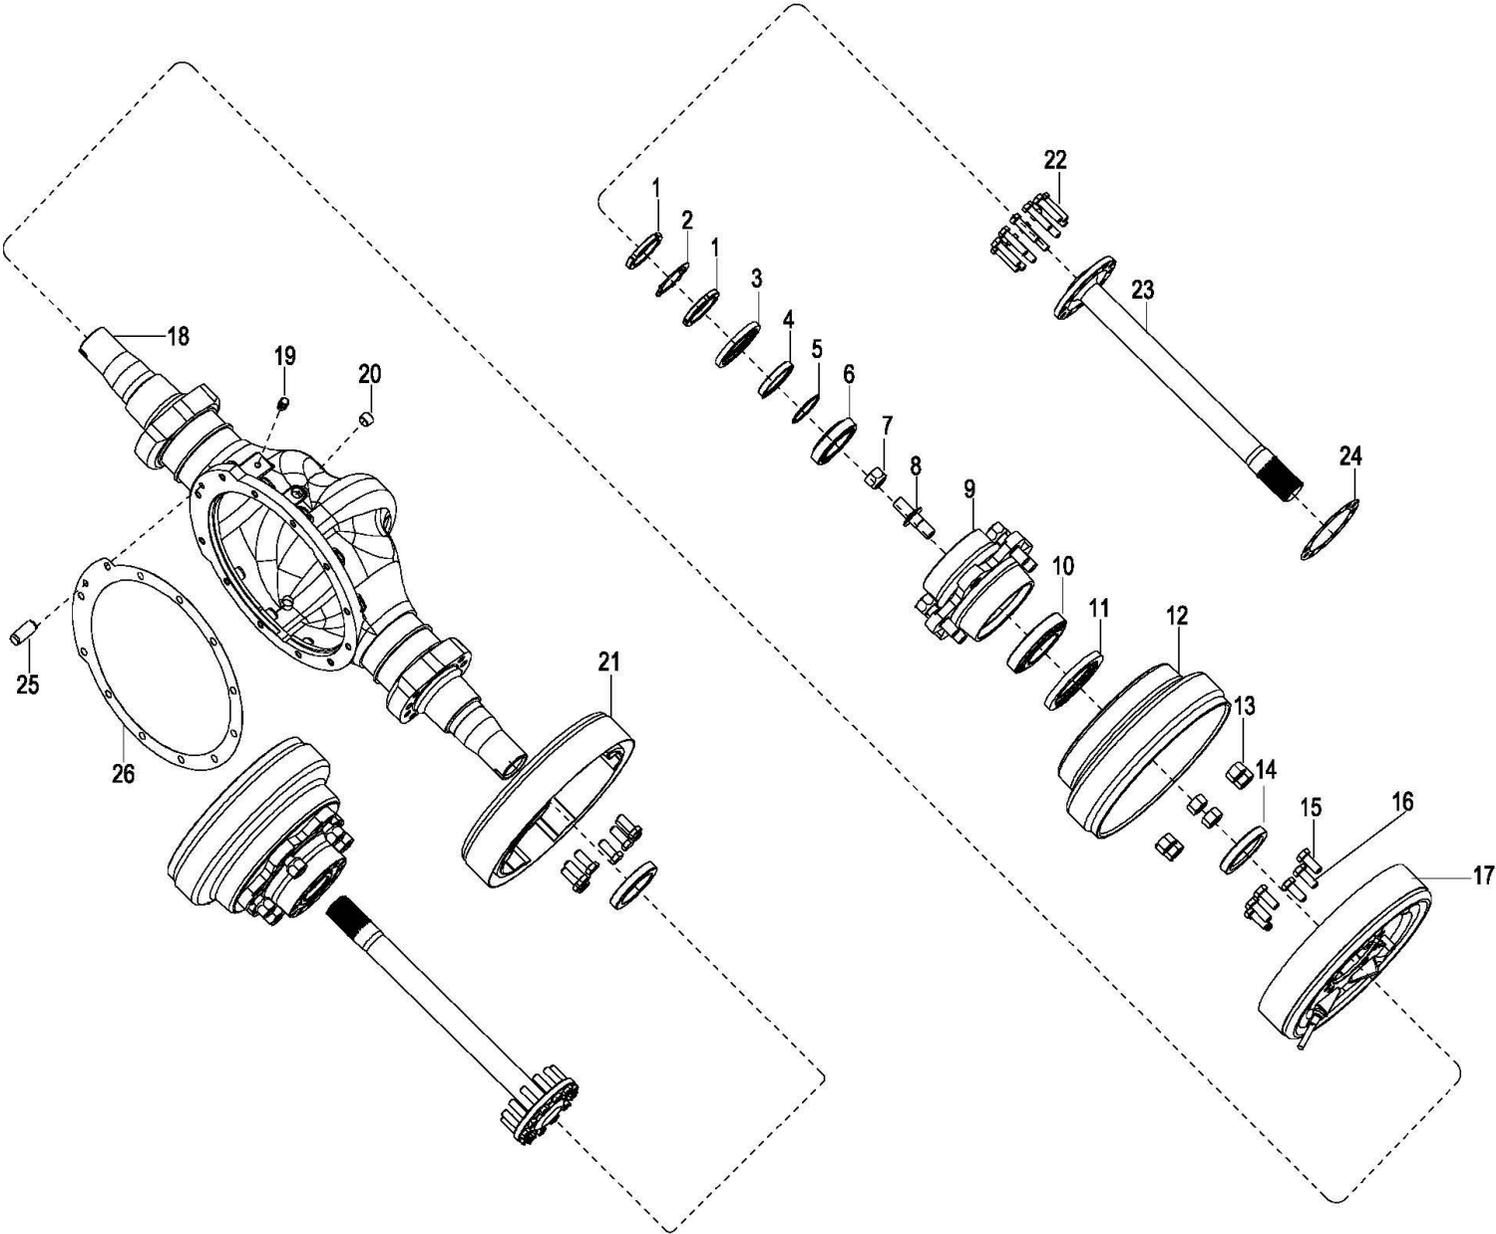

0302 Drive axle assembly

驱动桥总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	7830-20114X-S0	Nut M60*2*10 螺母	4		
2	7830-20115x-S0	Washer ø60 垫圈	2		
3	3112-410008-00	Seal FB75x100*10 密封圈	2		
4	7830-20101X-S0	Snap Ring60*75x12 挡圈	2		
5	7830-20116x-S0	O-Ring d60*3.55 O 型圈	2		
6	3112-41016x-00	Bearing 32012 圆锥滚子轴承	2		
7	7825-20104X-S0	Nut M20*1.5 螺母	12		
8	7810-21206x-W0	Stud M20*1.5x85 轮毂螺栓	12		
9	7825-20106x-S0	Hub 轮毂	2		
10	7831-20119X-S0	30214 圆锥滚子轴承	2		
11	7830-20121X-S0	Seal FB100*130*12 密封圈	2		
12	7825-20107X-S0	Brake hub 制动毂	2		
13	7845-20719X-S0	Nut M20*1.5 螺母	12		
14	7830-20108x-S0	Snap Ring 72*100*16 挡圈	12		
15	3131-410019-00	Bolt M14x1.5x35 螺栓	4		
16	3131-410006-00	Bolt M14x1.5x38(20) 螺栓	1		
17	3127-41003X-00	Wheel Brake-L 1270 制动器总成（左）	1		
18	3127-41004X-00	Housing 桥壳	1		
19	3112-410003-00	Ventilatory plug 通气塞	3		
20	7845-20723X-S0	Plug R1/2 螺塞	1		
21	3127-41005x-00	Wheel Brake-R 1970 制动器总成（右）	1		
22	7845-20711X-S0	Bolt M12x1.25x50(28) 半轴螺栓	24		
23	3127-41006x-00	Shaft 半轴	2		
24	7830-20111X-S0	Packing 轴垫	2		

0302 Drive axle assembly


驱动桥总成

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
25	3127-41016x-00	Pin D10x24	销	1		
26	3127-41007X-00	Washer	安装垫	1		

0303 Brake assembly

制动器总成

24

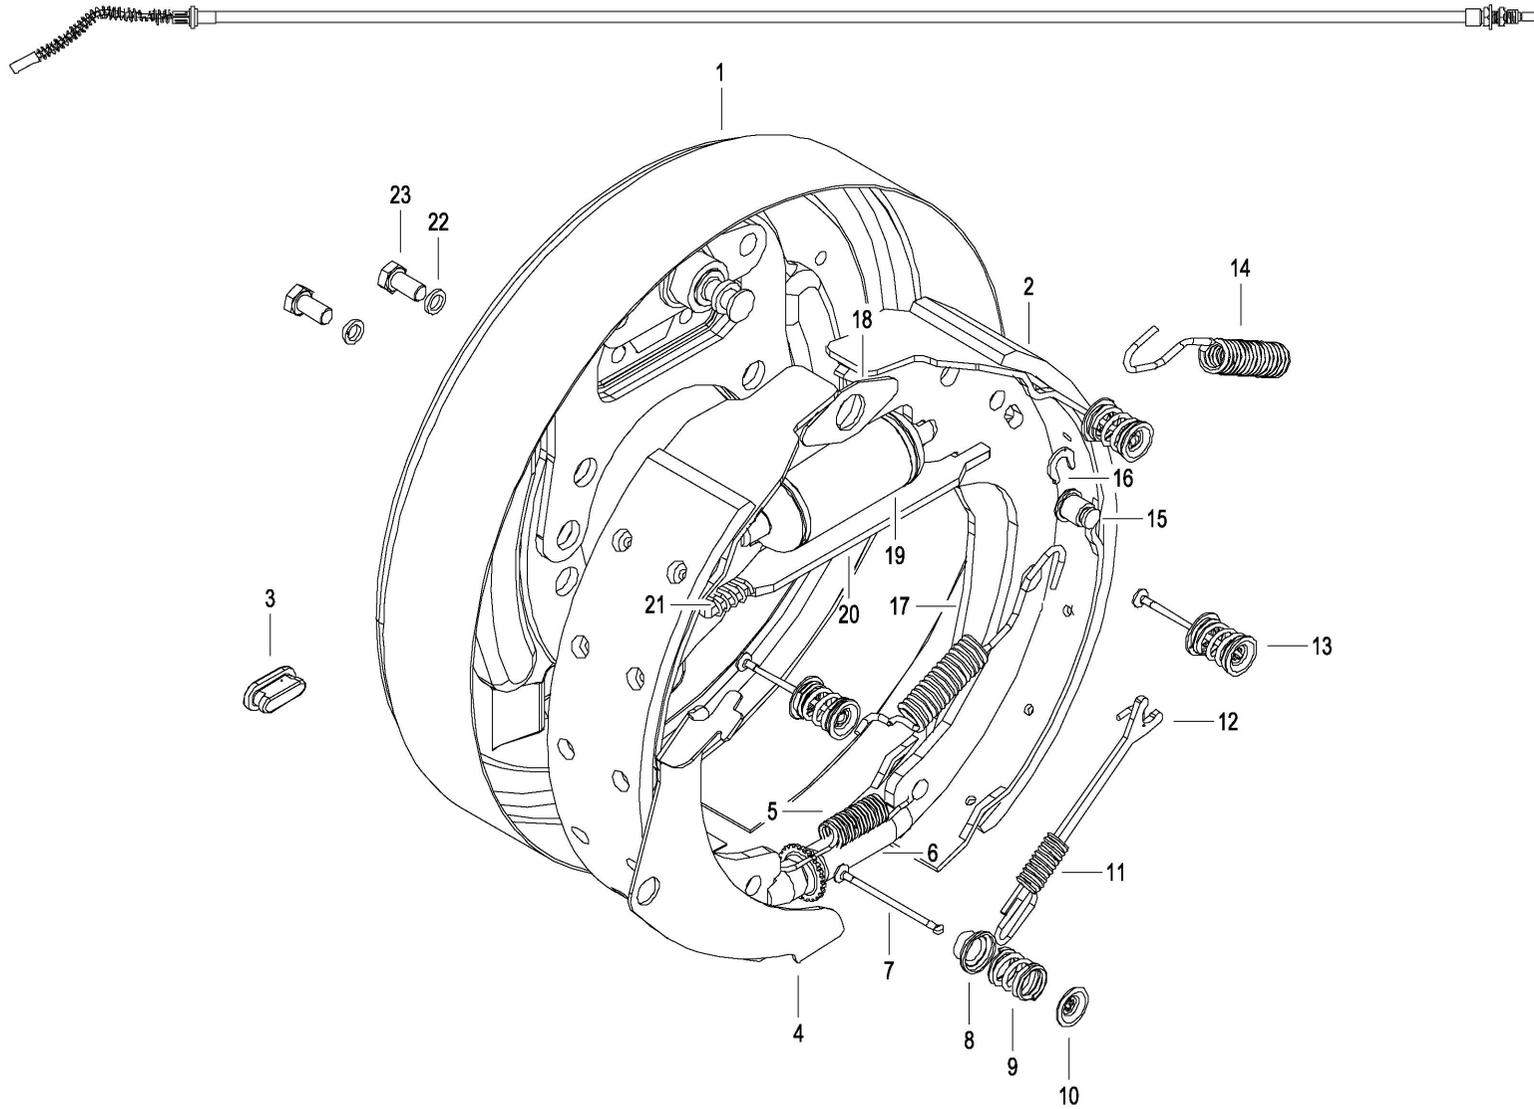

0303 Brake assembly

制动器总成

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	7825-20301X-S0	Pedestal,left brake	左制动器底板总成	1		
1	7825-20401X-S0	Pedestal,right brake	右制动器底板总成	1		
2	3127-41017X-00	Friction Assembly	制动蹄带摩擦片总成	4		
3	3131-411003-00	Rubber plug	胶堵	4		
4	7825-20304X-S0	Left adjust lever	左调整杠杆	1		
4	7825-20404X-S0	Right adjust lever	右调整杠杆	1		
5	7825-20305x-S0	Spring,lower	下端回位弹簧	2		
6	7825-20306x-S0	Left slack adjuster	左间隙调整器	1		
6	7825-20406x-S0	Right slack adjuster	右间隙调整器	1		
7	7825-20307X-S0	Pull rod	压簧拉杆	8		
8	7825-20308x-S0	Support	压簧座-1	2		
9	7825-20309X-S0	Spring	压簧	8		
10	7825-20310X-S0	Cap	压簧盖	8		
11	7825-20311X-S0	Spring	拉簧	2		
12	7825-20312X-S0	Rod	顶杆	2		
13	7825-20313X-S0	Support	压簧座-2	6		
14	7825-20314X-S0	Spring	回位弹簧	4		
15	7825-20315x-S0	Pin	拉杆销	2		
16	7825-20316x-S0	Gasket	垫片	2		
17	7825-20317X-S0	Left brake rod	左手制动拉杆	1		
17	7825-20417X-S0	Right brake rod	右手制动拉杆	1		
18	7825-20318x-S0	Plate	导向板	2		
19	7825-20319X-S0	Left brake pump	左制动分泵总成	1		
19	7825-20419X-S0	Right brake pump	右制动分泵总成	1		
20	7825-20320X-S0	Hand brake rod	手制动推杆	2		


0303 Brake assembly

制动器总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
21	7825-20321X-S0	Spring 推杆弹簧	2		
22	7825-20322X-S0	Bolt M8x16 螺栓	4		
23	7845-20832X-S0	Lock washer 8 垫圈	4		
24	3131-412027-00	Handbrake rope 制动钢索总成	2		

0304 Drive wheel

驱动轮

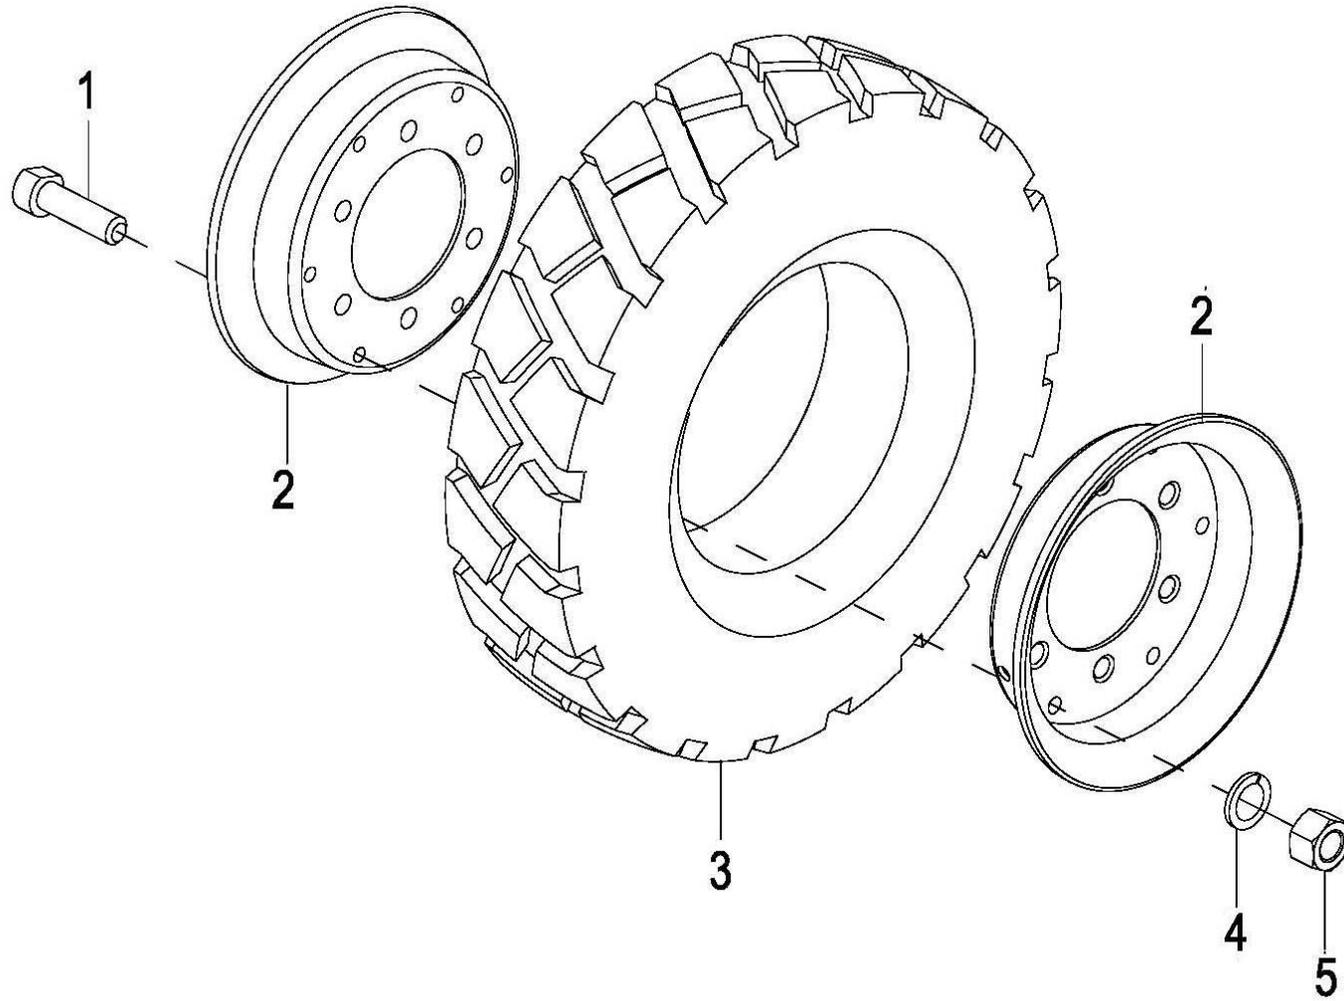


0304 Drive wheel

驱动轮

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	3525-430001-00	Bolt	前轮螺栓	6		
2	7825-213000-S0	Rim Assembly	轮辋总成	1		
3	7820-280000-00-S0	Drive tyres	驱动轮胎	1		7.00-12-12 (OB502), Pneumatic Tire
3	3127-420000-10	Drive tyres	驱动轮胎	1		7.00-12/5.00S-12, Solid Tire
3	3127-420000-20	Drive tyres	驱动轮胎	1		7.00-12/5.00S-12, Traceless Tire
4	304000000055	Washer ø16	垫圈	6		
5	303002000007	Nut M16x1.5	螺母	6		

0305 Differential

差速器

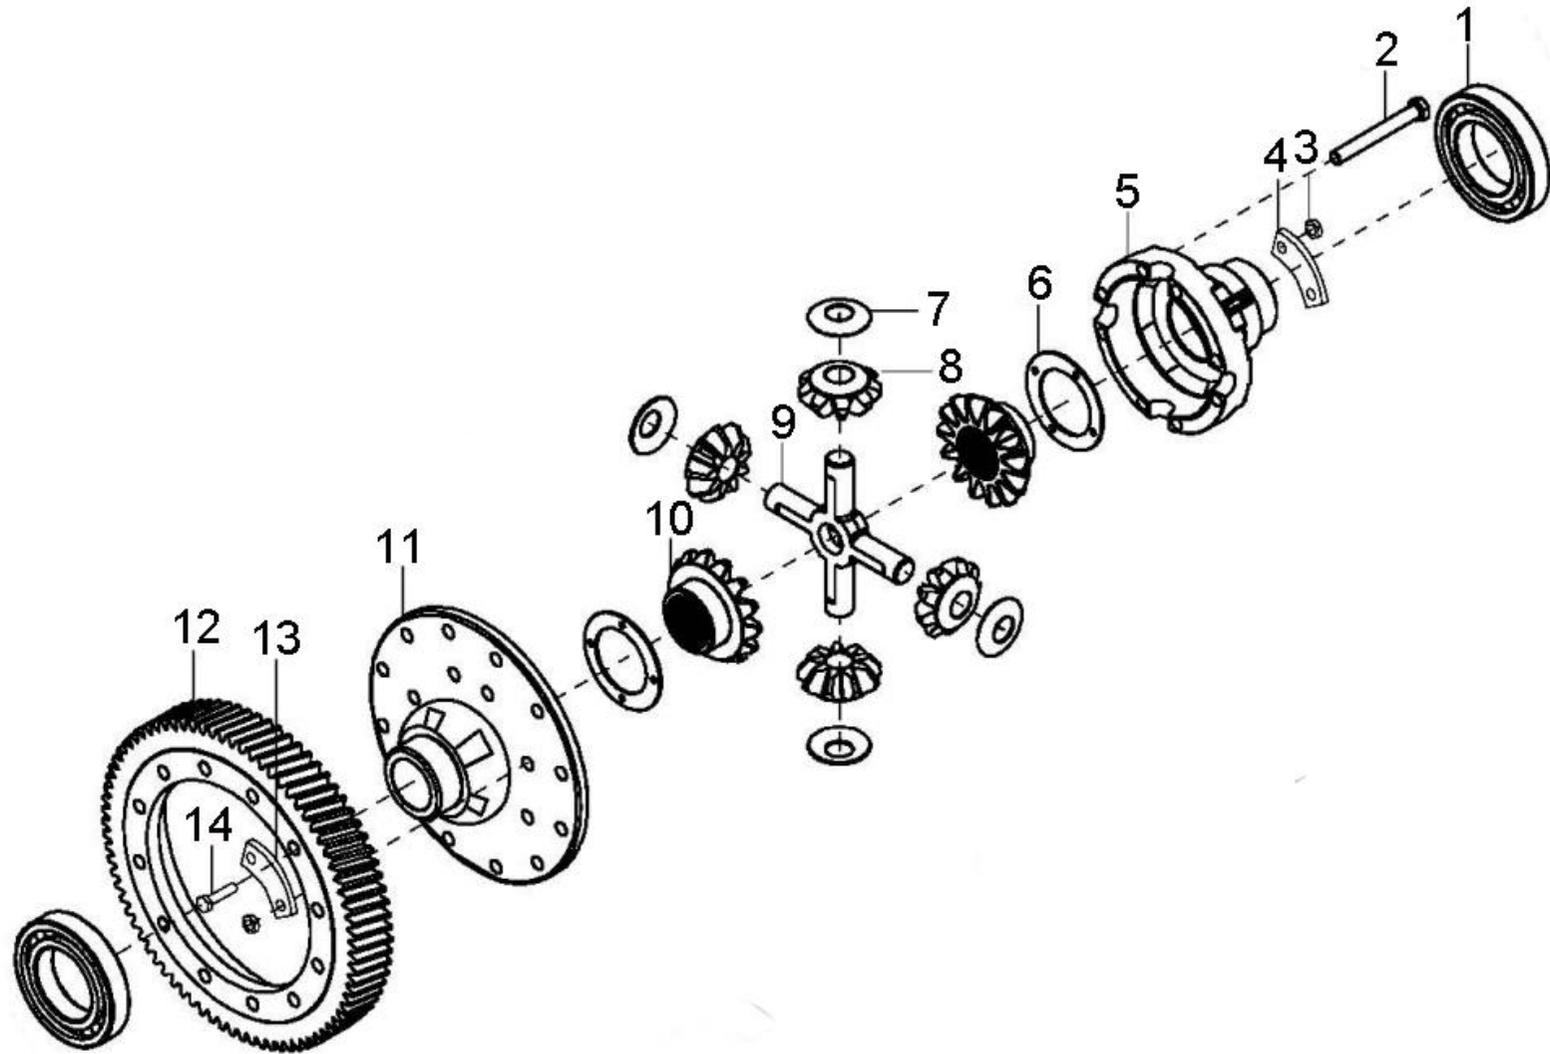


0305 Differential

差速器

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	7402-403622-00	Bearing 6213	深沟球轴承	2		
2	3902-43017X-00	Bolt	差壳螺栓	12		
3	3115-411008-00	Nut M10×1.25	螺母	28		
4	7402-403613-00	Locking Plate	齿圈锁片	8		
5	7402-403603-00	Differential Cage	左差速器壳	1		
6	7402-403607-00-01	Washer	半轴垫圈	2		
6	7402-403607-00-02	Washer	半轴垫圈	2		
6	7402-403607-00-03	Washer	半轴垫圈	2		
6	7402-403607-00-04	Washer	半轴垫圈	2		
6	7402-403607-00-05	Washer	半轴垫圈	2		
6	7402-403607-00-01	Washer	半轴垫圈	2		
7	7402-403616-00	Washer	行星垫圈	4		
8	7402-403609-00	Planetary Gear	行星齿轮	4		
9	7402-403608-00	Spider	十字轴	1		
10	7402-403605-00-02	Face Gear	半轴齿轮	2		
11	7402-403601-00	Bolt	右差速器壳	1		
12	3902-43018x-00	Gear	齿圈	1		
13	7402-403615-00	Locking Plate	差壳锁片	6		
14	7402-403614-00	Bolt	齿圈螺栓	16		

0306 Gearbox assembly

減速箱总成

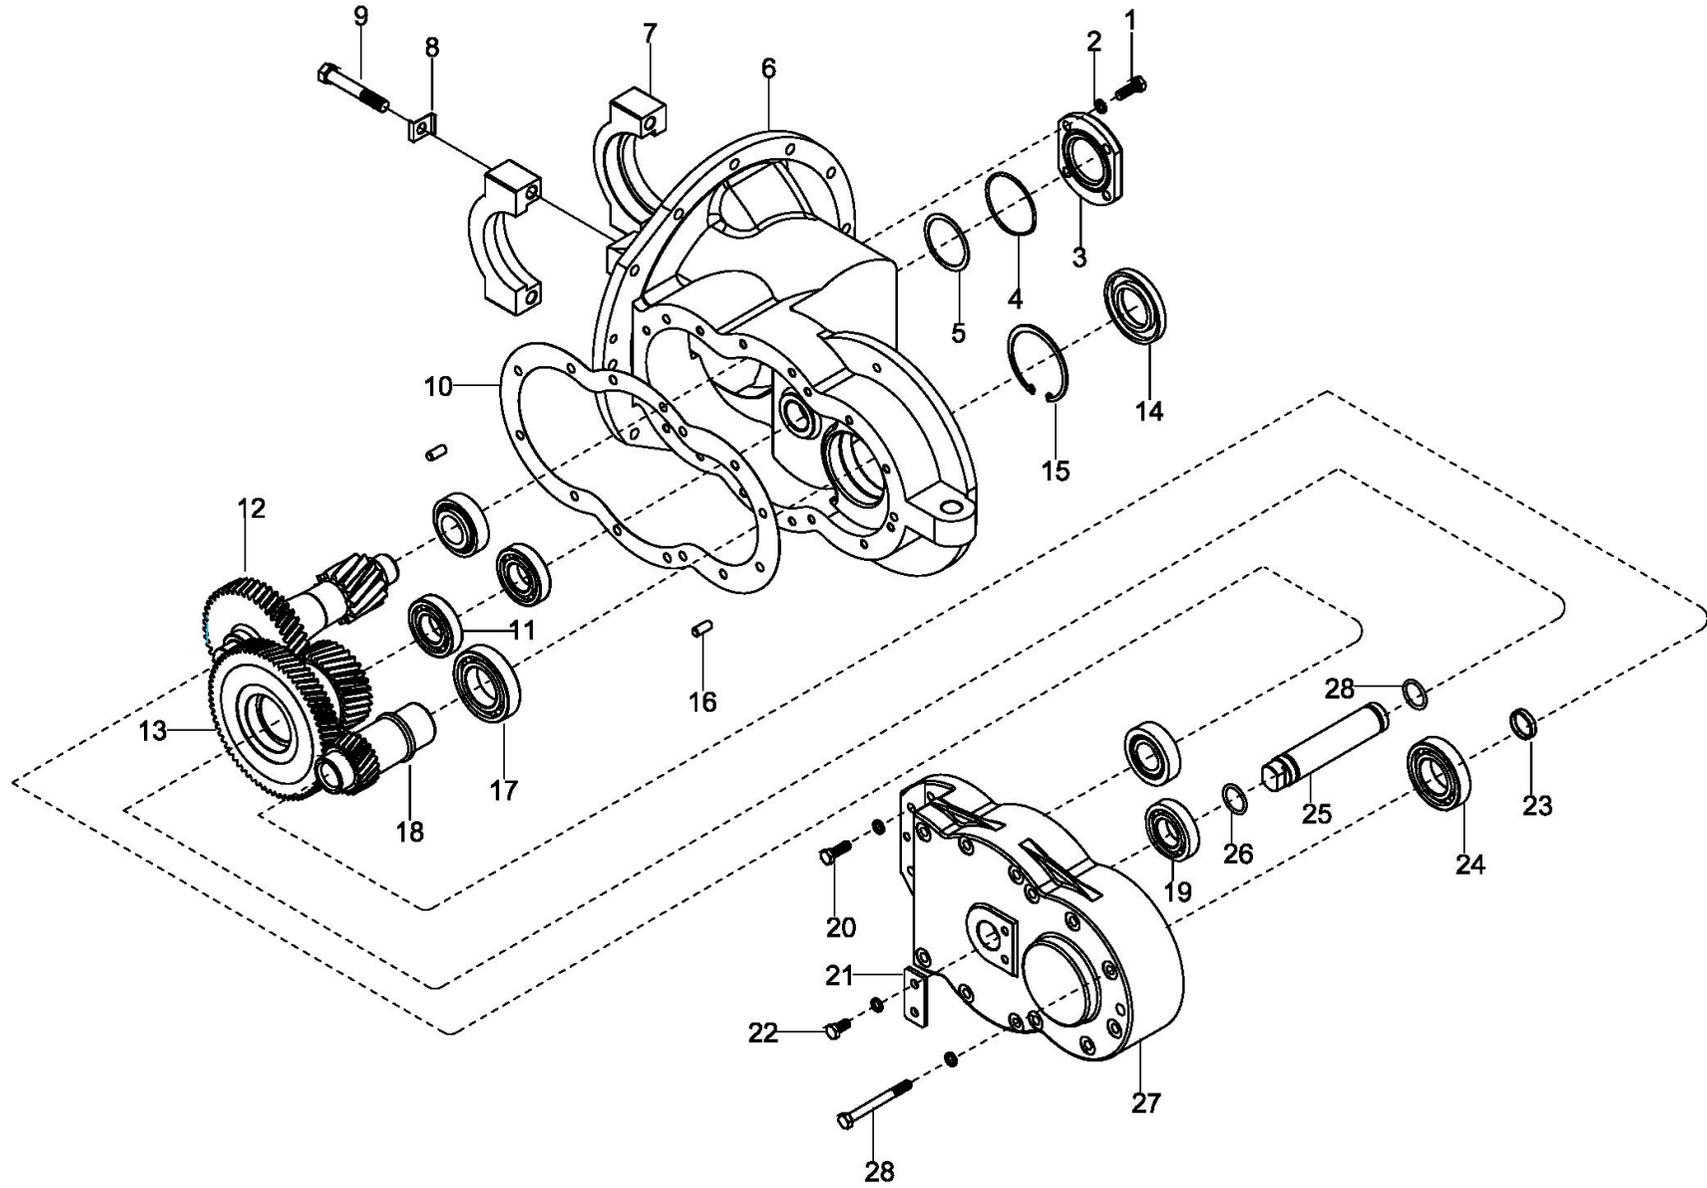

0306 GEARBOX ASSY

减速箱总成


Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	3115-41032X-00	Bolt M10x25	螺栓	4		
2	7846-20108x-00	Lockwasher ø10	弹簧垫圈	20		
3	7402-403604-00	Cap	轴承盖	1		
4	3115-41033X-00	O-Ring 75x3.1	O 型圈	1		
5	7402-403619-00-01	Washer	齿轴垫片	Req.		
5	7402-403619-00-02	Washer	齿轴垫片	Req.		
5	3902-43001X-00-01	Washer	齿轴垫片	Req.		
5	3902-43001X-00-02	Washer	齿轴垫片	Req.		
6	3902-43002X-00	Box Body	箱体	1		
7	3902-43003X-00	Bearing Housing	轴承座	2		
8	7402-403002-00	Housing Lock	轴承座锁片	4		
9	7402-403001-00	Housing Bolt	轴承座螺栓	4		
10	3902-43004X-00	Gaskets	衬垫	1		Cancelled
11	7402-403013-00	Bearing 6207	深沟球轴承	3		
12	3902-43005x-00	Tooth Shaft	齿轴	1		
13	3902-43006x-00	Gear	双联齿轮	1		
14	3902-43007X-00	Seal Ring 50*90*10	油封	1		
15	3902-43008x-00	Snap Ring 90	弹性挡圈	1		
16	3902-43009X-00	Hinge Pin 10×24	定位销	2		
17	3902-43010X-00	Bearing 6210	深沟球轴承	1		
18	3902-43011X-00	Input Shaft	输入轴	1		
19	7402-403620-00	Bearing 32207	圆锥滚子轴承	2		
20	3902-43012X-00	Bolt M10x35	螺栓	2		
21	3901-44015x-00	Block	挡块	1		
22	3901-44014X-00	Bolt 10x16	螺栓	2		

23	3902-43013X-00	Sealing Cap	密封盖	1		
24	7846-20601X-00	Bearing 6209	深沟球轴承	1		
25	3901-44017X-00	Shaft	轴	1		
26	3902-43014X-00	O-Ring 35x3.1	O 型圈	2		
27	3902-43015x-00	Box Cover	箱盖	1		
28	3902-43016x-00	Bolt	箱盖螺栓	12		

4000
Hydraulic System
转向系统

0401 Steering system

转向系统

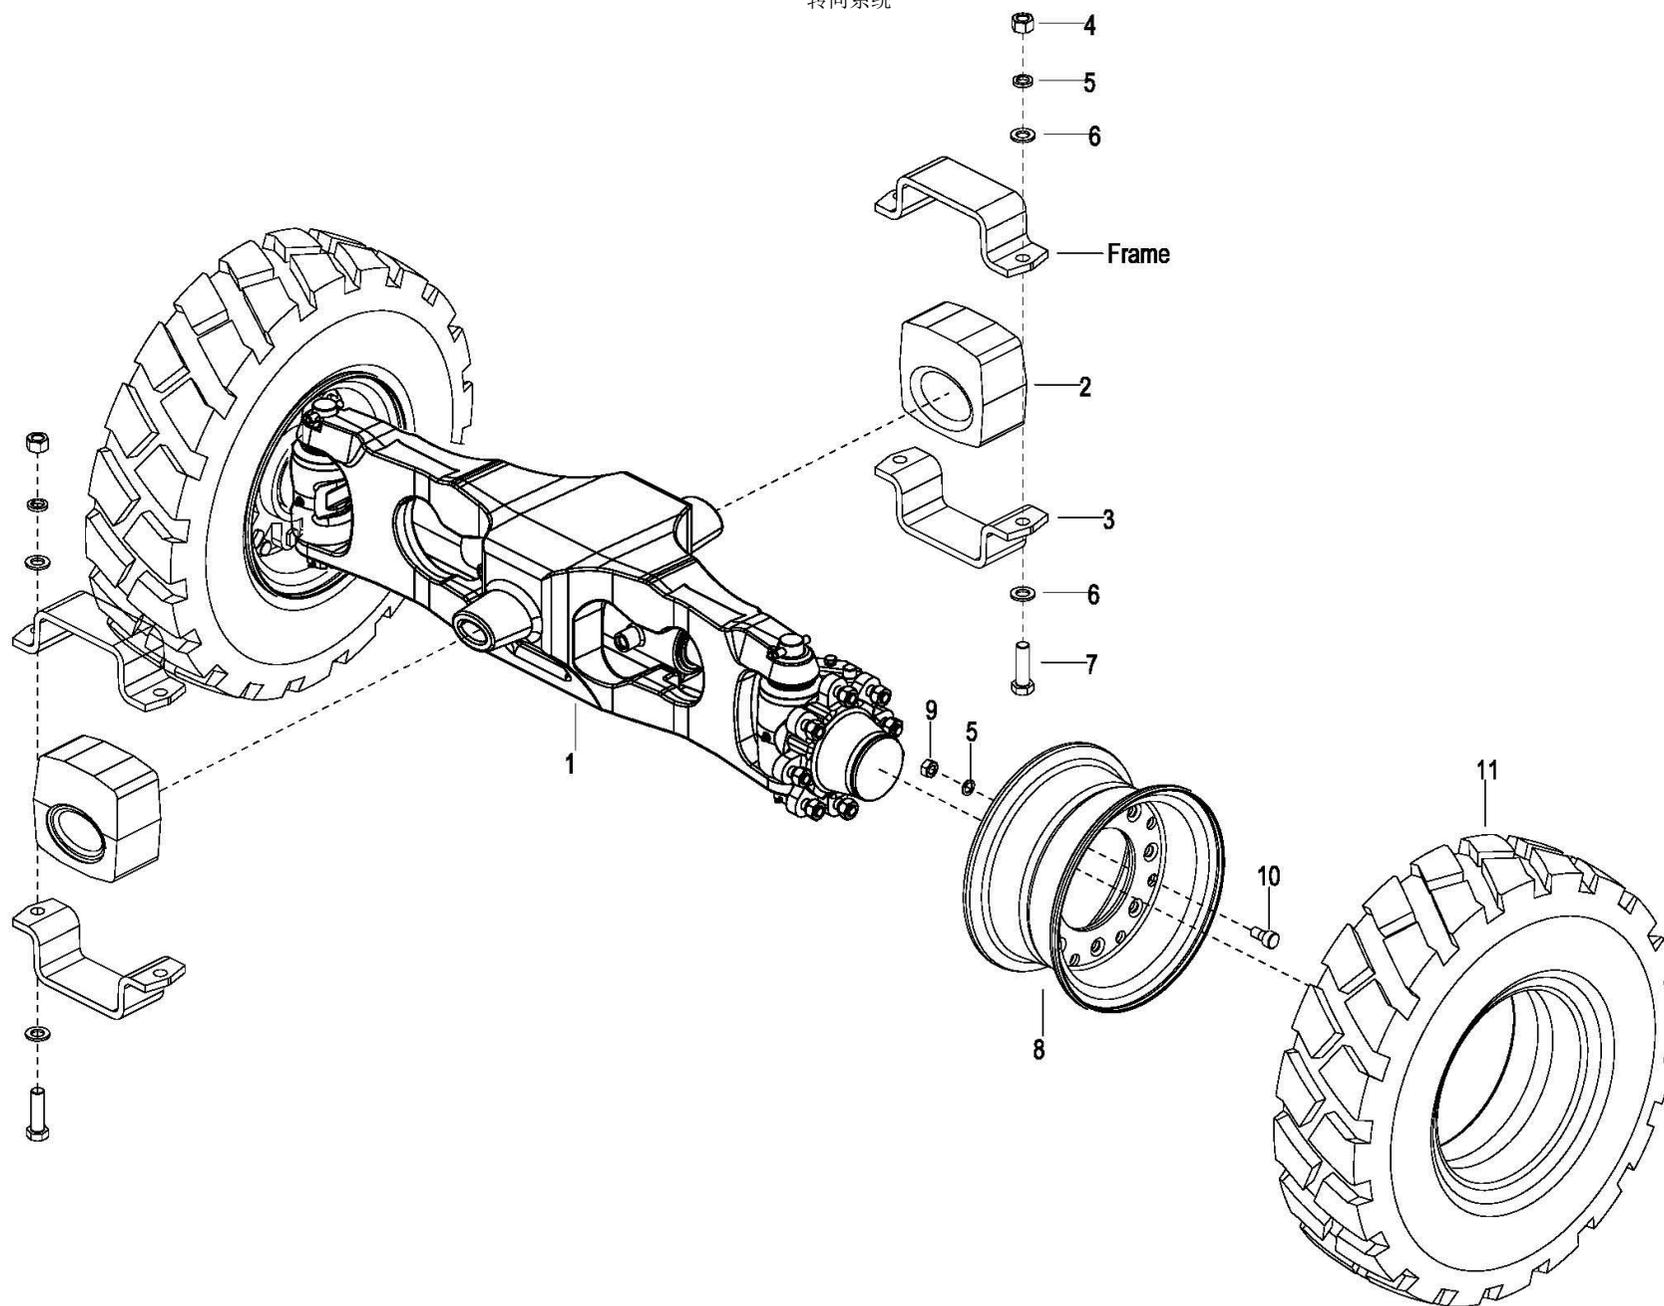


0401 Steering system

转向系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3127-510000-00	Steering axle assembly 转向桥总成	1		
2	3127-51002X-00	Cushion 转向桥减震垫	2		
3	3127-100002-00	Fix plate 转向桥下固定块	2		
4	303001000009	Nut M16 螺母	4		
5	304000000051	Lock washer ø12 弹簧垫圈	20		
6	304000000044	Plain washer ø16 平垫圈	8		
7	301002000074	Bolt M16x55 螺栓	4		
8	7825-214000-S0	Rim assembly rear 后轮辋总成	2		
9	303002000005	Nut M 螺母	16		
10	3525-520002-00	Bolt rim 后轮辋螺栓	16		
11	7820-280001-00-S0	Tyres 轮胎	2		6.00-9-10 (OB502), Pneumatic Tire
11	3127-520000-10	Tyres 轮胎	2		6.00-9/4.00E-9, Solid Tire
11	3127-520000-20	Tyres 轮胎	2		6.00-9/4.00E-9, Traceless Tire

0402 STEERING AXLE

转向桥

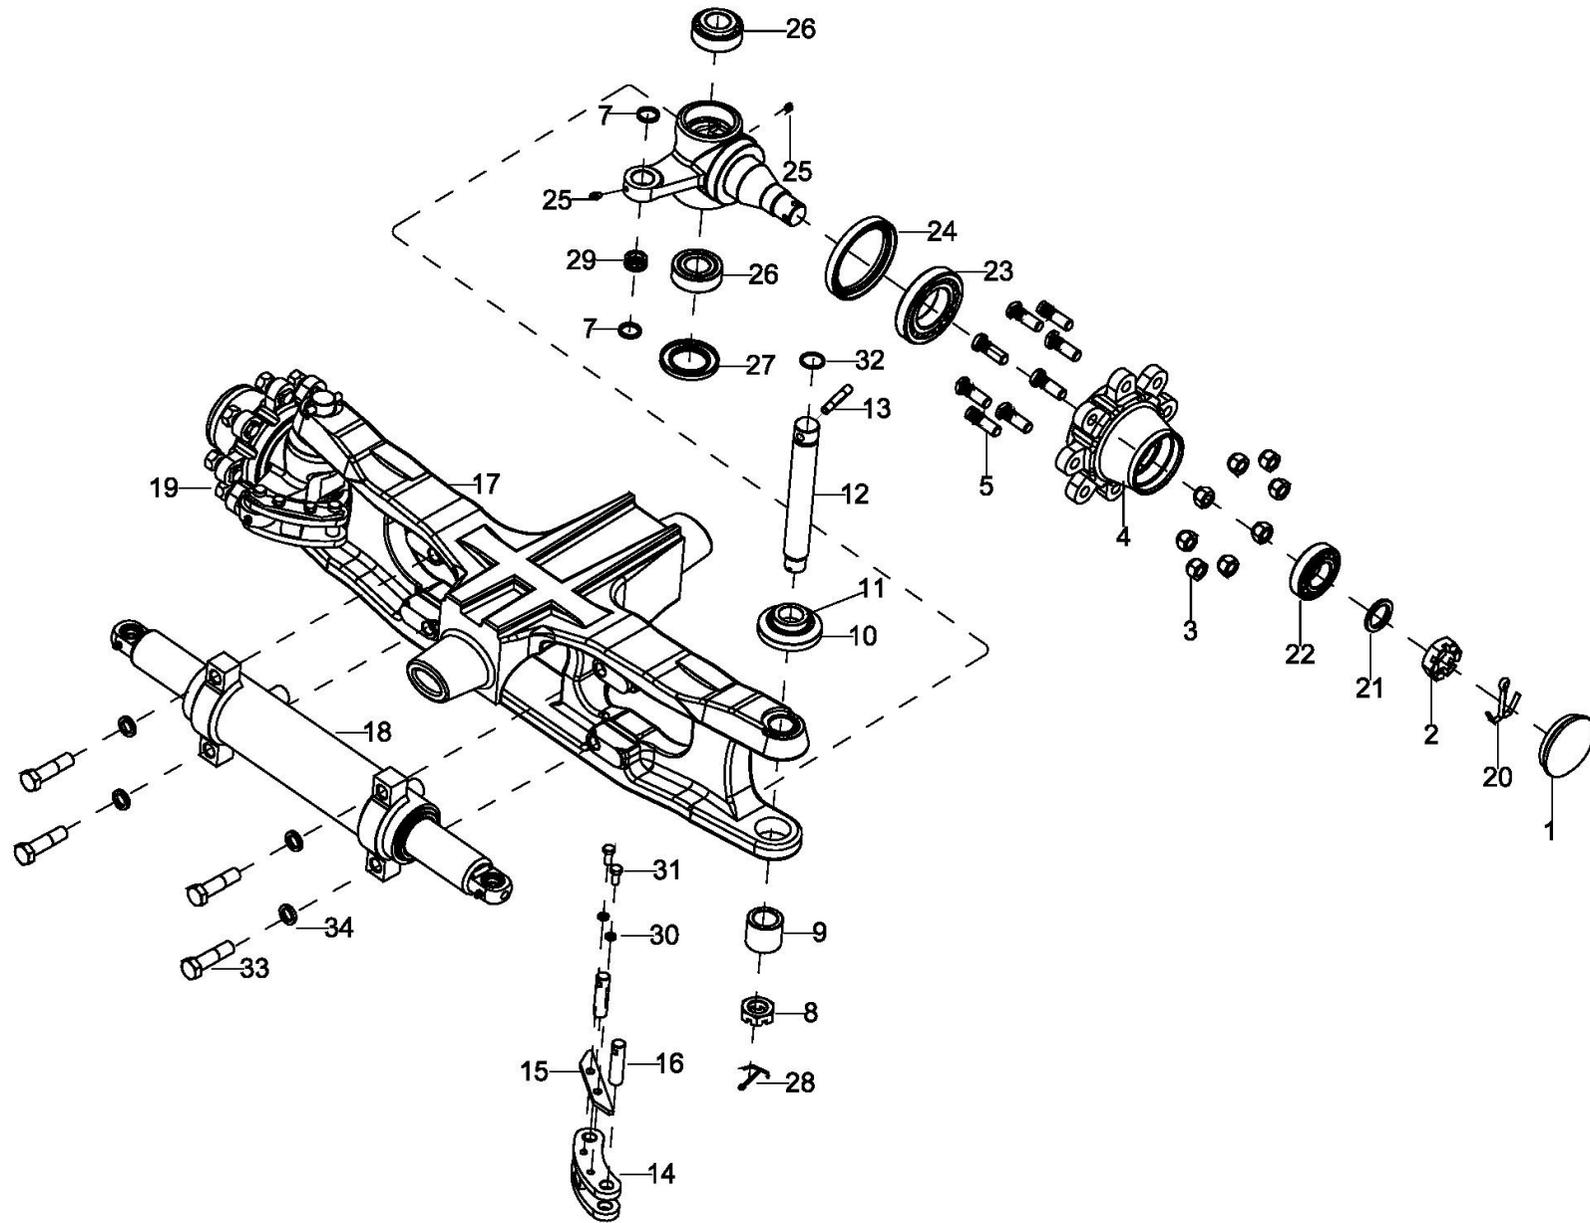

0402 STEERING AXLE

转向桥

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	3530-510001-10	Hub cover 轮毂盖	2		
2	3530-510023-10	Nut M30*2 六角开槽螺母	2		
3	3530-510002-10	Nut 轮毂螺母	16		
4	7331-42007X-00	Hub M14x1.5 转向轮毂	2		
5	3530-510003-10	BoltM14-1.5x4.2 轮毂螺栓	16		
6	7331-42001X-01	Knuckle 转向节(右)	1		
7	3530-510006-10	Thrust ring 挡圈	4		
8	3530-510007-10	Nut 开槽螺母	2		
9	7331-42002X-01	Sleeve 30*44x38 轴承衬套	2		
10	7331-42003X-01	scraper seal 防尘圈	2		
11	3530-510017-10	Dustproof enclosure 防尘圈座	2		
12	3530-510015-10	Master pin 主销	2		
13	7331-42004X-01	Parallel pin 圆柱销	2		
14	7331-42023X-00	Connect rod 连杆	2		
15	3530-510013-10	Space plate 挡板	2		
16	3530-510014-10	Pin 连杆销	4		
17	3127-51001X-00	Axle body 桥体	1		
18	7331-42006x-01	Steering cylinder 转向油缸	1		
19	7331-42007X-01	Steering knuckle ,L 转向节(左)	1		
20	3530-510022-10	Cotter pin d6.3x80 开口销	2		
21	304000000015	Plain washer 30 平垫圈	2		
22	3530-510025-10	Bearing 30211 圆锥滚子轴承	2		
23	309002000017	Bearing 30207 圆锥滚子轴承	2		
24	7331-42010X-00	Sealing ring FB85x110x12 旋转轴唇形密封圈	2		

0402 STEERING AXL

转向桥

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
25	3115-52023X-10	Oil cup M6	直通式压注油杯	4		
26	3530-510029-10	Bearing 33206	圆锥滚子轴承	4		EP20230823
27	3530-510031-10	Sealing ring FB44x72*6	旋转轴唇形密封图	2		
28	3530-510032-10	Pin 3.4x40	开口销	2		
29	3530-510030-10	Bearing GE16ES	关节轴承	2		
30	3530-510038-10	Lock washer 8	弹簧垫圈	4		
31	7810-41039X-W0	Bolt 8x18	六角头螺栓	4		
32	7331-42009X-01	O-ring d25x2.65	O型圈	2		
33	7331-42010X-01	Bolit M16x1.5x62(25)-10.9	轮毂制动毂铰制螺栓	4		
34	7845-41021X-S0	Lock washer 16	弹簧垫圈	4		

0403 STEERING CYLINDER

转向油缸

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	/	Packet 50*60*10 隔套	2		
2	/	Ring 50*58x5.8/8 T839N 型防尘圈	2		
3	/	O-ring d50*3.55 O型 圈	2		
4	/	O-ring D70*3.1 O型 圈	4		
5	/	Thrust ring 70*65x1.5 挡圈	2		
6	/	Thrust ring 60*50*3A 挡圈	2		
7	/	Sealing ring 50*60*6 T 605型活塞杆密封圈	2		
8	/	Sealing ring 70*59*4.2 T54型活塞密封圈	1		
9	/	O-ring d43.7*3.55 O型圈	1		
10	3132-ZXG-0A	Seal kit for Steering cylinder 转向油缸修理包	1		Include all above(1、2、3、4、5、6、7、8、9)


5000

Electrical System

电气系统

0501 HARNESS (Serial Number up to -2311000017)

线束

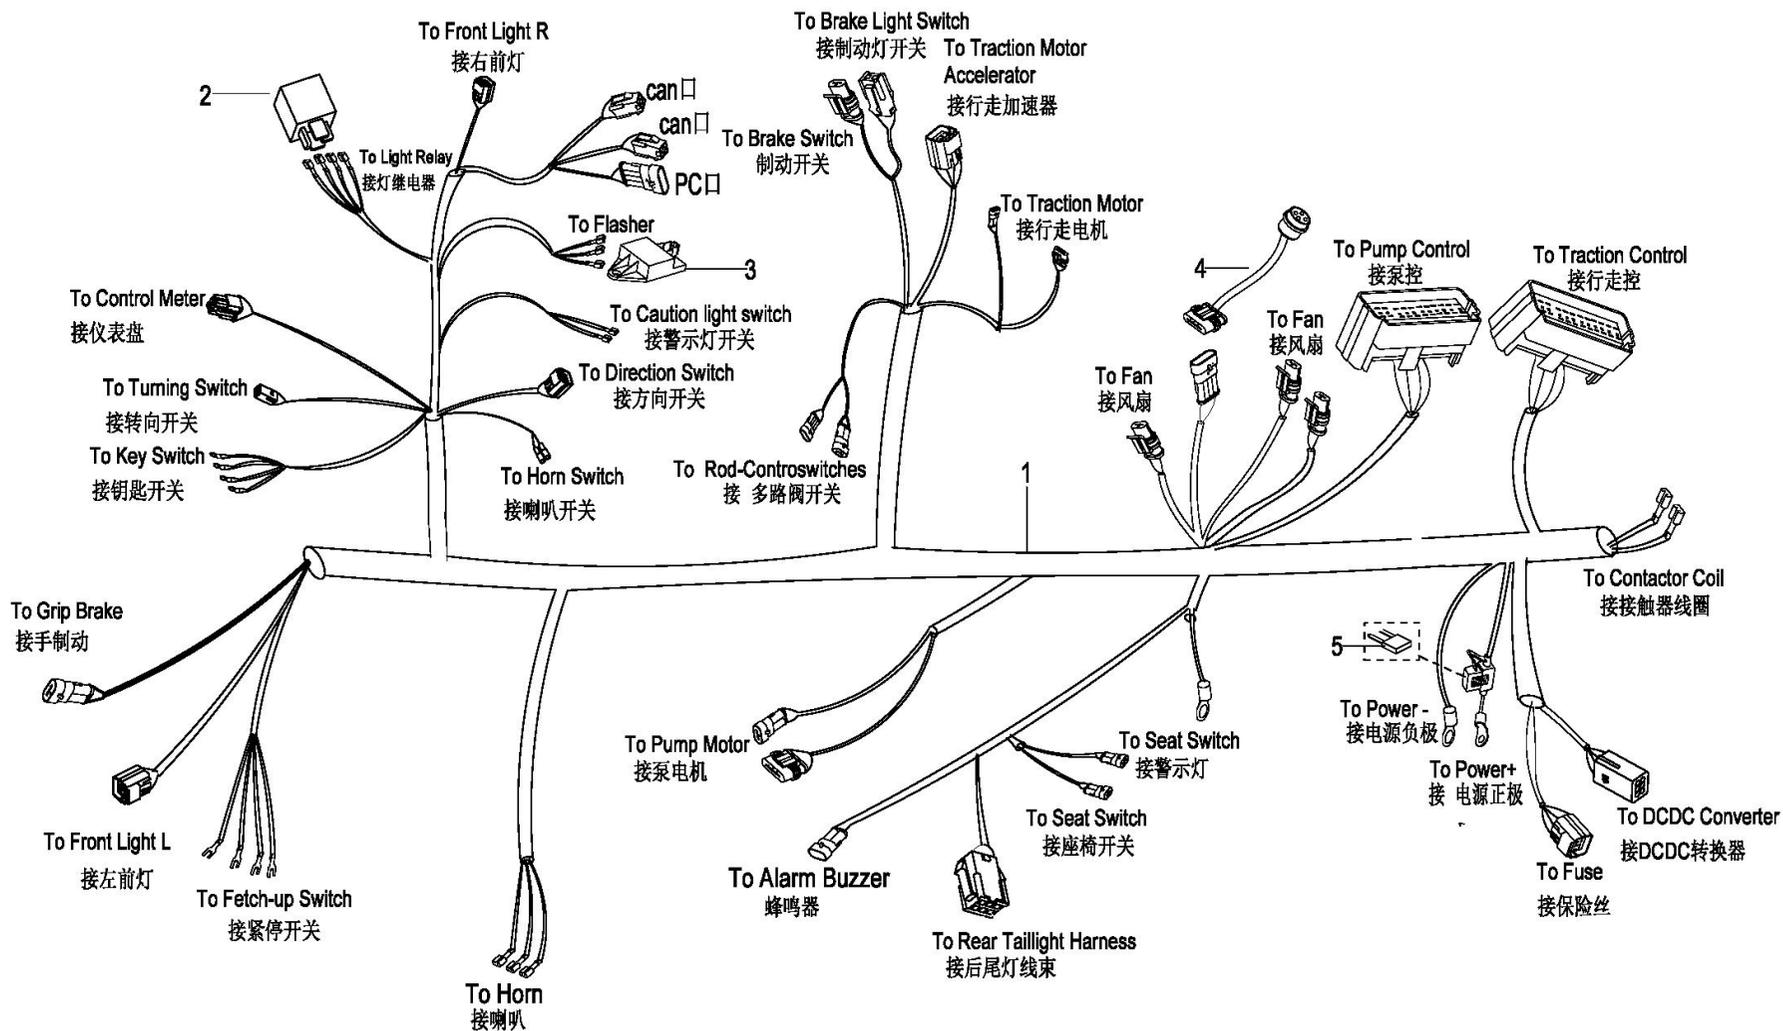


0501 HARNESS

线束

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	3127-610001-10	Master Wire Harness	主线束	1	-2311000017	ICE251B,
1	3127-610001-A0	Master Wire Harness	主线束	1	-2311000017	EFL252、ICE251
2	3525-684000-00	Light Relay	大灯继电器	1	-2311000017	
3	3218-600600-10	Flasher	闪光器	1	-2311000017	
4	3628-650004-00	Signal wire	锂电池信号线	1	-2311000017	
5	4105-620007-00	Fuse 10A	保险丝	1	-2311000017	

050101 HARNESS (Serial Number from 2311000018-)

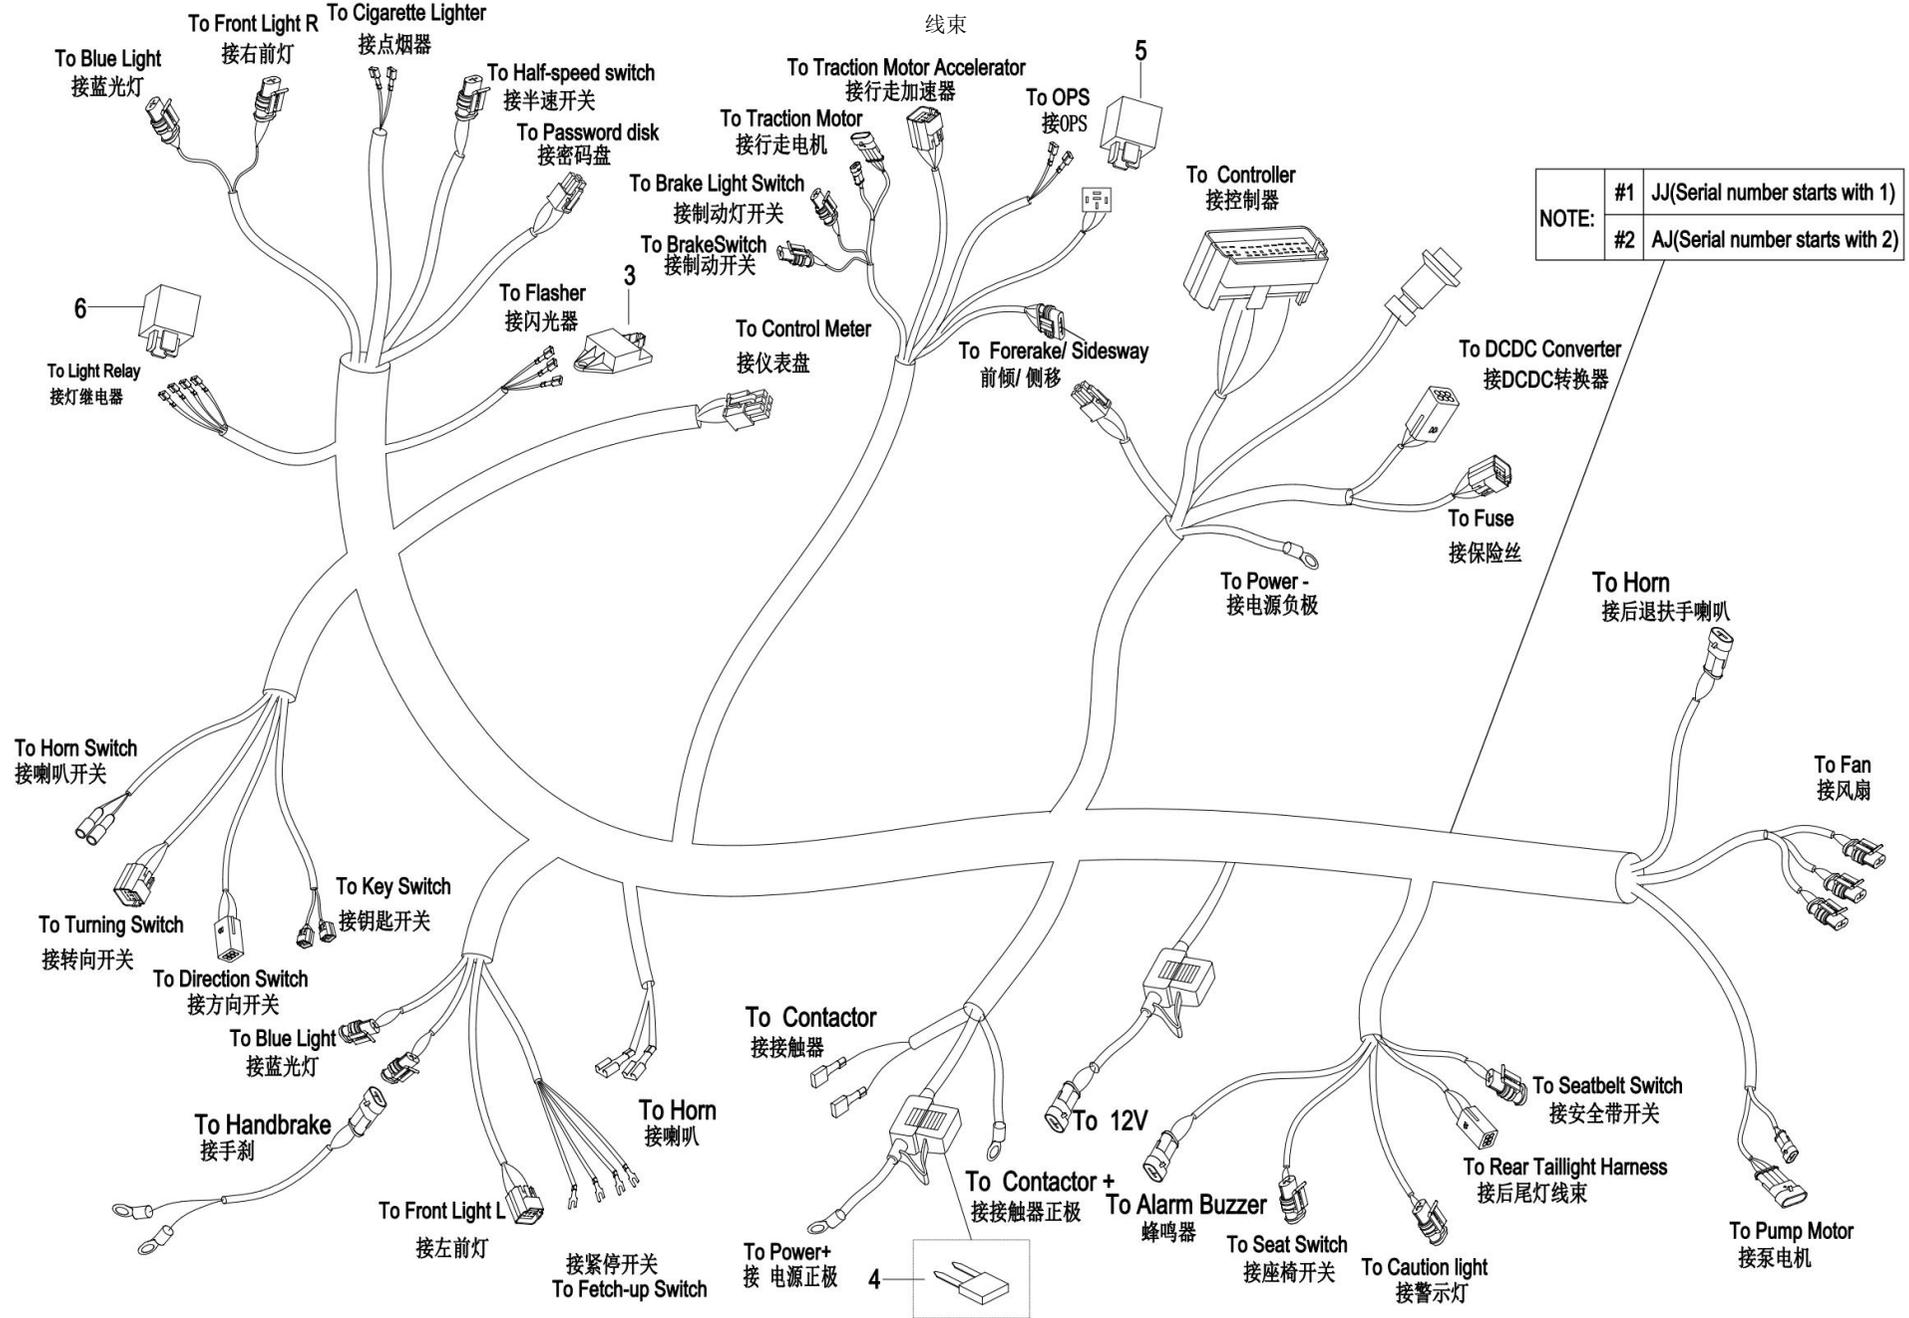

NOTE:	#1	JJ(Serial number starts with 1)
	#2	AJ(Serial number starts with 2)


050101 HARNESS (Serial Number from 2311000018-)

线束

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	3127-610001-20	Master Wire Harness 主线束	1		For JJ
1	3127-610001-21	Master Wire Harness 主线束	1	1321200999-	For JJ, CE,BGD-22-006181
2	3127-610001-20	Master Wire Harness 主线束	1	2311000018-1321200998	For AJ,BGD-21-008802
2	3127-610001-21	Master Wire Harness 主线束	1	1321200999-	For AJ,BGD-22-006181
3	3218-600600-10	Flasher 闪光器	1	2311000018-	
4	3218-690001-C0	Fuse 10A 保险丝	1	2311000018-	
5	3845-683000-02	Relay 继电器	1	-1321200998	Option, For OPS,BGD-22-006181
6	3525-684000-00	Light Relay 大灯继电器	1	2311000018-	

0502 Control Bracket Assembly (ICE251B)

控制器安装板总成

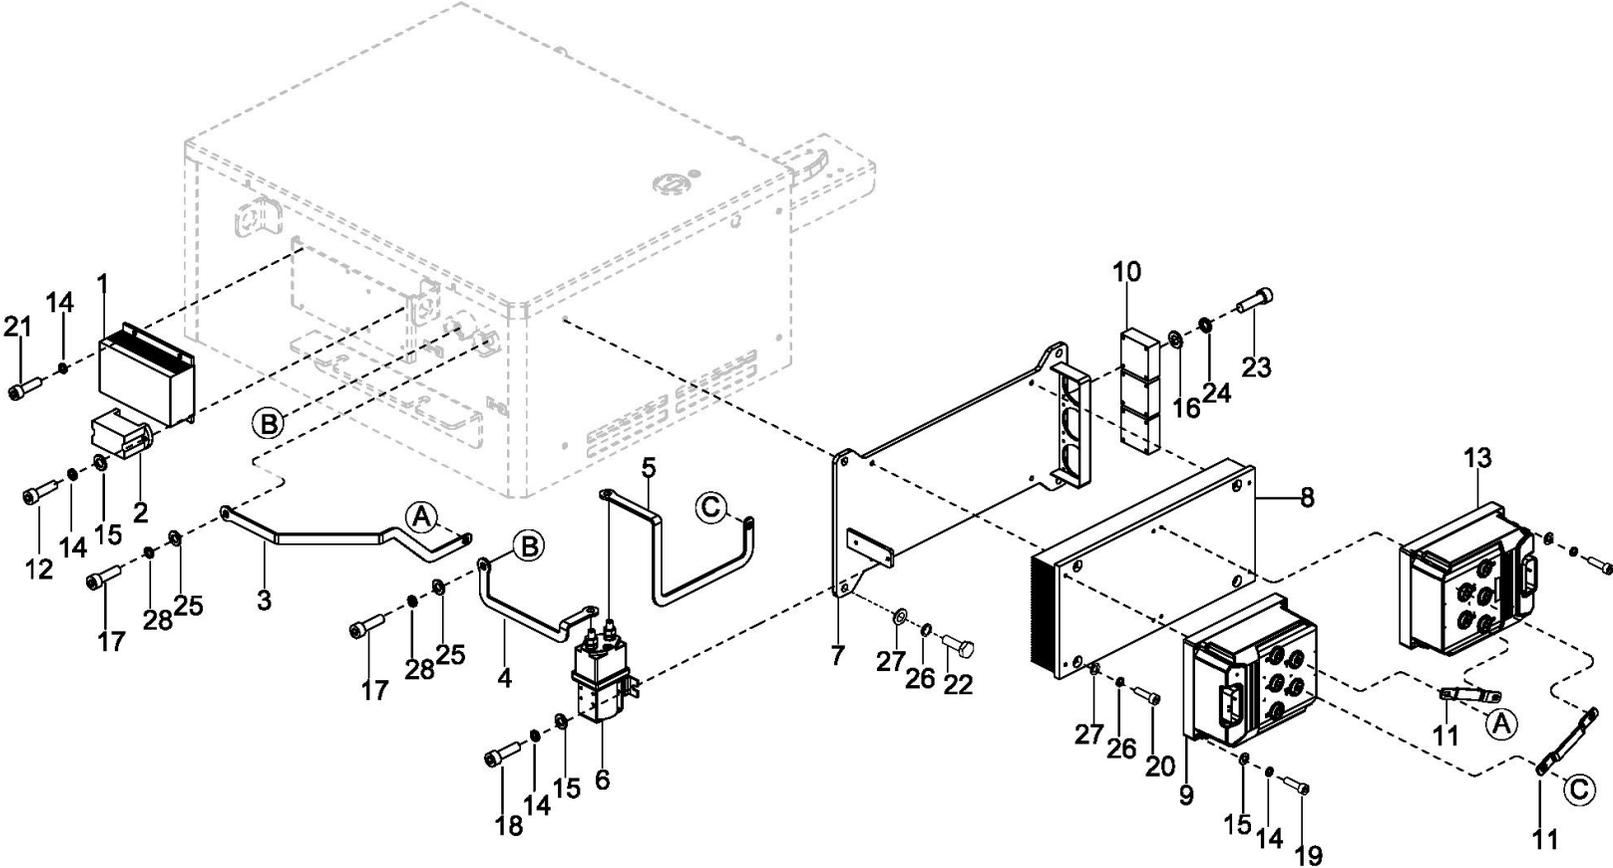

0502 Control Bracket Assembly(ICE251B)

控制器安装板总成

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	3530-642000-00	DC-DC Converter	DC-DC 转换器	1		
2	3132-642000-00	Fuse Harness	保险丝盒线束	1		
3	3127-640004-10	Copper bar -	负极铜条	1		
4	3132-640004-0A	Copper bar +	正极铜条二	1		
5	3127-640003-10	Copper bar +	正极铜条一	1		
6	3218-634000-10	Contactora	接触器	1		
7	3127-641000-10	Control Bracket	控制器安装板焊件	1		
8	3127-640001-10	Aluminum plate	散热铝板	1		
9	3127-642000-10-00	Controller	行走控制器	1		
10	3132-430001-0A	Electric fan	散热风扇	3		
11	3127-640002-10	Copper bar	控制器间铜条	2		
12	302001000107	Screw M6x12	螺钉	2		
13	3127-642000-11-00	Controller	泵控制器	1		
14	304000000050	Lock washer ø6	弹簧垫圈	16		
15	304000000036	Flat washer ø6	平垫圈	12		
16	304000000038	Flat washer ø4	平垫圈	12		
17	302000000056	Screw M10x20	螺钉	2		
18	301002000003	Bolt M6x12	螺栓	2		
19	302000000370	Screw M6x35	螺钉	8		
20	302000000486	Screw M8x60	螺钉	4		
21	302001000110	Screw M6x16	螺钉	4		
22	301002000014	Bolt M8x20	螺栓	4		
23	302000000329	Screw M4x30	螺钉	12		
24	304000000048	Lock washer ø4	弹簧垫圈	12		


0502 Control Bracket Assembly(ICE251B)

控制器安装板总成

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
25	304000000035	Flat washer ϕ 10	平垫	2		
26	304000000052	Lock washer ϕ 8	弹垫	8		
27	304000000040	Flat washer ϕ 8	平垫	8		
28	304000000053	Lock washer ϕ 10	弹垫	2		

0503 Control Bracket Assembly (ICE251、EFL252)(205Ah/280Ah Battery Version)

控制器安装板总成

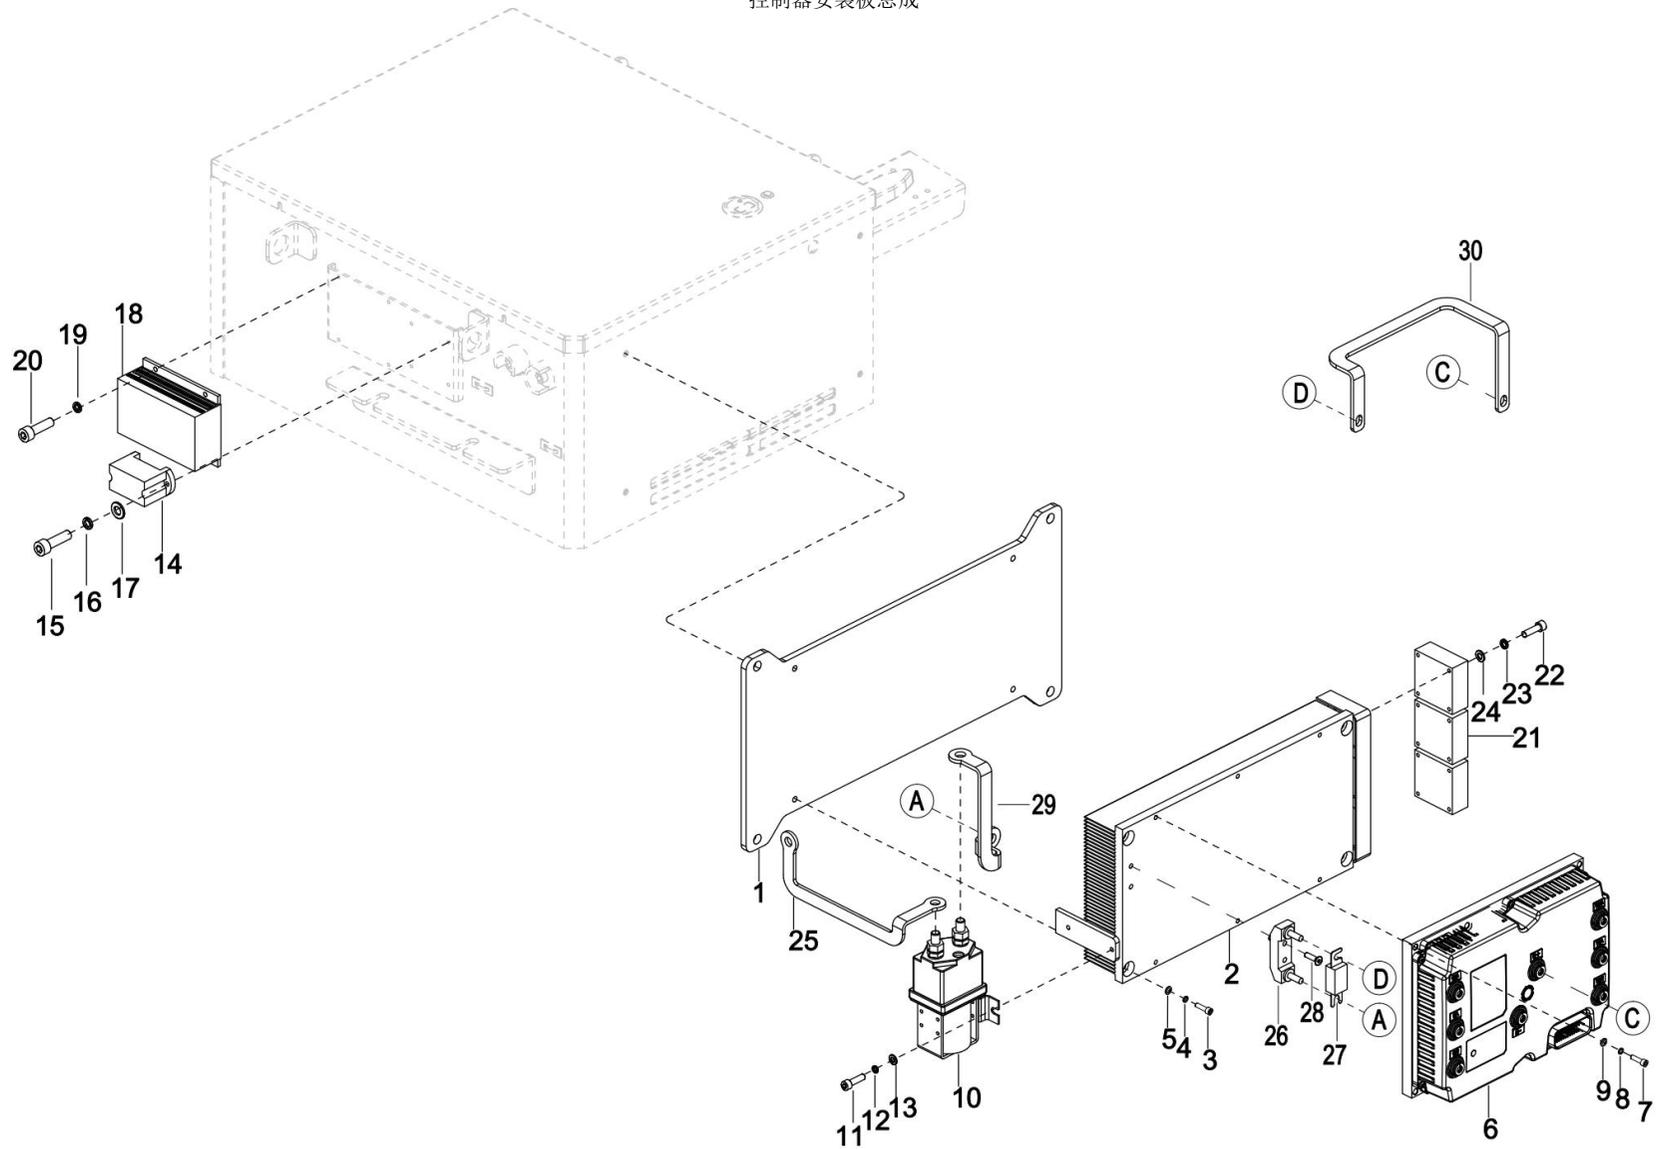

0503 Control Bracket Assembly (ICE251、EFL252)(205Ah/280Ah Battery Version)


控制器安装板总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	3132-641000-D0	Control Bracket 控制器安装板焊件	1		
2	3132-640001-D0	Aluminum plate 散热铝板	1		
3	302000000370	Screw M6x35 内六角圆柱头螺钉	4		
4	304000000050	Lock washer ø6 标准弹簧垫圈	4		
5	304000000036	Flat washer ø6 平垫圈	4		
6	01 3132-642000-D0	Controller 控制器	1		Superseded by#3218-600100-63-00,For BGD-21-001807
	02 3218-600100-63-00	Controller 控制器	1	-1311800393	
	03 3218-600100-63-82	Controller 控制器	1	1311800394-	BGD-23-004718
7	302001000099	Screw M6x25 内六角圆柱头螺钉	8		
8	304000000050	Lock washer ø6 标准弹簧垫圈	8		
9	304000000036	Flat washer ø6 平垫圈	8		
10	3218-634000-10	Contactora 48V 接触器	1		
11	302001000107	Screw M6x12 内六角圆柱头螺钉	2		
12	304000000050	Lock washer ø6 标准弹簧垫圈	2		
13	304000000036	Flat washer ø6 平垫圈	2		
14	3132-642000-00	Fuse Harness 保险丝线束	1		
15	302001000107	Screw M6x12 内六角圆柱头螺钉	2		
16	304000000050	Lock washer ø6 标准弹簧垫圈	2		
17	304000000036	Flat washer ø6 平垫圈	2		
18	3530-642000-00	DC-DC Converter DCDC 转换器	1		
19	302001000110	Screw M6x16 内六角圆柱头螺钉	4		
20	304000000050	Lock washer ø6 标准弹簧垫圈	4		
21	3132-430001-0A	Fan 12V 12V 风扇	3		
22	302000000329	Screw M4x30 十字槽盘头螺钉	12		
23	304000000048	Lock washer ø4 标准弹簧垫圈	12		
24	304000000038	Flat washer ø4 平垫圈	12		

25	3132-640004-0A	Copper bar	正极铜条二	1		
26	1120-540001-00	Fuse Block	保险丝座	1	1321200999-	BGD-22-004544
27	LB00-200633-00	Fuse 10A	保险丝	1	1321200999-	BGD-22-004544
28	302003000004	Screw M6x16	螺钉	2	1321200999-	BGD-22-004544
29	3132-640010-D0	Contacteur fuse copper bar	接触器到保险丝铜条	1	1321200999-	BGD-22-004544
30	3127-680010-00	Contacteur Controller bar +	接触器到控制器正铜条	1	1321200999-	BGD-22-004544

0503 Control Bracket Assembly (ICE251、EFL252)(410Ah Battery Version)

控制器安装板总成

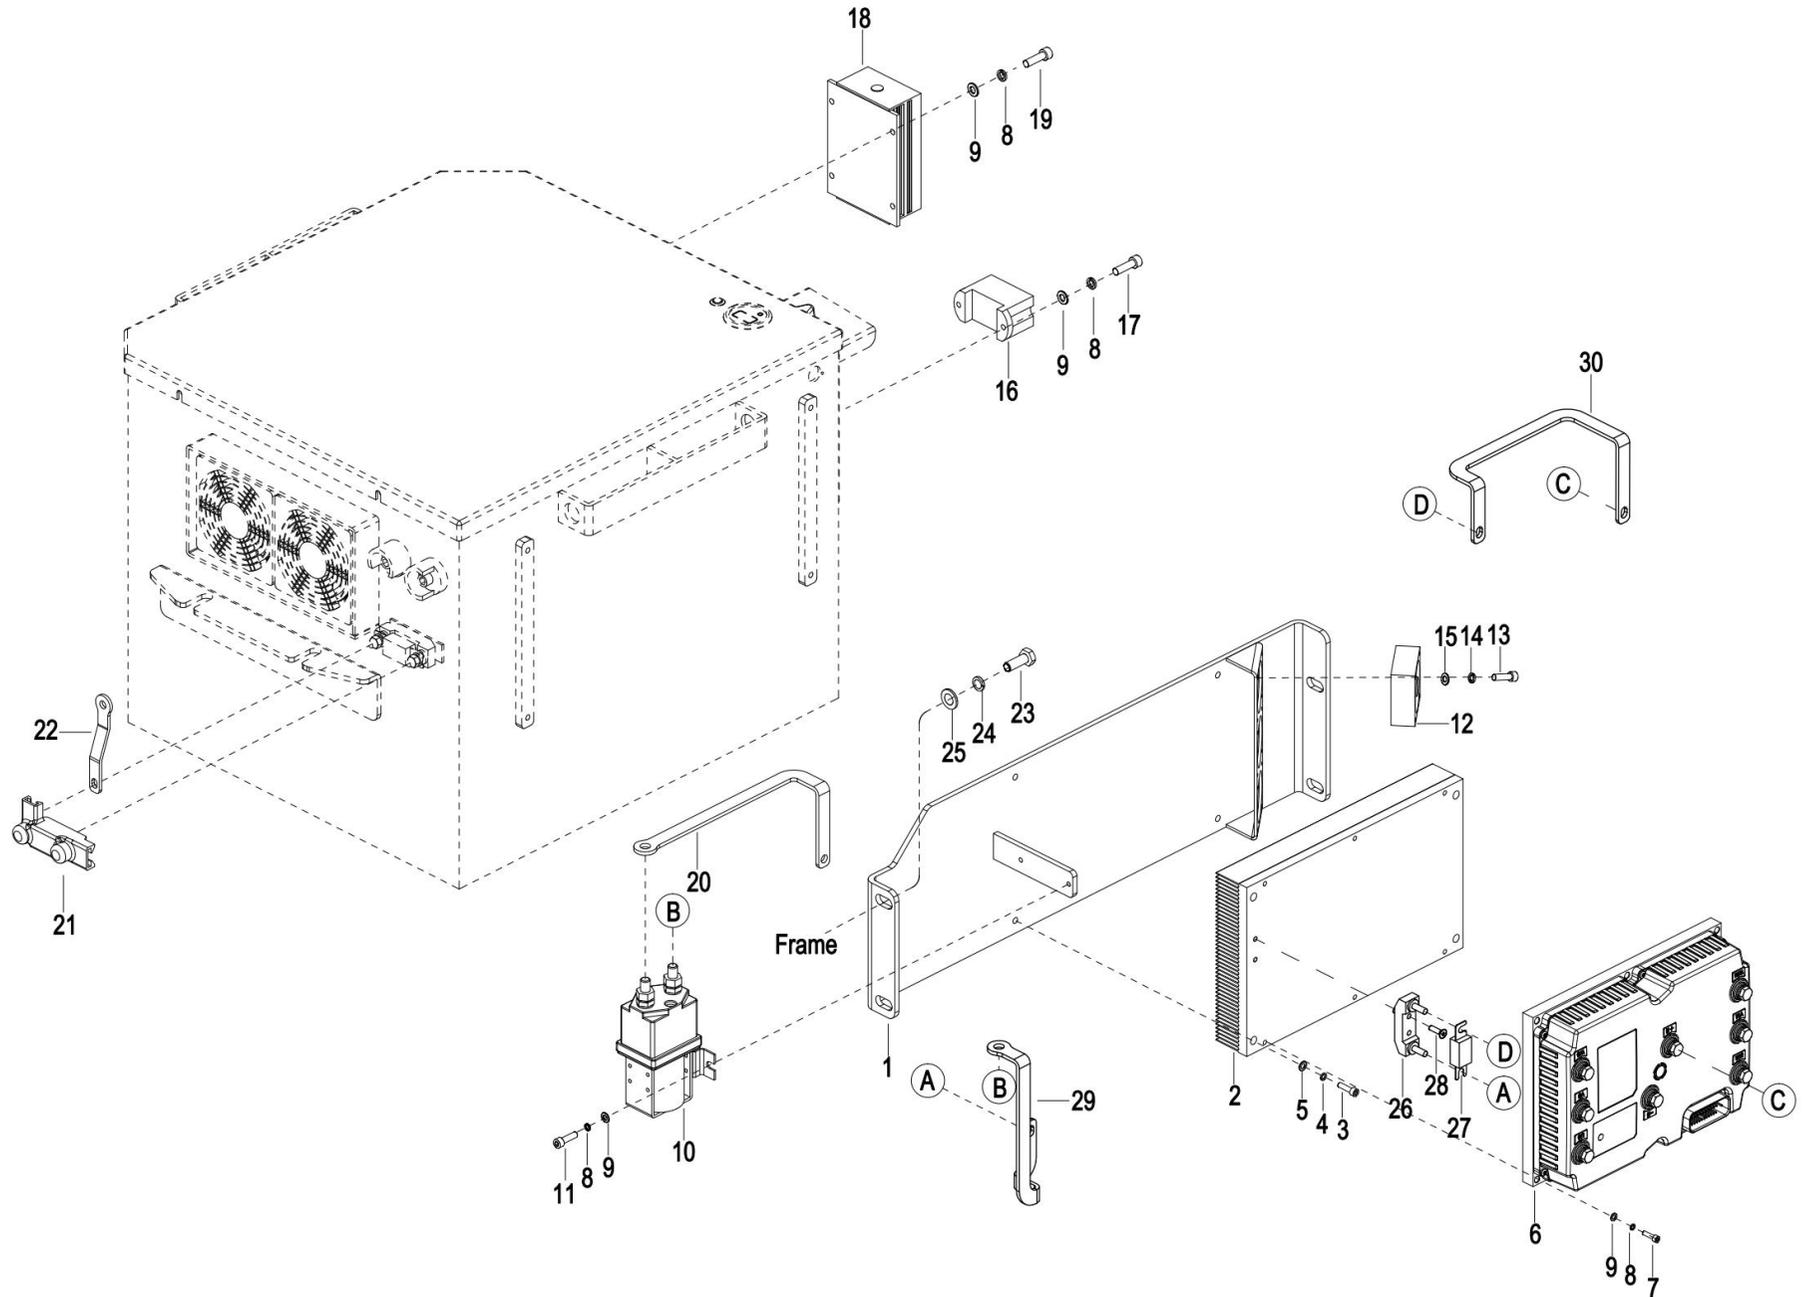

050301 Control Bracket Assembly (ICE251、EFL252)(410Ah Battery Version)


控制器安装板总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	3127-681000-00	Control Bracket 控制器安装板焊件	1		
2	3132-680003-00	Aluminum plate 散热铝板	1		
3	302002000027	Screw M8x55 螺钉	4		
4	304000000052	Lock washer ø8 弹垫	4		
5	304000000040	Flat washer ø8 平垫	4		
6	01 3218-600100-63-00	Controller 控制器	1	-1311800393	
	02 3218-600100-63-82	Controller 控制器	1	1311800394-	BGD-23-004718
7	302001000099	Screw M6x25 螺钉	6		
8	304000000050	Lock washer ø6 弹垫	14		
9	304000000036	Flat washer ø6 平垫	14		
10	3218-634000-10	Contactora 48V 接触器	1		
11	302000000343	Screw M6x12 螺钉	2		
12	3132-430001-0A	Fan 12V 12V 风扇	3		
13	302000000329	Screw M4x30 十字槽盘头螺钉	12		
14	304000000048	Lock washer ø4 弹垫	12		
15	304000000038	Flat washer ø4 平垫	12		
16	4105-620004-C0	Fuse Harness 保险丝线束	1		
17	302000000343	Screw M6x12 螺钉	2		
18	3530-642000-00	DC-DC Converter DCDC 转换器	1		
19	302002000031	Screw M6x16 螺钉	4		
20	3127-680002-00	Contactora Copper bar + 接触器正极铜条	1		
21	3127-100011-00	Rubber Fuse Sheath 橡胶保险丝护套	1		Option
22	3132-640007-00	Fuse Copper bar + 正极到保险丝铜条	1		
23	301002000028	Bolt M10x30 螺栓	4		
24	304000000053	Lock washer ø10 弹垫	4		
25	304000000034	Flat washer ø10 大平垫	4		

26	1120-540001-00	Fuse Block	保险丝座	1	1321200999-	BGD-22-004544
27	LB00-200633-00	Fuse 10A	保险丝	1	1321200999-	BGD-22-004544
28	302003000004	Screw M6x16	螺钉	2	1321200999-	BGD-22-004544
29	3127-680011-00	Contactora fuse copper bar	接触器到保险丝铜条	1	1321200999-	BGD-22-004544
30	3127-680010-00	Contactora Controller bar +	接触器到控制器正铜条	1	1321200999-	BGD-22-004544

0504 Cable (ICE251B)

电缆总成

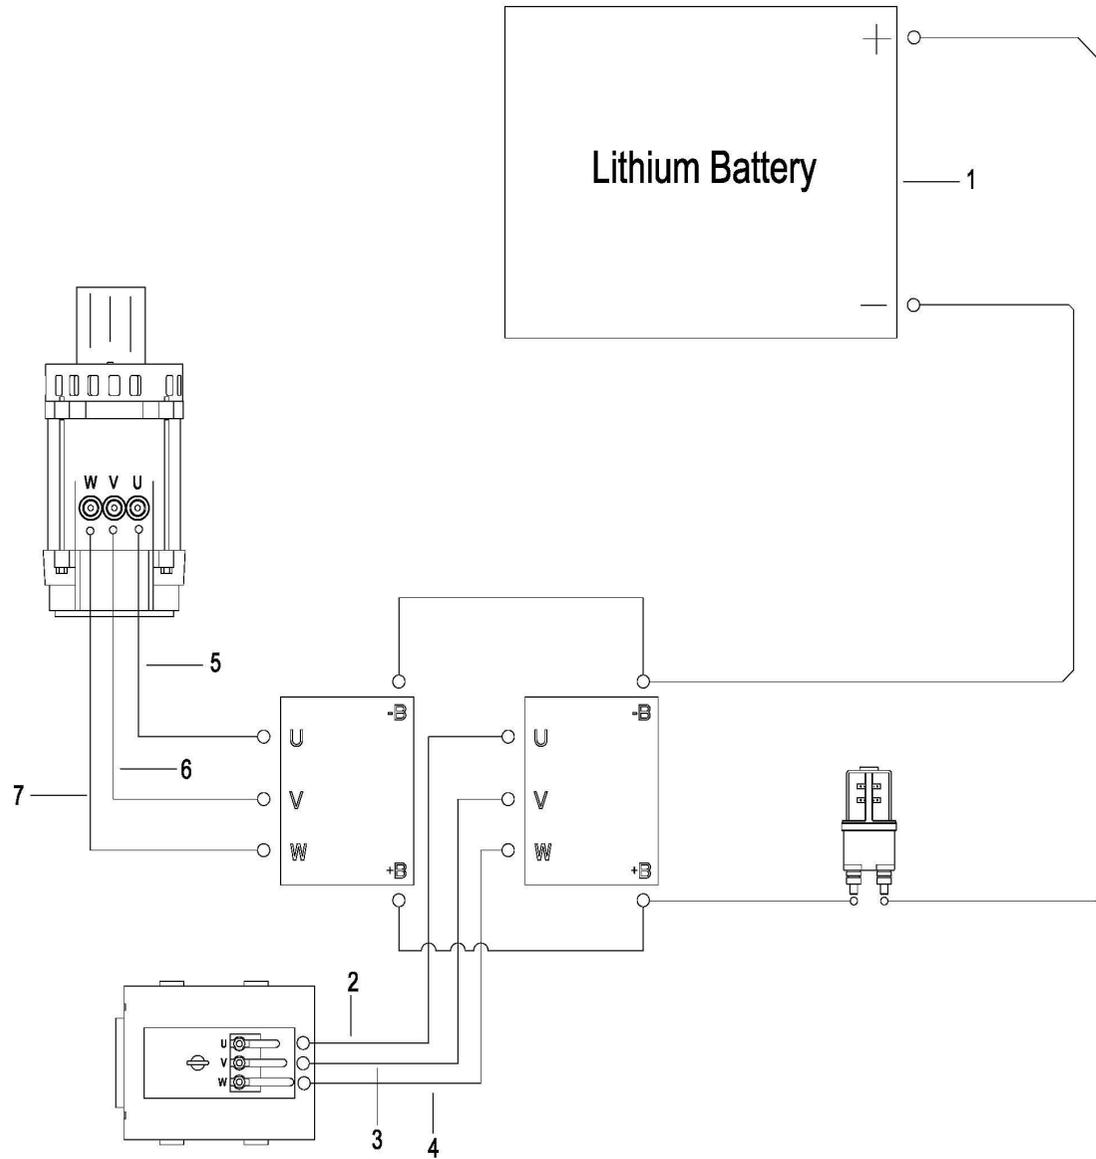


0504 Cable (ICE251B)

电缆总成

Index 序号	Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 试用日期	Remark 备注
1	LB78-00000Z-04	Lithium Battery	锂电池总成	1		80V205AH
1	LB78-00000Z-10	Lithium Battery	锂电池总成	1		80V155AH
1	LB78-00000Z-11	Lithium Battery	锂电池总成	1		80V280AH
2	3127-620001-00	Traction Power Cable U	牵引电机 U 电缆	1		
3	3127-620002-00	Traction Power Cable V	牵引电机 V 电缆	1		
4	3127-620003-00	Traction Power Cable W	牵引电机 W 电缆	1		
5	3127-620005-00	Pump Motor cable U	泵电机 U	1		
6	3127-620006-00	Pump Motor cable V	泵电机 V	1		
7	3127-620007-00	Pump Motor cable W	泵电机 W	1		

0504 Cable (ICE251,EFL252)

电缆总成

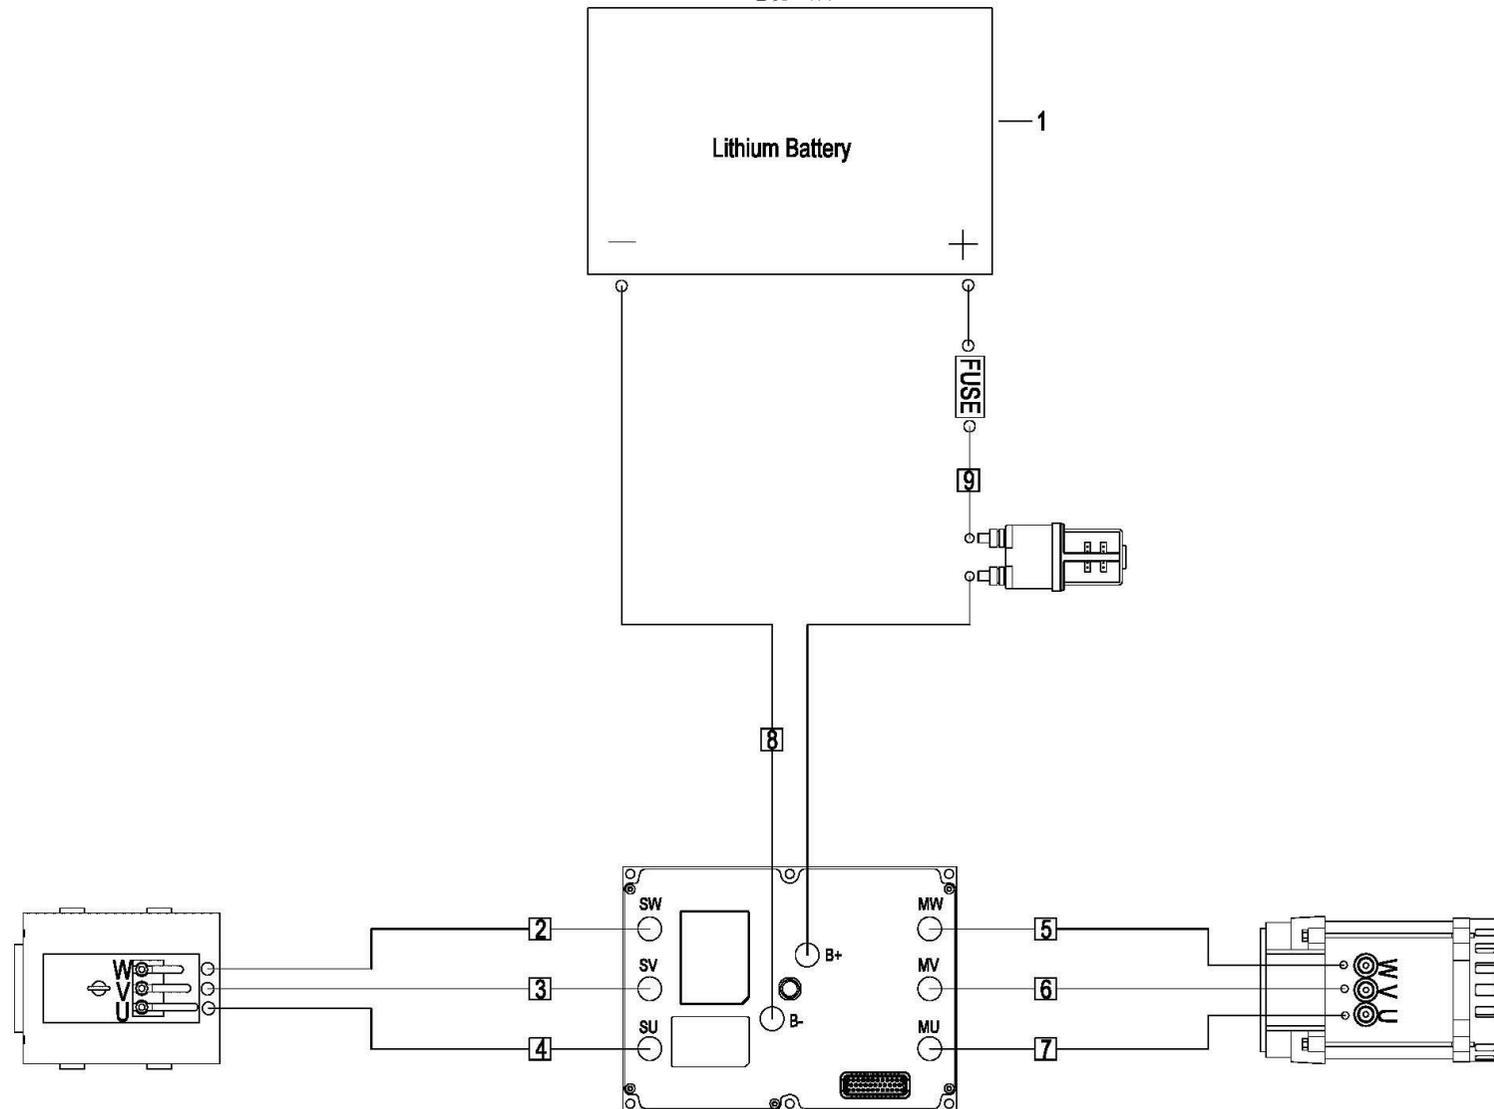


0504 Cable (ICE251,EFL252)

电缆总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 试用日期	Remark 备注
1	LB78-00000Z-04	Lithium Battery 锂电池总成	1		80V205AH,See 0505
1	LB78-00000Z-11	Lithium Battery 锂电池总成	1		80V280AH,See 0505
1	LB78-00000Z-30	Lithium Battery 锂电池总成	1		80V410AH,See 0506
2	3132-801008-0A	Traction Power Cable W 牵引电机 W 电缆	1		
3	3132-801007-0A	Traction Power Cable V 牵引电机 V 电缆	1		
4	3132-801006-0A	Traction Power Cable U 牵引电机 U 电缆	1		
5	3132-801011-0A	Pump Motor cable W 泵电机 W	1		
6	3132-801010-0A	Pump Motor cable V 泵电机 V	1		
7	3132-801009-0A	Pump Motor cable U 泵电机 U	1		
8	3132-801014-0A	Battery Cable - B-电缆	1		
9	3132-801013-0A	C1 Cable C1 电缆	1		

0505 Lithium Battery Assembly(205/280Ah)

锂电池总成

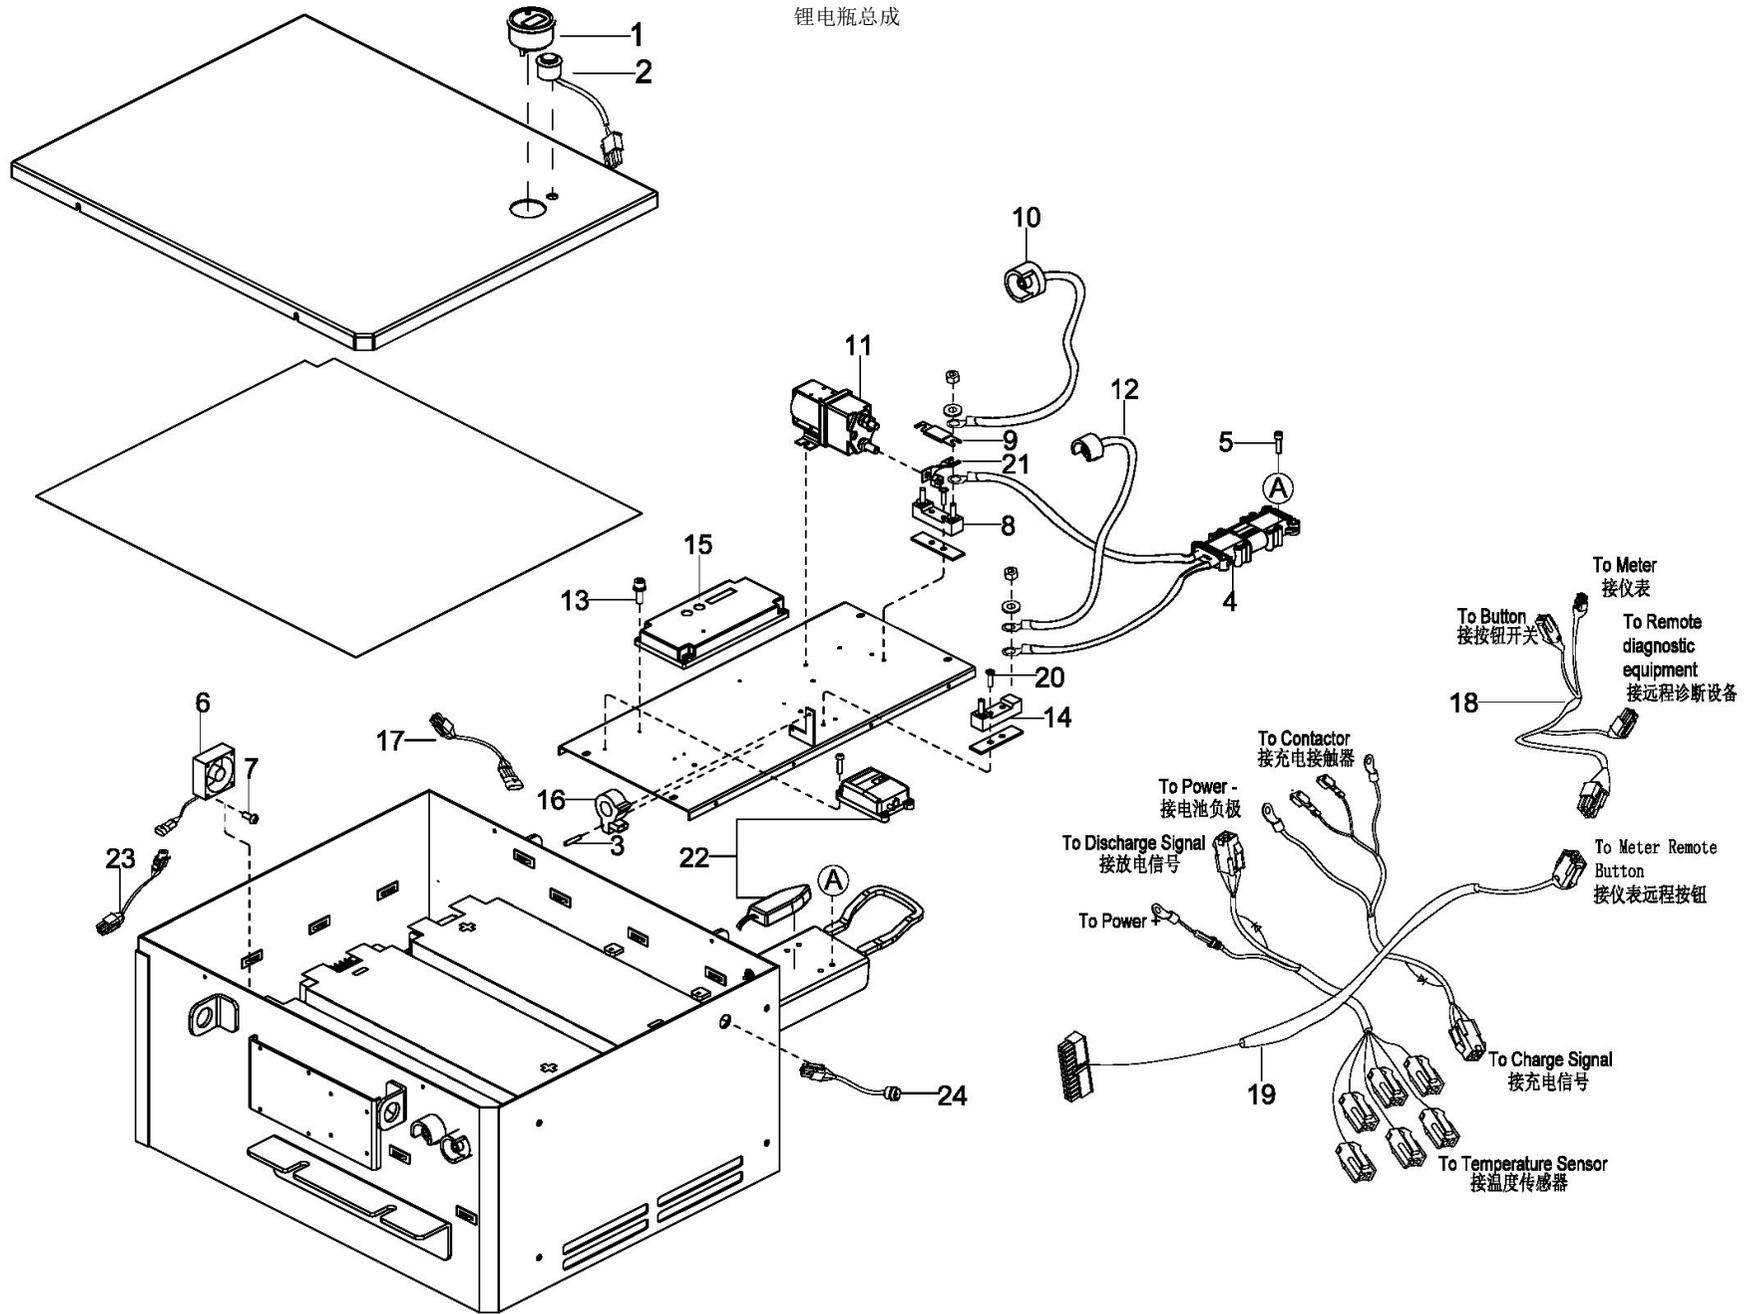


0505 Lithium Battery Assembly(205/280Ah)

锂电池总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	LB00-200011-00	Coulombmeter 圆形显示仪表	1		
2	LB11-400020-0A	Button Harness 按钮线束	1		
3	LB00-300045-00	Nylon 尼龙柱	2		
4	LB78-400041-00	Line 电瓶电缆线	1		
5	302003000004	Screw M6×16 螺钉	4		
6	LB11-400019-00	Fan Harness 风扇线束	4		
7	302004000007	Screw M4x30 螺钉	16		
8	LB00-200008-00	Fuse Block 保险丝座	1		
9	LB00-200157-00	Fuse 500A 保险丝	1		
10	LB00-200231-00	Column 接线柱	1		
11	3218-634000-00	Contactoer 48V 接触器	1		
12	LB00-200232-00	Column 接线柱	1		
13	202800000005	Screw M4x16 螺钉	4		
14	LB00-200058-00	Base 单柱头底座	1		
15	LB00-200043-00	Bracket 保护板	1		
16	LB00-200042-00	Sensor 进口霍尔传感器	1		
17	01 LB23-400014-0A	Sensor harness 双路霍尔传感器线束	1		Superseded by LB23-400014-0B
	02 LB23-400014-0B	Sensor harness 双路霍尔传感器线束	1		EP20220923
18	LB23-400020-00	Button Harness 远程仪表按钮线束	1		
19	LB30-400008-1H	Main Wire Harness 锂电池主线束	1		
20	302003000004	Screw M6x16 螺钉	4		
21	LB11-400012-0A	Copper bar 48V 铜条	1		
22	LB00-200238-00	Remote Diagnostic Client 远程诊断客户端	1		Option, For China
22	LB00-200262-00	Remote Diagnostic Client 远程诊断客户端	1		Option, For Oversea
23	LB78-400057-00	Fan transfer line 风扇转接线	2		
24	LB06-400012-1D	Communication line 内部通讯连接线	1		

0506 Lithium Battery Assembly(410Ah)

锂电池总成

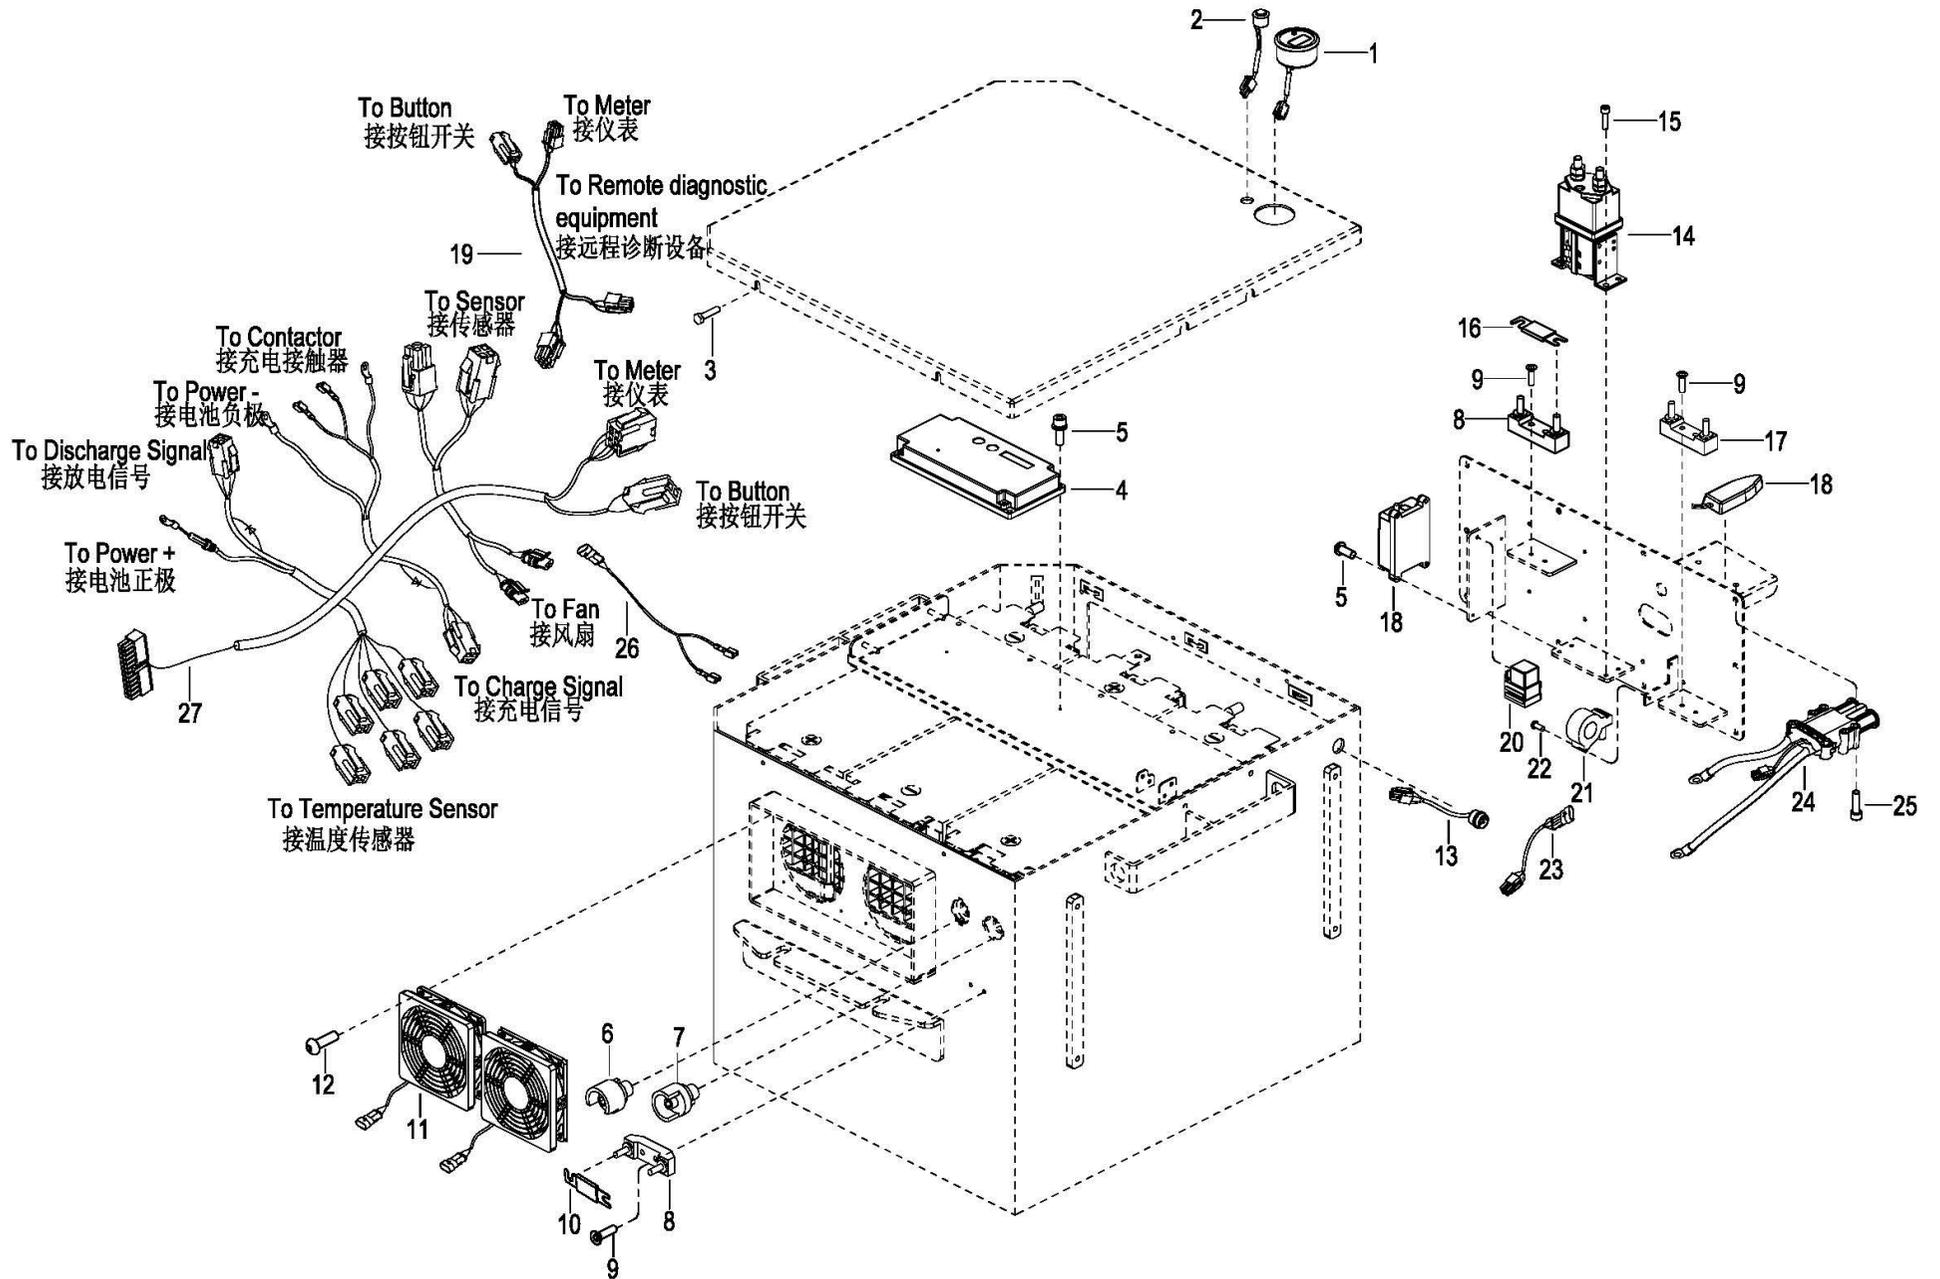

0506 Lithium Battery Assembly(410Ah)

锂电池总成


Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	LB00-200011-00	Coulombmeter 圆形显示仪表	1		
2	LB11-400020-0A	Button Harness 按钮线束	1		
3	301000000125	Bolt M6x12 六角法兰面螺栓	8		
4	LB00-200043-00	BMS 保护板	1		
5	202800000005	Screw M4×16 组合螺钉	8		
6	LB00-200231-00	Column Red 接线柱 红	1		
7	LB00-200232-00	Column Black 接线柱 黑	1		
8	3112-600400-00	Fuse Block 保险丝座	2		
9	302003000004	Screw M6×16 螺钉	6		
10	LB00-200157-00	Fuse 500A 保险丝	1		
11	LB11-400040-00	Fan 风扇	2		
12	302000000329	Screw M4x30 螺钉	8		
13	LB06-400012-1D	Communication line 内部通讯连接线	1		
14	LB00-200005-00	Contactora 接触器	1		
15	202800000001	Screw M6×12 组合螺钉	4		
16	LB00-200157-00	Fuse 500A 保险丝	1		
17	LB00-200058-00	Terminal 单住头底座	1		
18	LB00-200262-00	Remote Diagnostic Client 远程诊断客户端	1		For Overseas
18	LB00-200238-00-01	Remote Diagnostic Client 远程诊断客户端	1		For China
19	LB23-400020-00	Button Harness 远程仪表按钮线束	1		
20	3525-684000-10	Relay 继电器	1		
21	LB00-200042-00	Sensor 进口霍尔传感器	1		
22	302001000008	Screw M4x25 螺钉	2		
23	LB23-400014-0A	Sensor harness 双路霍尔传感器线束	1		
24	LB78-400085-00	Battery Cable Assembly 电瓶电缆	1		
25	302000000038	Screw M6×45 螺钉	4		
26	LB78-400057-00	Fan control line 风扇控制线	1		

27	LB30-400008-1H	Main Wire Harness	锂电池主线束	1		

6000
Hydraulic System
液压系统

0601 Hydraulic System I

液压管路 I

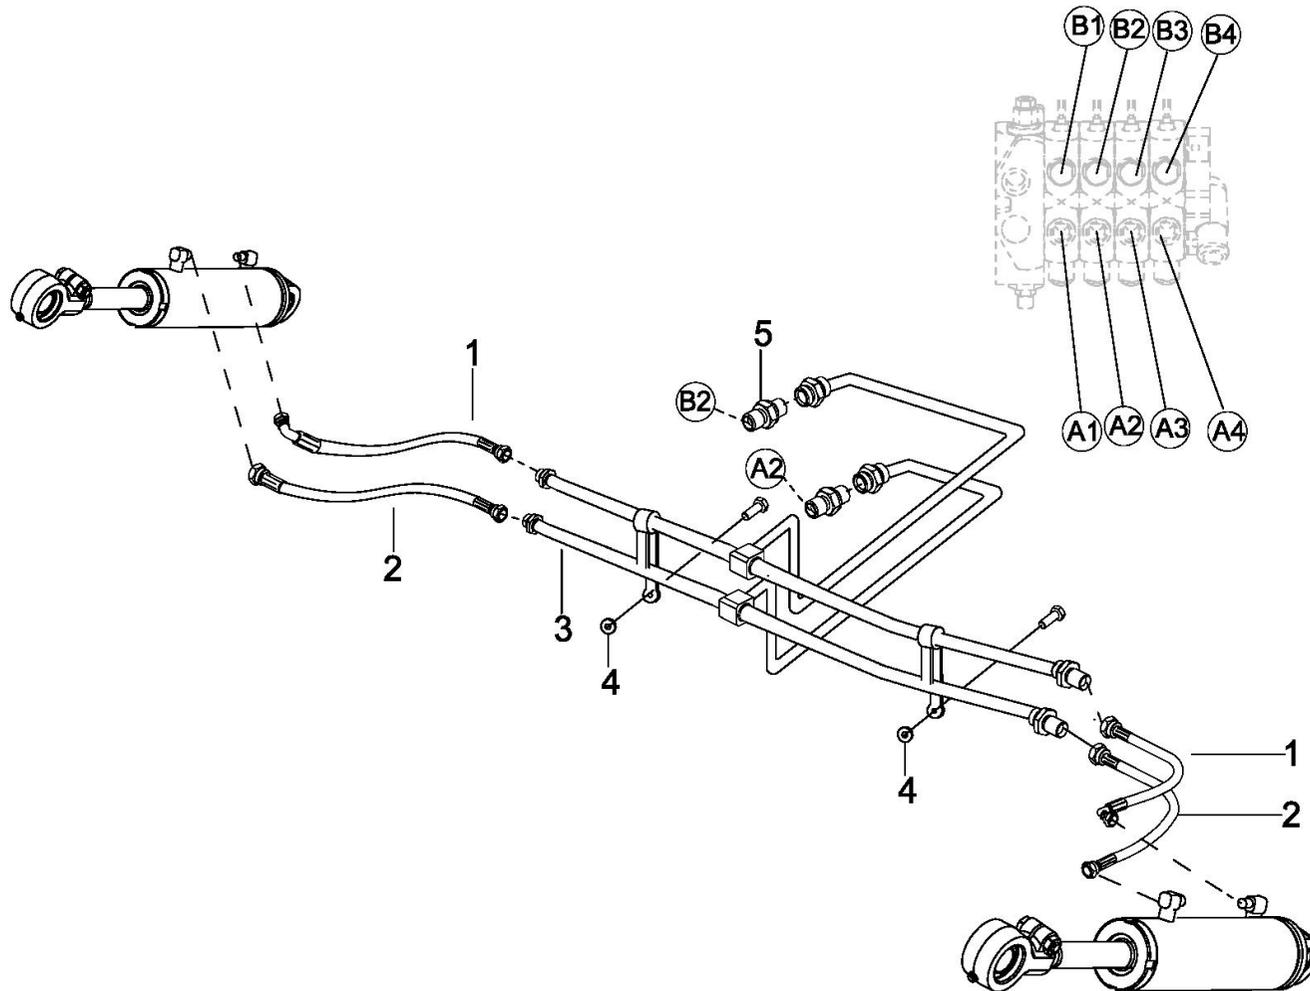


0601 Hydraulic System I

液压管路 I

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	3127-721000-00	Hose 前倾油管	2		
2	7830-710011-S0	Rubber hose assembly 倾斜缸高压胶管总成	2		
3	7331-710100-00	Steel pipe assembly 倾斜缸钢管总成	1		
4	7331-500015-00	Bushing 衬套	2		
5	2701-201600-00	Connector 接头体	2		

0602 Hydraulic System I (Serial Number up to -2301800075)

液压管路 II

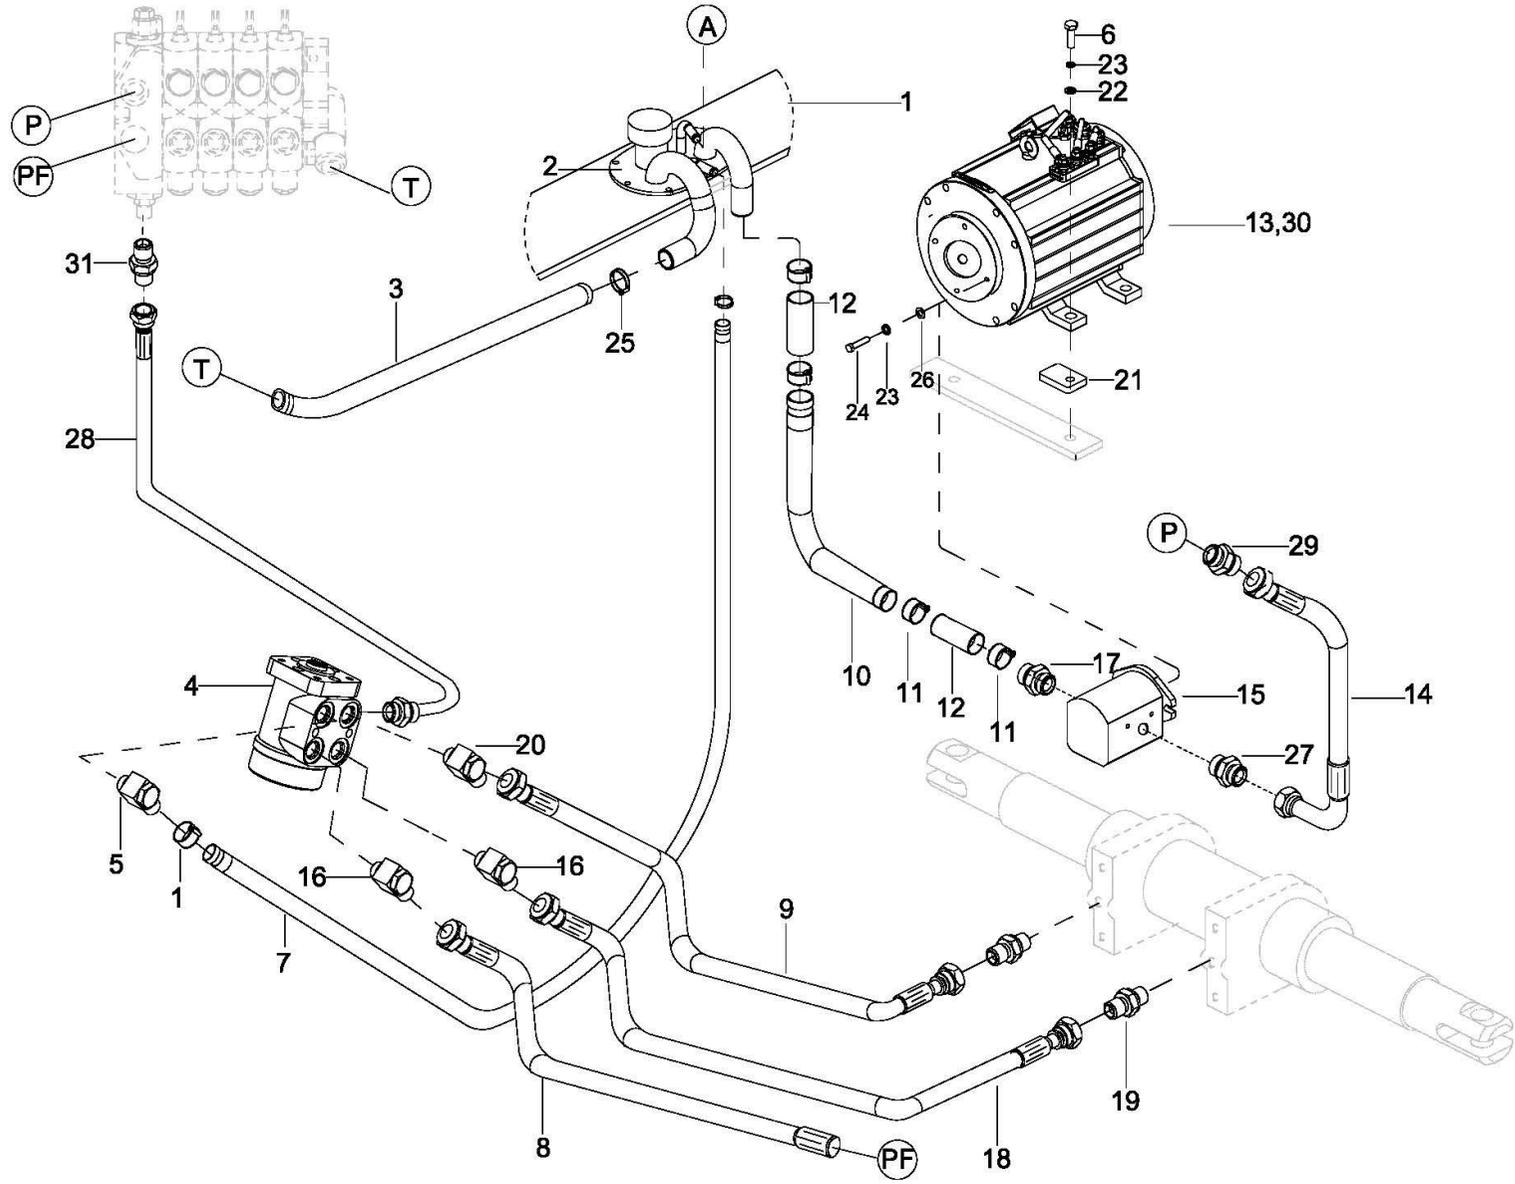

0602 Hydraulic System II (Serial Number up to -2301800075)


液压管路 II

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7500-190019-00-00	Clip $\varnothing 23$ 双钢丝卡箍	2		
2	See0603	Hydraulic tank 油箱	1		
3	7331-710010-00	Hose 多路阀回油管	1		
4	3132-710010-00	Connector 接头	1		
5	7331-700004-00	Stopper 接头体	1		
6	301004000059	Bolt M10x40 螺栓	4		
7	3715-720000-00	Redirector Return Hose 转向器回油管	1		
8	7331-710054-00	Hose, Redirector to Steering 转向器到多路阀	1		
9	3127-722000-00	Hose 转向桥油管一	1		
10	3127-700001-00	Oil suction pipe 吸油钢管	1	-2301800075	
11	0000-000471-00	Clip $\varnothing 32-40$ 双钢丝卡箍	5		
12	3111-500002-B0	Hose 橡胶管	2	-2301800075	
13	3132-660000-10	Pump Motor 泵电机	1	-2301800075	
14	3701-621000-00	Hose 泵出油管	1		
15	3815-750000-00	Gear Pump 齿轮泵	1		
16	7331-700005-00	Stopper 接头体	2		
17	2713-243200-00	Connector M24x1.5- $\varnothing 32$ 直通接头	1		
18	3127-723000-00	Hose, Redirector to Steering 转向桥油管二	1		
19	2701-161600-00	Connector 接头体	2		
20	7331-700003-00	Stopper M20-M16 接头体	1		
21	3218-600006-00	Shock Absorber 减震垫	4		
22	304000000119	Flat washer $\varnothing 10$ 平垫	4		
23	304000000053	Lock washer $\varnothing 10$ 弹垫	8		
24	301002000028	Bolt M10x30 螺栓	4		
25	202800000025	Clip $\varnothing 44$ 双钢丝卡箍	2		

25		202800000025	Clip ø44	双钢丝卡箍	1		
26		304000000035	Flat washer ø10	平垫	4		
27	01	2701-222090-A0	Connector M22×1.5-M20×1.5	直通接头	1		Superseded by#2701-222000-00,For EP20210317
	02	2701-222000-00	Connector M22*1.5-M20*1.5	直通接头	1		
28		3132-730300-00	Hose	LS 管	1		
29	01	7830-100100-20	Connector	直角接头总成	1		Superseded by#2701-222090-A0,For EP20210317
	02	2701-222090-A0	Connector M22×1.5-M20×1.5	直通接头	1		
30		3132-66001X-10	Encoder	编码器	1		-2301800075

060201 Hydraulic System II (Serial Number from 2301800076-)

液压管路 II

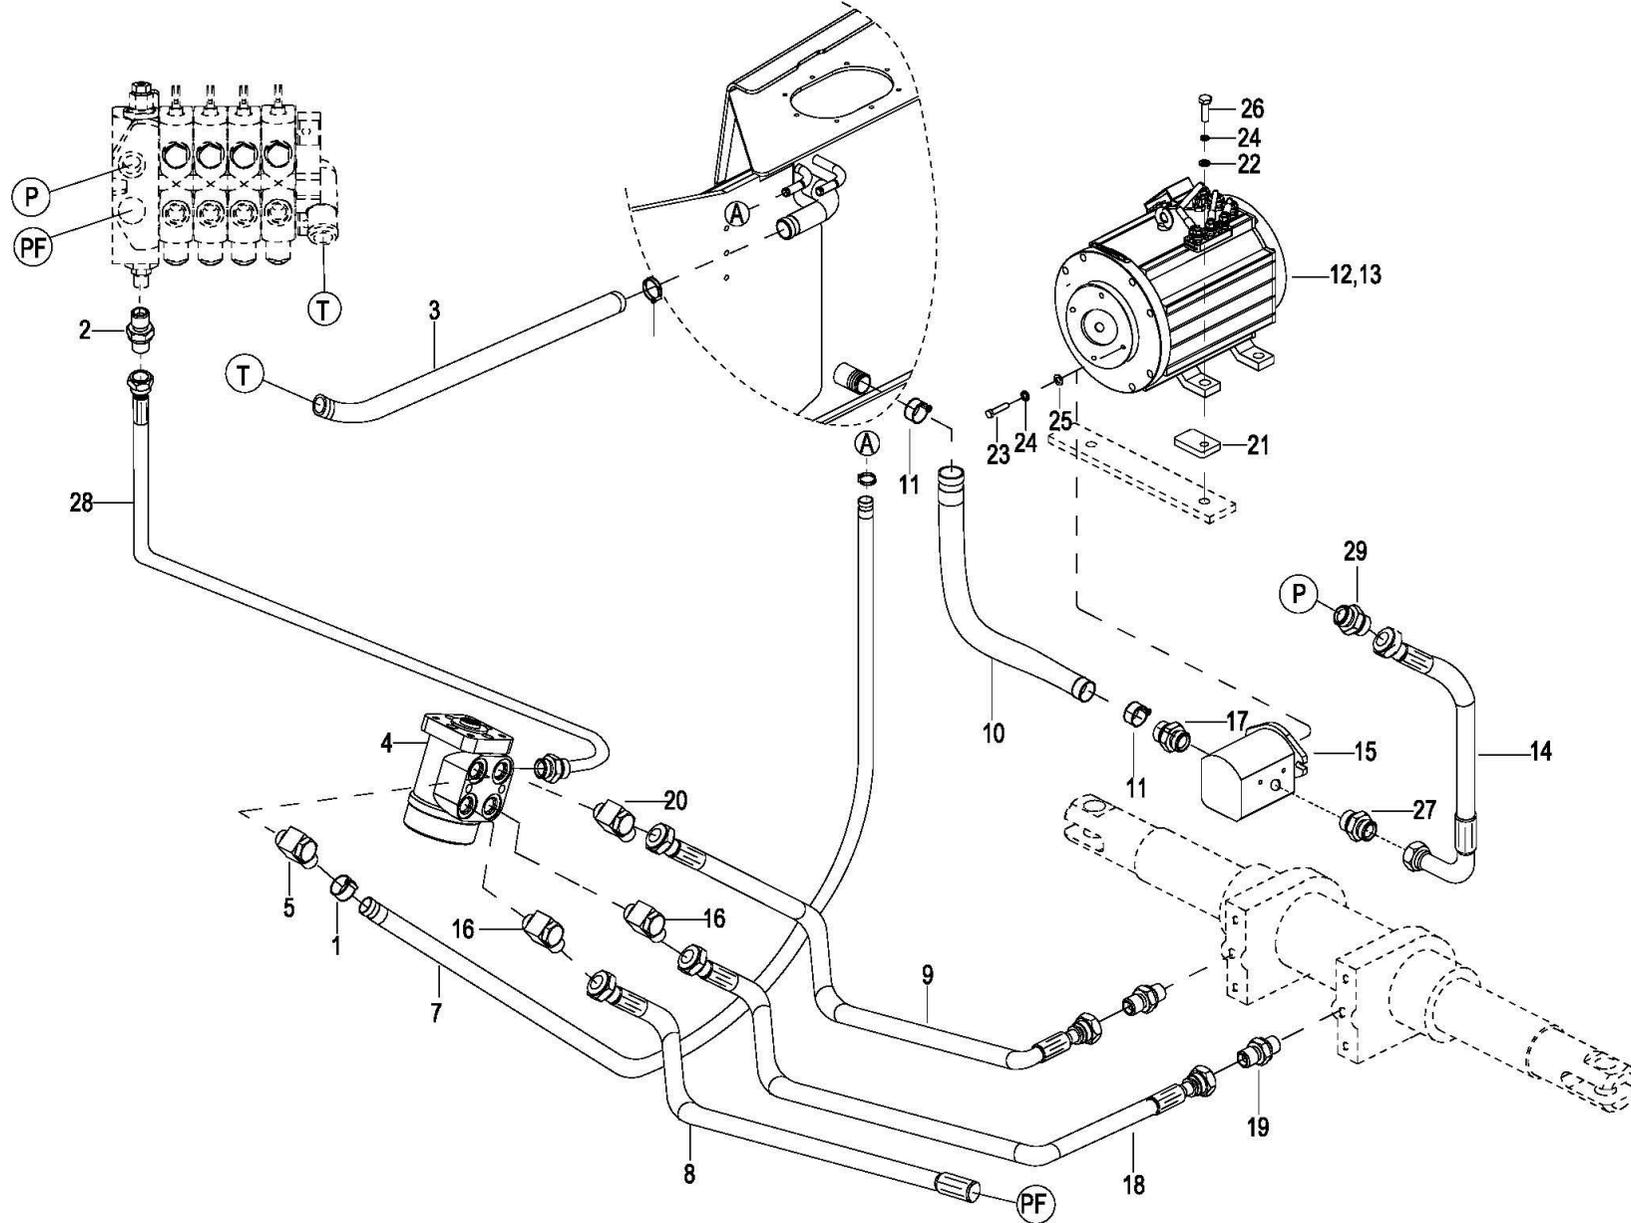

0602 Hydraulic System II (Serial Number from 2301800076-)


液压管路II

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7500-190019-00-00	Clip ø23 双钢丝卡箍	2		
2	3132-710010-00	Connector 接头	1		
3	7331-710010-00	Hose 多路阀回油管	1		
4	01 3132-730000-00	Steering unit 转向器	1	-2321800621	EP20230714-01
	02 3623-760000-00	Steering unit 转向器	1	2321800622-	BGD-23-002532,Interchangeable
5	7331-700004-00	Stopper 接头体	1		
6	202800000025	Clip ø44 双钢丝卡箍	1		
7	3715-720000-00	Redirector Return Hose 转向器回油管	1		
8	7331-710054-00	Hose,Redirector to Steering 转向器到多路阀油管	1		
9	3127-722000-00	Hose 转向桥油管一	1		
10	3132-700002-0B	Oil suction pipe 吸油管	1	2301800076-	BGD-21-002289
11	202800000025	Clip 双钢丝卡箍	5		
12	3132-650000-20	Pump Motor 泵电机	1	2301800076-	BGD-21-002289
12	3132-660000-10	Pump Motor 泵电机	1	2301800076-	For China
13	3132-65001X-20	Encoder 编码器	1	2301800076-	BGD-21-002289
13	3132-66001X-10	Encoder 编码器	1	2301800076-	For China, 3132-660000-10 Motor
14	3701-621000-00	Hose 泵出油管	1		
15	3815-750000-00	Gear Pump 齿轮泵	1		
16	7331-700005-00	Stopper 接头体	2		
17	2713-243200-00	Connector M24×1.5-ø32 直通接头	1		
18	3127-723000-00	Hose,Redirector to Steering 转向桥油管二	1		
19	2701-161600-00	Connector 接头体	2		
20	7331-700003-00	StopperM20-M16 接头体	1		
21	3218-600006-00	Shock Absorber 减震垫	4		
22	304000000119	Flat washer ø10 平垫	4		

23	301002000028	Bolt M10x30	螺栓	4		
24	304000000053	Lock washer ø10	弹垫	8		
25	304000000035	Flat washer ø10	平垫	4		
26	301004000059	Bolt M10x40	螺栓	4		
27	2701-222000-00	Connector M22*1.5-M20*1.5	直通接头	1		
28	3132-730300-00	Hose	LS 管	1		
29	2701-222090-A0	Connector M22×1.5-M20×1.5	直通接头	1		

0603 Hydraulic oil (Serial Number up to -2301800075)

油箱

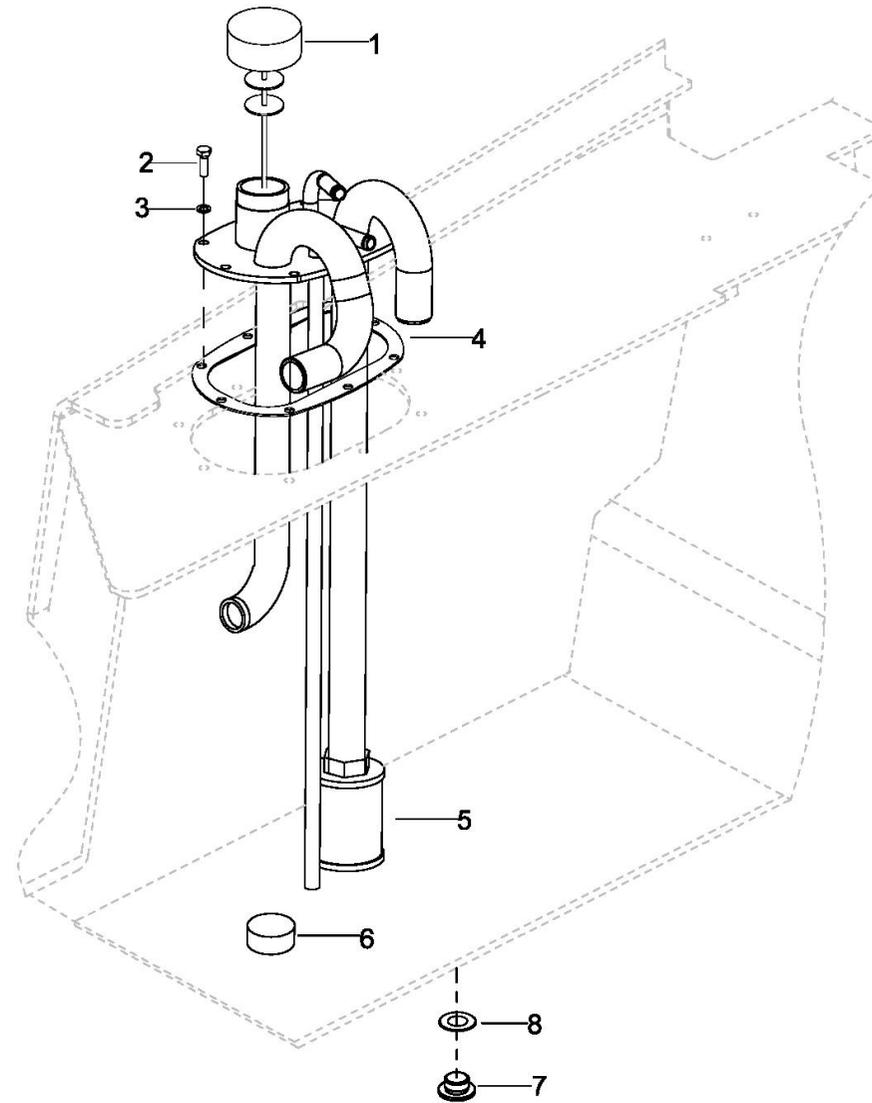


0603 Hydraulic oil (Serial Number up to -2301800075)

油箱

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7331-580000-00	Gas cover 加油盖	1	-2301800075	
2	301004000022	Bolt M8x1*20 螺栓	8	-2301800075	
3	7331-710051-00	Casket 密封垫	1	-2301800075	
4	306000000137	Lockwasher ø8 组合密封垫圈	8	-2301800075	
5	3218-110008-00	Oil Filter 滤油器	1	-2301800075	
6	3218-110010-00	Magnet 磁铁	1	-2301800075	
7	3218-110001-00	Plug Drain M18x1.5 放油螺塞	1	-2301800075	
8	306001000003	Washer ø18 垫圈	1	-2301800075	

060301 Hydraulic oil (Serial Number from 2301800076-)

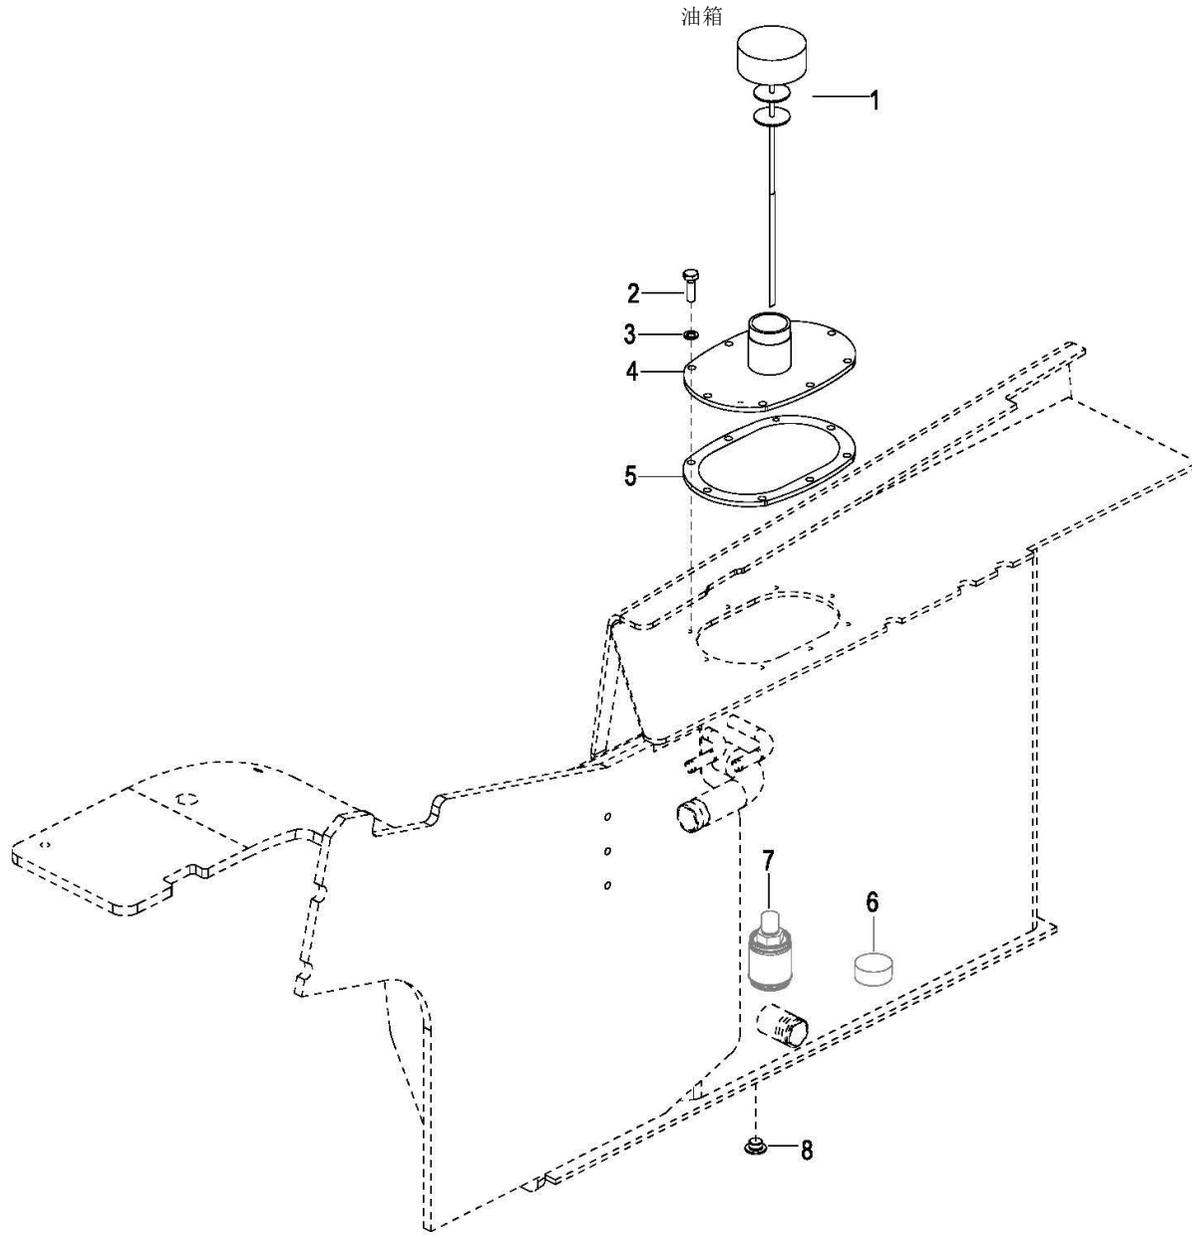


060301 Hydraulic oil (Serial Number from 2301800076-)

油箱

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	7331-710007-00	Hydraulic oil filler cap assembly 液压加油盖总成	1	2301800076-	
2	7331-710051-00	Casket 密封垫	1	2301800076-	
3	301002000014	Bolt M8x20 螺栓	8	2301800076-	
4	306000000137	seal washer ø8 密封垫圈	8	2301800076-	
5	3132-720000-0B	Oil Tank cover 油箱盖焊件	1	2301800076-	
6	7330-500004-00	Magnet 磁铁	1	2301800076-	
7	3218-110008-00	Oil Filter 滤油器	1	2301800076-	
8	3218-110001-00	Plug 放油螺塞	1	2301800076-	

9000
Addendum
附录

0901Charger
充电器

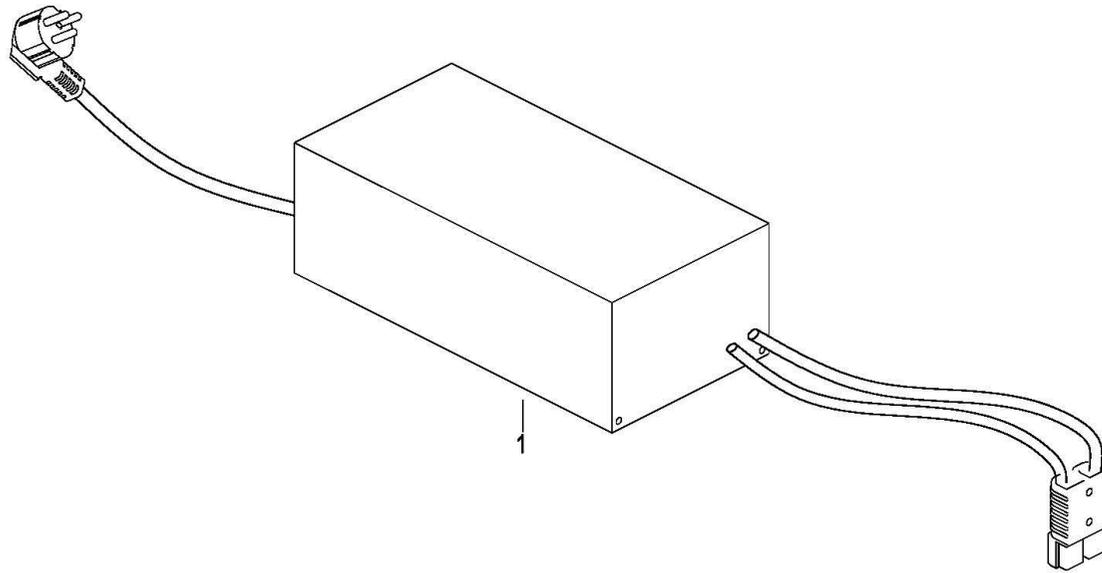

0901 Charger

充电器

Index	Part No.	Part Name	No.	Applied Date	Remark
1	3127-670001-00-00	Charger 充电器	1		80V/130A, External, three-phase, 380V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-00-01	Charger 充电器	1		80V/130A, External, three-phase, 415V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-00-02	Charger 充电器	1		80V/130A, External, three-phase, 440V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-00-03	Charger 充电器	1		80V/130A, External, three-phase, 400V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-00-04	Charger 充电器	1		80V/130A, External, three-phase, 415V/50-60HZ/REMA320A; For AUS;
1	3127-670001-00-05	Charger 充电器	1		80V/130A, External, three-phase, 380V/50-60HZ/REMA320A; For USA;
1	3127-670001-00-06	Charger 充电器	1		80V/130A, External, three-phase, 460V/50-60HZ/REMA320A; For USA;
1	3127-670001-03-00	Charger 充电器	1		80V/200A, External, three-phase, 415V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-03-01	Charger 充电器	1		80V/200A, External, three-phase, 380V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-03-02	Charger 充电器	1		80V/200A, External, three-phase, 380V/50-60HZ/REMA320A; For USA;
1	3127-670001-04-00	Charger 充电器	1		80V/65A, External, three-phase, 415V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-04-01	Charger 充电器	1		80V/65A, External, three-phase, 400V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-04-02	Charger 充电器	1		80V/65A, External, three-phase, 380V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-04-03	Charger 充电器	1		80V/65A, External, three-phase, 415V/50-60HZ/REMA320A; For AUS;
1	3127-670001-04-04	Charger 充电器	1		80V/65A, External, three-phase, 380V/50-60HZ/REMA320A; For USA;
1	3127-670001-04-05	Charger 充电器	1		80V/65A, External, three-phase, 480V/50-60HZ/REMA320A; For USA;
1	3127-670001-05-00	Charger 充电器	1		80V/35A, External, single-phase, 220V/50-60HZ/REMA320A; Industrial Plug;
1	3127-670001-05-01	Charger 充电器	1		80V/35A, External, single-phase, 220V/50-60HZ/REMA320A; For China;
1	3127-670001-05-02	Charger 充电器	1		80V/35A, External, single-phase, 220V/50-60HZ/REMA320A; For EUR;
1	3127-670001-06-00	Charger 充电器	1		80V/200A, External, three-phase, 480V/50HZ/REMA320A; For USA;
1	3127-670001-08-00	Charger 充电器	1		80V/100A, External, three-phase, 220V/60HZ/REMA320A; For USA;
1	3127-670001-12-00	Charger 充电器	1		80V/65A, External, three-phase, 380V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-12-01	Charger 充电器	1		80V/65A, External, three-phase, 400V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-12-02	Charger 充电器	1		80V/65A, External, three-phase, 415V/50-60HZ/REMA320A; Industrial Plug
1	3127-670001-12-03	Charger 充电器	1		80V/65A, External, three-phase, 415V/50-60HZ/REMA320A; For AUS;
1	3127-670001-12-04	Charger 充电器	1		80V/65A, External, three-phase, 380V/50-60HZ/REMA320A; For USA;
1	3127-670001-13-00	Charger 充电器	1		80V/60A, Built-in, three-phase, 380V/50HZ/OT16-10 *2; Industrial Plug

1		3127-670001-04-06	Charger 充电器	1		80V/65A, External, three-phase, 440V/50-60HZ/REMA320A; For USA;
1		3127-111032-00	Charger 充电器	1		80V/25A、, single-phase, /220V/50HZ/320A, REMA320A; For China;

9000

Addendum

附录

0901 Label 标贴

Index	Part No.	Part Name	No.	Applied Date	Remark
1	508000002310	LIION Label 锂电标贴	2		
2	508000000134	Logo label 标贴	2		
3	508000000124	Charging indicator Label 充电指示标贴	1		
4	508000002086	Label 电叉整版标贴	1		
5	508000000048	Logo label 标贴	1		
6	508000000083	Label 叉车门架安全标贴	1		
7	508000004312	Label 2.5吨位标贴	1		
8	508000001960	Nameplate 铭牌	1		
9	508000005092	No spraying label 静止喷淋标贴	1		
10	508000001895	Load nameplate 载荷铭牌	1		
11	508000005232	Label 翻阅手册+安全头盔整版标	1		
12	508000004694	Logo label 标贴	1		